ME-5685

B 2/3/6

WINKFIELD FIELD STATION
27 FEB 1970
No.

R141

EXACT

ELECTRONICS, INC.

INSTRUCTION MANUAL

MODELS 500A, 503A, 504A, and 505A

FUNCTION GENERATORS

R96

WINKFIELD FIELD STATION
27 FEB 1970
NO.

INSTRUCTION MANUAL

MODELS 500A, 503A, 504A, and 505A

FUNCTION GENERATORS

EXACT ELECTRONICS INC.
455 S.E. 2nd Avenue, Hillsboro, Oregon 97123 • TEL: (503) 648-6661

Copyright @ 1962 by EXACT ELECTRONICS, INC., Hillsboro, Oregon. Printed in the U.S.A. All rights reserved. Contents of this publication may not be reproduced in any form without permission of the copyright owner.

IF YOUR INSTRUMENT DOES NOT OPERATE

PLEASE

1. Check operating procedure in manual for proper setup.

2. Check fuse and power supply voltages.

3. Call your Exact representative or factory. Instruments returned to the factory will be accepted only if they are sent freight prepaid, unless Exact or factory representative has authorized otherwise.

CLAIM FOR DAMAGED SHIPMENT

The instrument should be inspected as soon as received. If damage has occurred, a claim should be made with the carrier. The claim agent should receive a complete report of damage and a copy sent to Exact. After receiving this report, Exact will advise you of the dispostion of the instrument and arrange for its repair or replacement.

WARRANTY

Exact warrants its instruments to be free from defects in material and workmanship under normal use for a period of twelve months from the original date of shipment. Exact's obligation is limited to repair or replacement.

All repairs and replacements made under this warranty are f.o.b. Exact's factory or designated service depot unless otherwise authorized by Exact. This warranty is made on condition that prompt notice of defect is given to Exact, in writing, within the warranty period and that Exact shall have the sole right to determine whether in fact a defect exists.

This warranty does not apply to any instrument which has been repaired or altered by other than Exact's own service representative so as, in Exact's judgment, to adversely affect it, nor which has been subject to misuse, negligence or accident or which has been operated contrary to sound practice or operating instructions.

C O N T E N T S

SECTION 1	INDEX
SECTION 2	CHARACTERISTICS SPECIFICATIONS
SECTION 3	FRONT PANEL CONTROLS OPERATING INSTRUCTIONS FIRST TIME OPERATION
SECTION 4	CIRCUIT DESCRIPTION
SECTION 5	CALIBRATION
SECTION 6	PARTS LIST
SECTION 7	CIRCUIT DIAGRAMS
SECTION 8	REPRESENTATIVES DISTRIBUTORS
SECTION 9	ADDENDA

1.0.0 . . . . . INDEX

2.0.0 CHARACTERISTICS, SPECIFICATIONS

3.0.0 . . . . . OPERATING INSTRUCTIONS

3.1.0 FRONT PANEL FAMILIARITY

3.2.0 FIRST TIME OPERATION

3.2.1 Control Settings
3.2.2 Procedure for Producing Bi-Polar Square
3.2.3 Procedure for Producing Positive Square
3.2.4 Procedure for Producing Negative Square
3.2.5 Procedure for Producing Bi-Polar Square Pulses
3.2.6 Procedure for Producing Positive Square Pulses
3.2.7 Procedure for Producing Negative Square Pulses
3.2.8 Procedure for Producing Sine Waveform
3.2.9 Procedure for Producing Triangle Waveform
3.2.10 Procedure for Producing Ramp Waveform
3.2.11 Procedure for Producing Reverse Ramp Waveform
3.2.12 Procedure for Push-Pull Operation
3.2.13 VCF Operation (Models 503A and 505A only)
3.2.14 Gating, Triggering (single shot) Models 504A and 505A

4.0.0 . . . . . CIRCUIT DESCRIPTION AND THEORY

4.1.0 CIRCUIT DESCRIPTION

4.1.1 Block Diagram
4.1.2 Power Supply
4.1.3 Integrator
4.1.4 X10 Amp
4.1.5 Level Detector
4.1.6 Timing and Feedback Circuitry
4.1.7 Sine Shaper
4.1.8 Amp 1 (non inverting)
4.1.9 Amp 2 (inverting)
4.1.10 Square Amplifier
4.1.11 VCF Amplifier
4.1.12 Lockout Amplifier

4.2.0 CIRCUIT THEORY OF OPERATION

4.2.1 Power Supply
4.2.2 Integrator
4.2.3 X10 Amp
4.2.4 Level Detector
4.2.5 Sine Shaper
4.2.6 Square Amplifier
4.2.7 Square Selector Switch S810
4.2.8 Amp 1 (non inverting)
4.2.9 Amp 2 (inverting)
4.2.10 VCF Amp (Models 503A and 505A only)
4.2.11 Lockout Amplifier

1.0.0 . . . . . INDEX

5.0.0 . . . . . CALIBRATION

5.0.1 Adjustments and Test Points, 500A,503A,504A, 505A

5.0.2 Adjustments and Test Points, Lockout Amp and VCF Amp

5.1.0 . . . . . FAILURE TO OPERATE

5.2.0 . . . . . FAILURE TO MEET FACTORY SPECIFICATIONS

5.3.0 . . . . . CALIBRATION PROCEDURE

5.3.1 Power Supply
5.3.2 Integrator Balance
5.3.3 +16V Calibration
5.3.4 -16V Calibration
5.3.5 Level Detector Balance
5.3.6 VCF Amp (Models 503A and 505A only)
5.3.7 Timing
5.3.8 VCF Mode Calibration (Models 503A and 505A only)
5.3.9 Symmetry Control Check
5.3.10 Offset Control Check
5.3.11 Lockout Calibration (Models 504A and 505A only)
5.3.12 Trigger Out Check
5.3.13 Sine Shaper Calibration
5.3.14 Square Amp Check
5.3.15 Amp 1 Calibration
5.3.16 Amp 2 Calibration

6.0.0 . . . . . PARTS LIST

7.0.0 . . . . . CIRCUIT DIAGRAMS

7.1.0 Block Diagram
7.1.1 P.C. Assembly, Main Board
7.1.2 P.C. Assembly, VCF Board
7.1.3 P.C. Assembly, Gate Lockout
7.2.0 Power Supply
7.3.0 Integrator
7.4.0 X10 Amplifier
7.5.0 Level Detector
7.6.0 VCF Amplifier
7.7.0 Lockout Amplifier
7.8.0 Sine Shaper
7.9.0 Amplifier 2
7.10.0 Square Amplifier
7.11.0 Amplifier 1
7.12.0 Timing and Feedback Circuitry

8.0.0 . . . . . REPRESENTATIVES DISTRIBUTORS

9.0.0 . . . . . ADDENDA

SECTION 2 SPECIFICATIONS

EXACT® electronics, inc.

Function Generators • Waveform Synthesizers

MODELS 500,503,504 and 505
FUNCTION GENERATORS

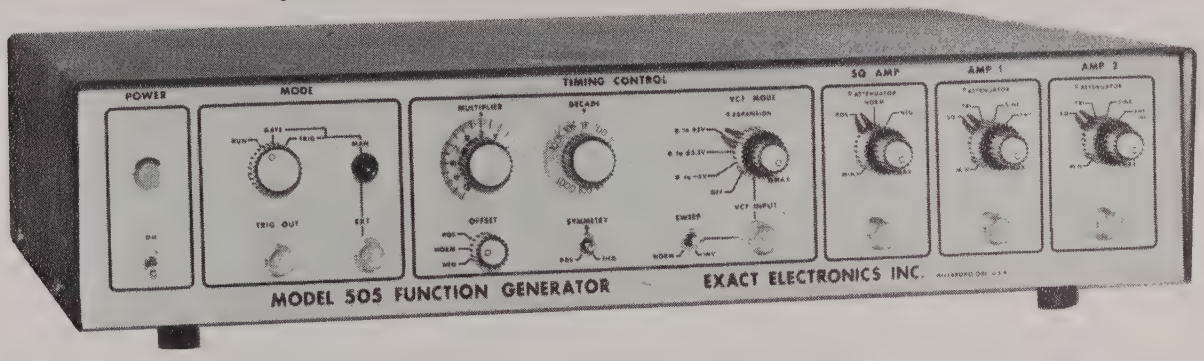

500, 503, 504 and 505	Take these signals:
500, 503, 504 and 505	push-pull them:
504 and 505	single-shot or gate them:
503 and 505	add VCF at 50:1

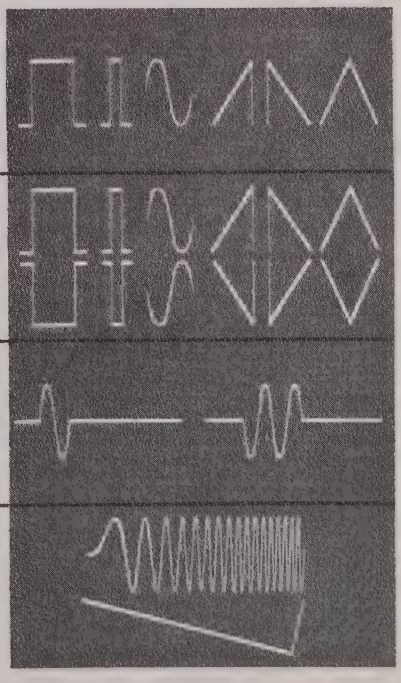

EXACT ELECTRONICS INC.
455 S E 2nd Avenue, Hillsboro, Oregon 97123 • TEL: (503) 648-6661

- **UNITIZED CONSTRUCTION**
- **INTEGRATED CIRCUITS**
- **25-VOLT OUTPUTS**
- **THREE VARIABLE OUTPUT AMPLIFIERS**
- **PUSH-PULL ANY WAVEFORM**
- **VCF 50:1, USABLE 100:1**
- **FIXED OFFSETS, POS OR NEG FROM GROUND**
- **±4V ADJUSTABLE D.C. OFFSET**
- **GATING, TRIGGERING (SINGLE SHOT)**
- **3½ INCHES THIN**
- **BRUSHED ALUMINUM BLACK ANODIZED CABINETS**
- **BRUSHED ALUMINUM CLEAR ANODIZED FRONT PANELS**

GENERAL

UNITIZED CONSTRUCTION and **INTEGRATED CIRCUITS** result in **LOW-PRICED RELIABILITY.** Like its lower cost forerunners (501 and 502), all components are mounted on a single printed circuit board, which results in a very rugged instrument. **INTEGRATED CIRCUITS** reduce current drain, heat generation, improve overall performance and reliability.

APPLICATION

The Series 500 was designed to provide the functions of many different instruments such as square wave generator, sine wave oscillator, sweep generator, FM modulator, variable repetition rate pulse generator, ramp and raster generator, stimulation and simulation in medical research, control signals for aerospace and environmental test. In general, Exact function generators are ideally suited where signals from biological to radio frequencies are required.

FREQUENCY RANGE

From 0.0001Hz to 1MHz low frequency capability of 0.00001Hz with VCF function. When placing the OFFSET SWITCH to POS or NEG, the generator frequency doubles. In other words, the upper frequency range becomes **2MHz.** With this switch POS or NEG, Amp 1 and Amp 2 produce waveforms positive or negative-going from ground. The square wave will double in frequency but remain symmetrical about ground. Offset sine will appear as a full wave rectified waveform without filtering. (Useful in filter testing, see photo).

TRIPLE OUTPUT AMPLIFIERS

SQ AMP provides switch selected fast risetime bi-polar or pos/neg square waves from ground, and square pulses by use of SYM switch. Pulse width is fixed and equal to ramp falltime. Repetition rate is variable.

AMPLIFIER NO. 1 AND NO. 2 are similar. Each provides selection of sine, square, triangle or ramp and non-symmetrical square. Amp 1 is non-inverting, while Amp 2 is an inverting amplifier. The two amplifiers provide push-pull outputs automaticaly with individual amplitude controls. When Amp 2 is in Amp 1 Inv position, outputs are still push-pull, however now amplitudes of each can be controlled by Amp 1. Amp 2 amplitude adjust is now used for balance. This provides a very useful push-pull amplifier with single output amplitude control. When Amp 1 is in Amp 2 position, both amplifiers are in phase. Both feature fixed or variable D.C. offset capabilities.

VOLTAGE-CONTROLLED FREQUENCY

Models 503 and 505 offer a precise control of frequency by an external voltage. Sweeping ratio is 50:1 with a very linear voltage vs frequency curve, usable 100:1. A selector switch provides selection of input voltages depending on what is available. They are 0 to +5V, 0 to −5V and 0 to ±2½V. When used in conjunction with the Sweep switch, the user has a choice of sweeping up in frequency from 1/50th of dial setting or down in frequency from dial setting, or up and down about a center frequency in the ±2½V position. Center frequency is one-half dial setting. When using VCF on decade .0001, sweeping ratio is limited to 10:1. This gives the generator a low frequency capability of 0.00001Hz.

GATING AND TRIGGERING

Gating and triggering are standard on the 504 and the 505. In triggered mode, each input trigger pulse (or each time the manual trigger push-button is depressed) generates one complete cycle simultaneously at all outputs. In gated mode, all outputs are simultaneously generated while the input gate level is present, with automatic last cycle completion when the gate level is removed.

MODEL 503
0.0001Hz to 1MHz

FEATURES

Sine, Square, Triangle, Ramp and Pulse.
Voltage-Controlled frequency (50:1), Usable 100:
Fixed and adjustable offsets
Three simultaneous variable output amplifiers

MODEL 504 and 500
0.0001Hz to 1MHz

(Model 500 same as 504 less gating and triggering functions)

FEATURES

Sine, Square, Triangle, Ramp and Pulse.
Gating and Triggering (single shot)
Fixed and adjustable offsets
Three simultaneous variable output amplifiers

MODEL 505
0.0001Hz to 1MHz

FEATURES

Sine, Square, Triangle, Ramp and Pulse.
VCF to 50:1, Usable 100:1
Gating and Triggering (single shot)
Three simultaneous variable output amplifiers
Fixed and adjustable offsets

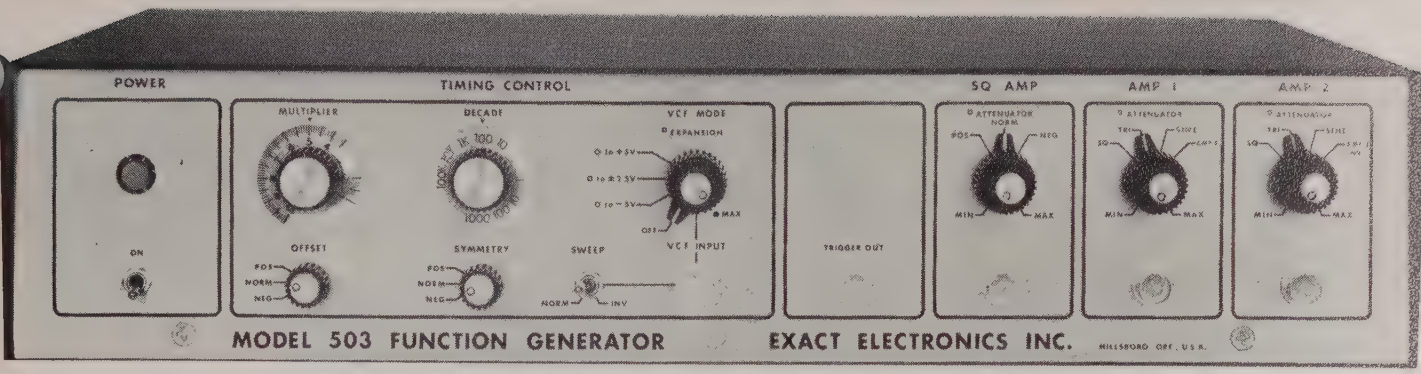
POWER
TIMING CONTROL
SQ AMP
AMP 1
AMP 2
MULTIPLIER
DECADE
VCF MODE
EXPANSION
OFFSET
SYMMETRY
SWEEP
VCF INPUT
TRIGGER OUT
ON
MODEL 503 FUNCTION GENERATOR
EXACT ELECTRONICS INC.

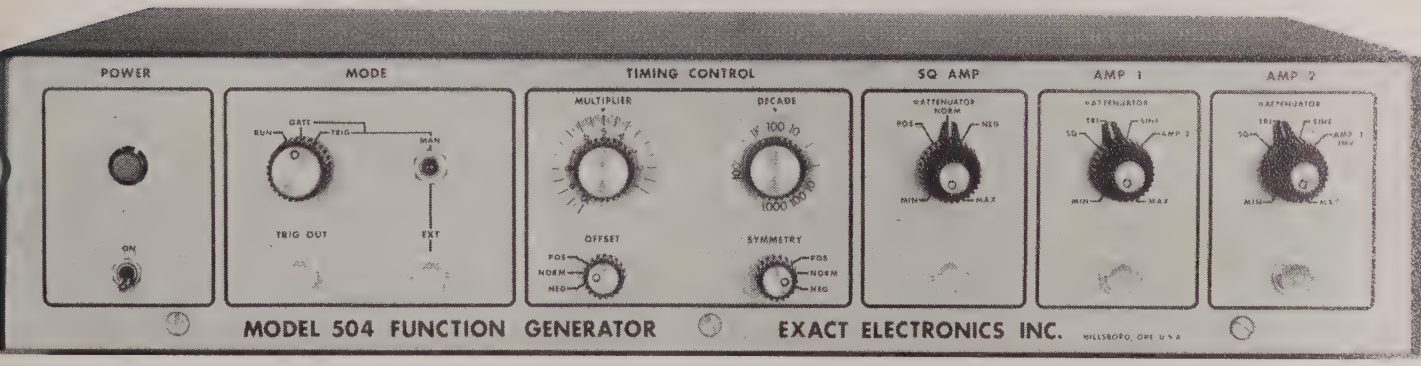
POWER
MODE
TIMING CONTROL
SQ AMP
AMP 1
AMP 2
MULTIPLIER
DECADE
OFFSET
SYMMETRY
TRIG OUT
EXT
ON
MODEL 504 FUNCTION GENERATOR
EXACT ELECTRONICS INC.

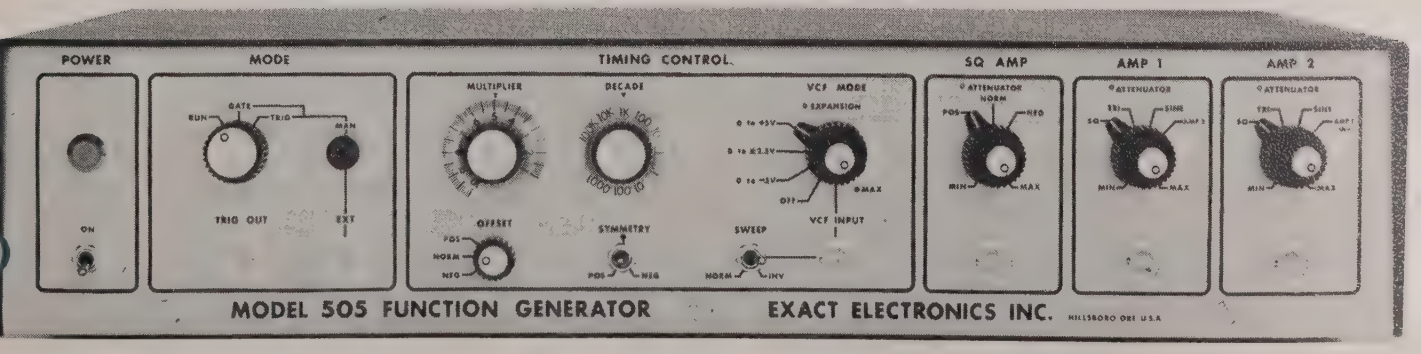
POWER
MODE
TIMING CONTROL
SQ AMP
AMP 1
AMP 2
MULTIPLIER
DECADE
VCF MODE
EXPANSION
OFFSET
SYMMETRY
SWEEP
VCF INPUT
TRIG OUT
EXT
ON
MODEL 505 FUNCTION GENERATOR
EXACT ELECTRONICS INC.

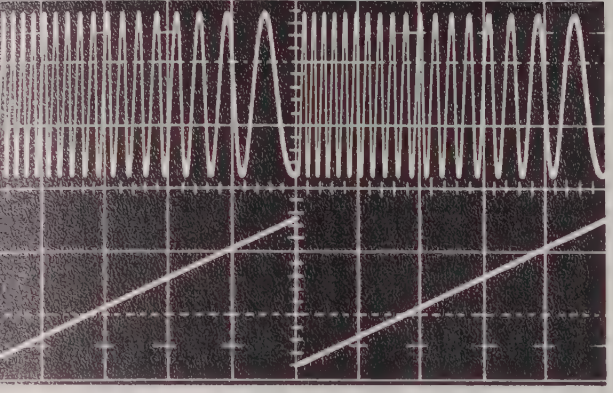

oltage controlled Frequency—sweeping range 50:1, usable 00:1. 503 and 505 only.

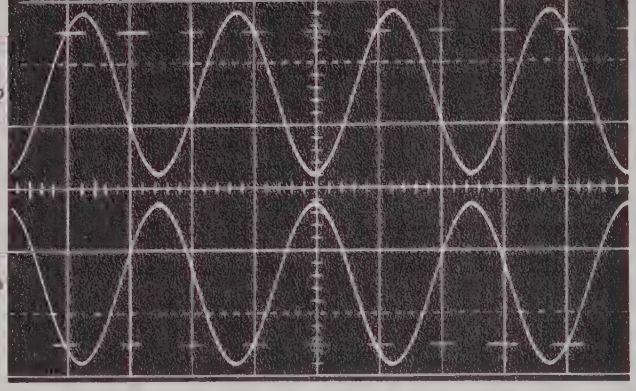

Photo showing 180° phase shift between Amp 1 and Amp 2. Useful for push-pull applications. Amplifiers have capability of in phase outputs also. All models.

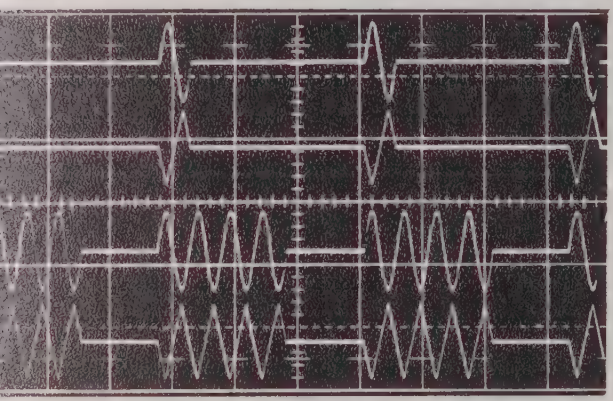

hoto showing Triggering (single shot) and gating. 504 and 05 only.

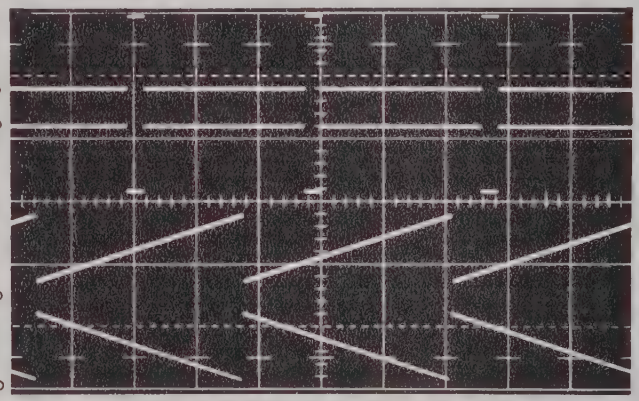

Photo showing 30 Nano. Sec. rise time sq. pulse with positive offset Forward and Reverse ramp. Ramp frequency excluding fall time is twice that of dial settings. All models.

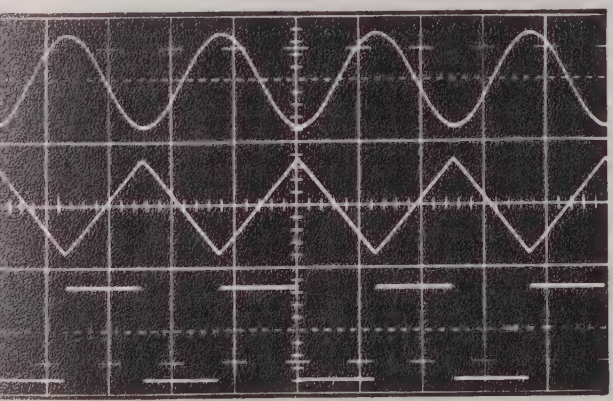

hoto showing phase relationship of square, triangle and ine. Scope: Tektronix 544 with 1A1 Plug-In. Generator requency 100KHz. All models.

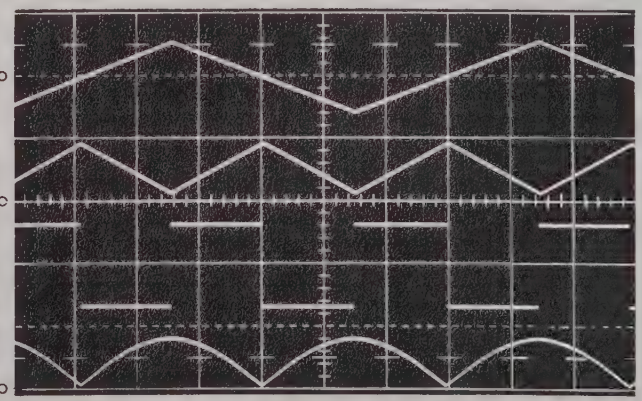

Photo showing symmetrical triangle (upper wave form) with positive offset triangle, square and sine. All models.

SECTION 3 OPERATION

UNITIZED CONSTRUCTION

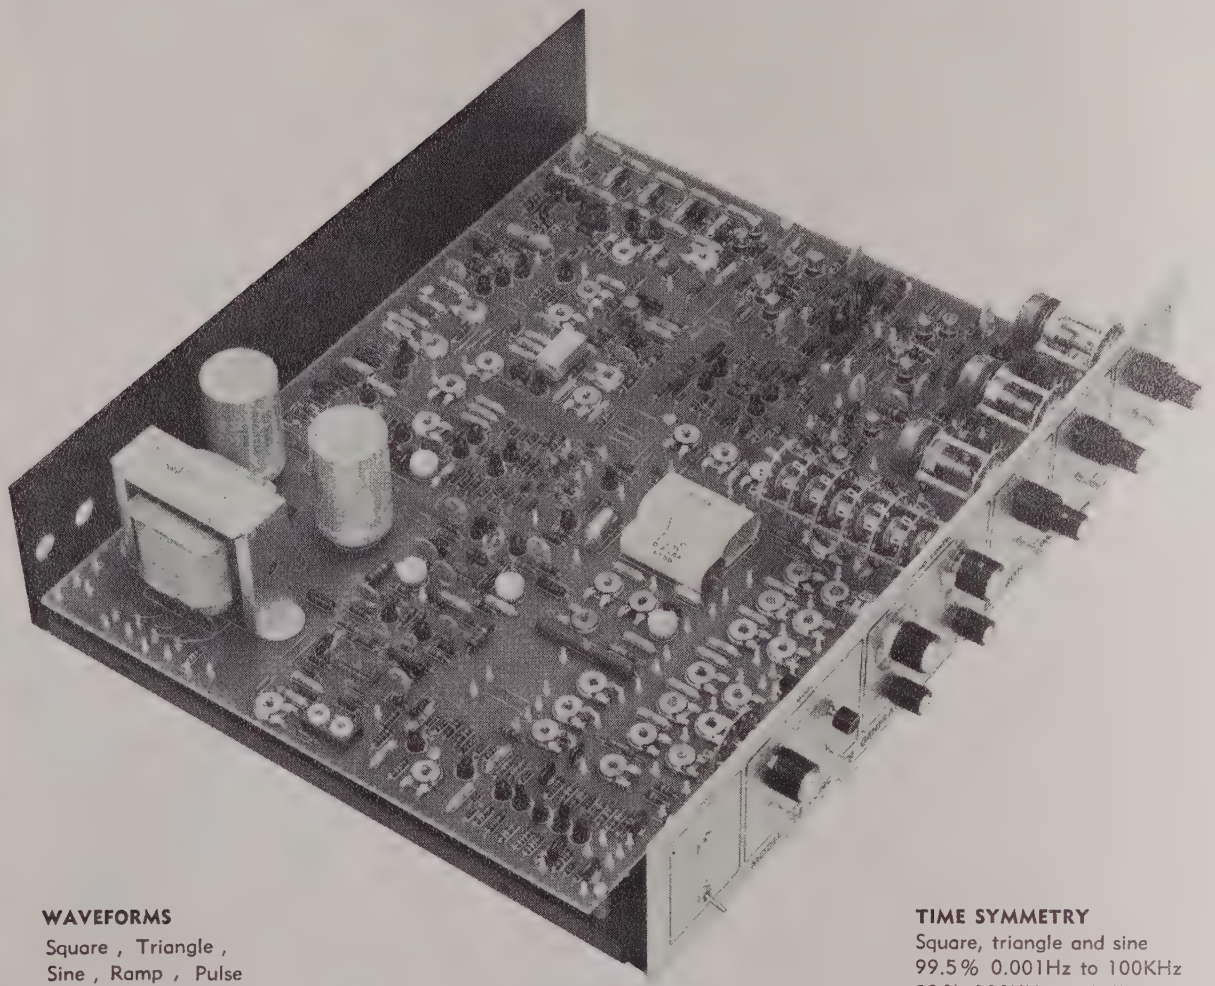

WAVEFORMS
Square , Triangle ,
Sine , Ramp , Pulse
and Sync Pulse .

SPECIFICATIONS

TIME SYMMETRY
Square, triangle and sine
99.5% 0.001Hz to 100KHz
99% 100KHz to 1MHz
95% .0001 Range

FREQUENCY RANGE
0.0001Hz to 1MHz in ten decade ranges. Usable to 2MHz with offset function.

NOTE: On Models 503 and 505 the VCF function will allow the generator to be swept ten times slower on decade 0.001 and 0.0001. This gives a low frequency capability of 0.00001Hz.

DIAL ACCURACY
±3% of dial reading, typically <±2% to 10KHz. Ramp frequency approximately twice dial setting.

FREQUENCY STABILITY
short term (10 min.) ±0.02%
long term (24 hrs.) ±0.25%

AMPLITUDE STABILITY
Short term (10 min) ±0.1% of maximum P-P amplitude
Long term (24 hrs.) ±0.35% of maximum P-P amplitude

D.C. REFERENCE STABILITY
Short term (10 min.) ±0.05% of maximum P-P amplitude
Long term (24 hrs.) ±0.2% of maximum P-P amplitude

AMPLITUDE SYMMETRY
Externally adjustable to zero Amp 1 and Amp 2

RAMP WAVEFORM
Falltime and duration **(for information only, not to be considered as a specification.)** Ramp usable to 10KHz. Duration of ramp waveform less falltime is equal to twice dial frequency. Ramp falltime is <10% with exception of decades 100, 1 and .1 which is <3%.

FREQUENCY RESPONSE
Amplitude change with frequency less than 0.1db 0.0001Hz to 100KHz and 0.5db 100KHz to 1MHz.

JITTER (cycle to cycle)
±0.02%

TRIANGLE LINEARITY
99% 0.0001Hz to 10KHz
95% 10 KHz to 1MHz

SQUARE WAVE RESPONSE
Deviation from flatness <1%
Rise/Fall times
Sq Amp <50nsec
Amp 1 <50nsec
Amp 2 <150nsec
Overshoot <5%, typically <2%

TRIGGER OUT
Differentiated square waveform
Amplitude (open circuit) ±1V peak

SPECIFICATIONS

OUTPUTS
Three selectable, continuously variable amplifiers.

SQUARE AMP
Square: >25V P-P into 600Ω
Positive Square: 0 to >+12.5V peak into 600Ω
Negative Square: 0 to > -12.5V peak into 600Ω
D.C. Reference 0V ±100mv

AMP 1
Sine: >25V P-P into 600Ω
Triangle: >25V P-P into 600Ω
Ramp: >25V P-P into 600Ω
Square: >25V P-P into 600Ω

Positive triangle, square and ramp
0 to >+12.5V peak into 600Ω
Negative triangle, square and ramp
0 to >−12.5V peak into 600Ω
Adjustable D.C. offset ±4V.

Amp 1 also has provision to select Amp 2 such that both amplifiers are in phase.

NOTE: Maximum peak voltage with combination of amplitude and offset is ±12.5V into 600Ω

NOTE: Fixed Pos/Neg offset waveform frequencies are approximately twice dial setting.

AMP 2
Same outputs and specifications as Amp 1 with 180° **phase shift.** Also will select Amp 1 Inverted such that Amp 1 attenuator will control amplitude of both amplifiers. Useful in push-pull operation.

NOTE: Each amplifier is short circuit proof and will drive 50 ohms at approximately one-fourth of specified voltage into 600 ohms.

GATE AND TRIGGER MODES (504, 505)
Gating (multiple cycle)
Input D.C. coupled
Manual or external threshold voltage of approximately +3.2V will turn on. Generator will free run as long as manual or external gate is applied.
Triggering (single cycle)
Input AC coupled
Manual or external trigger pulse of approximately +5.2V, with 100nsec risetime or better will generate one complete cycle for each manual or external pulse applied.

TEMPERATURE RANGE
Operating, −10°C to +60°C
Storage, −40°C to +80°C
All specifications listed are for 25°C ±5°C.

PHYSICAL CHARACTERISTICS
3½" high, 16¾" wide, 14¾" deep
Weight 11 lbs. net, 19 lbs. shipping
Anodized cabinets (black)
Brushed clear aluminum front panels
Black silk screening

SHOCK AND VIBRATION
All components are mounted on a one-piece P.C. board. Components are not mounted from sensitive switches. This results in a very rugged instrument that can withstand much greater shock and vibration than plug-in board type construction.

VOLTAGE-CONTROLLED FREQUENCY
Expansion range 50:1, usable to approximately 100:1
Sweep rate 75KHz
Inputs: 0 to +5V, 0 to −5V, 0 to ±2½V
Input impedance approximately 5KΩ
Linearity: (spec'd on 0 to +5V mode only
0.0001 to 1MHz +0 to −2% 1:1 to 20:1
0.0001 to 100 KHz +0 to −3% 1:1 to 50:1
100KHz to 1MHz +0 to −4% 1:1 to 50:1
% of absolute frequency not % of Max freq deviation as some function generator manufacturers use.

VCF LINEARITY CURVE

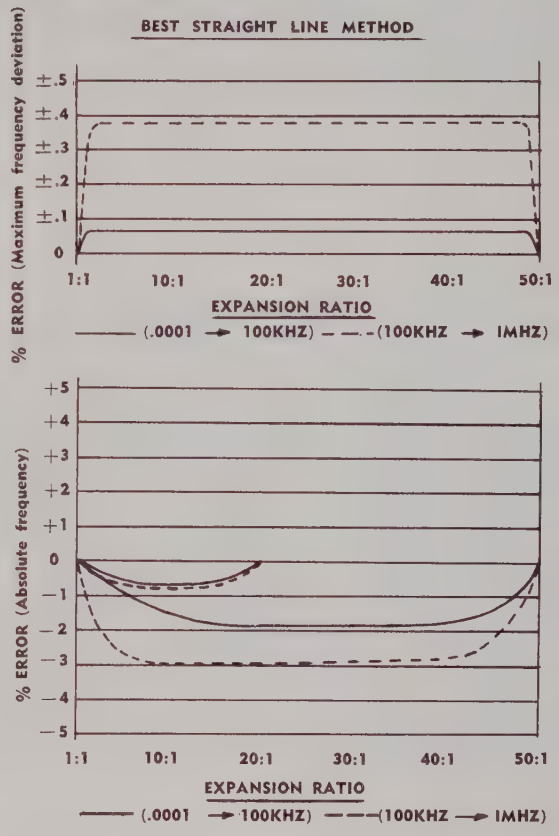

POWER REQUIREMENTS
Input voltage 115VAC ±10% or
230VAC ±10%
Frequency 50 to 400Hz
Power consumption 12 watts

PRICES (F.O.B. Hillsboro, Oregon)
500 available August 1968
503
504
505
Overseas prices approximately 5% higher.

OPTIONS
Rackmounting
Rear outputs (BNC type)
Special painted front panels (price to be negotiated)

NOTE:
All specifications apply 10% to maximum specified voltage amplitude settings.
Due to Exact's continuing policy of product improvement, all specifications and prices are subject to change without notice.

EXACT Electronics, Inc

EXACT ELECTRONICS INC.
455 S.E. 2nd Avenue, Hillsboro, Oregon 97123 • TEL. (503) 648-6661

30K-5/68 — Printed in U.S.A.

SECTION 3 OPERATION

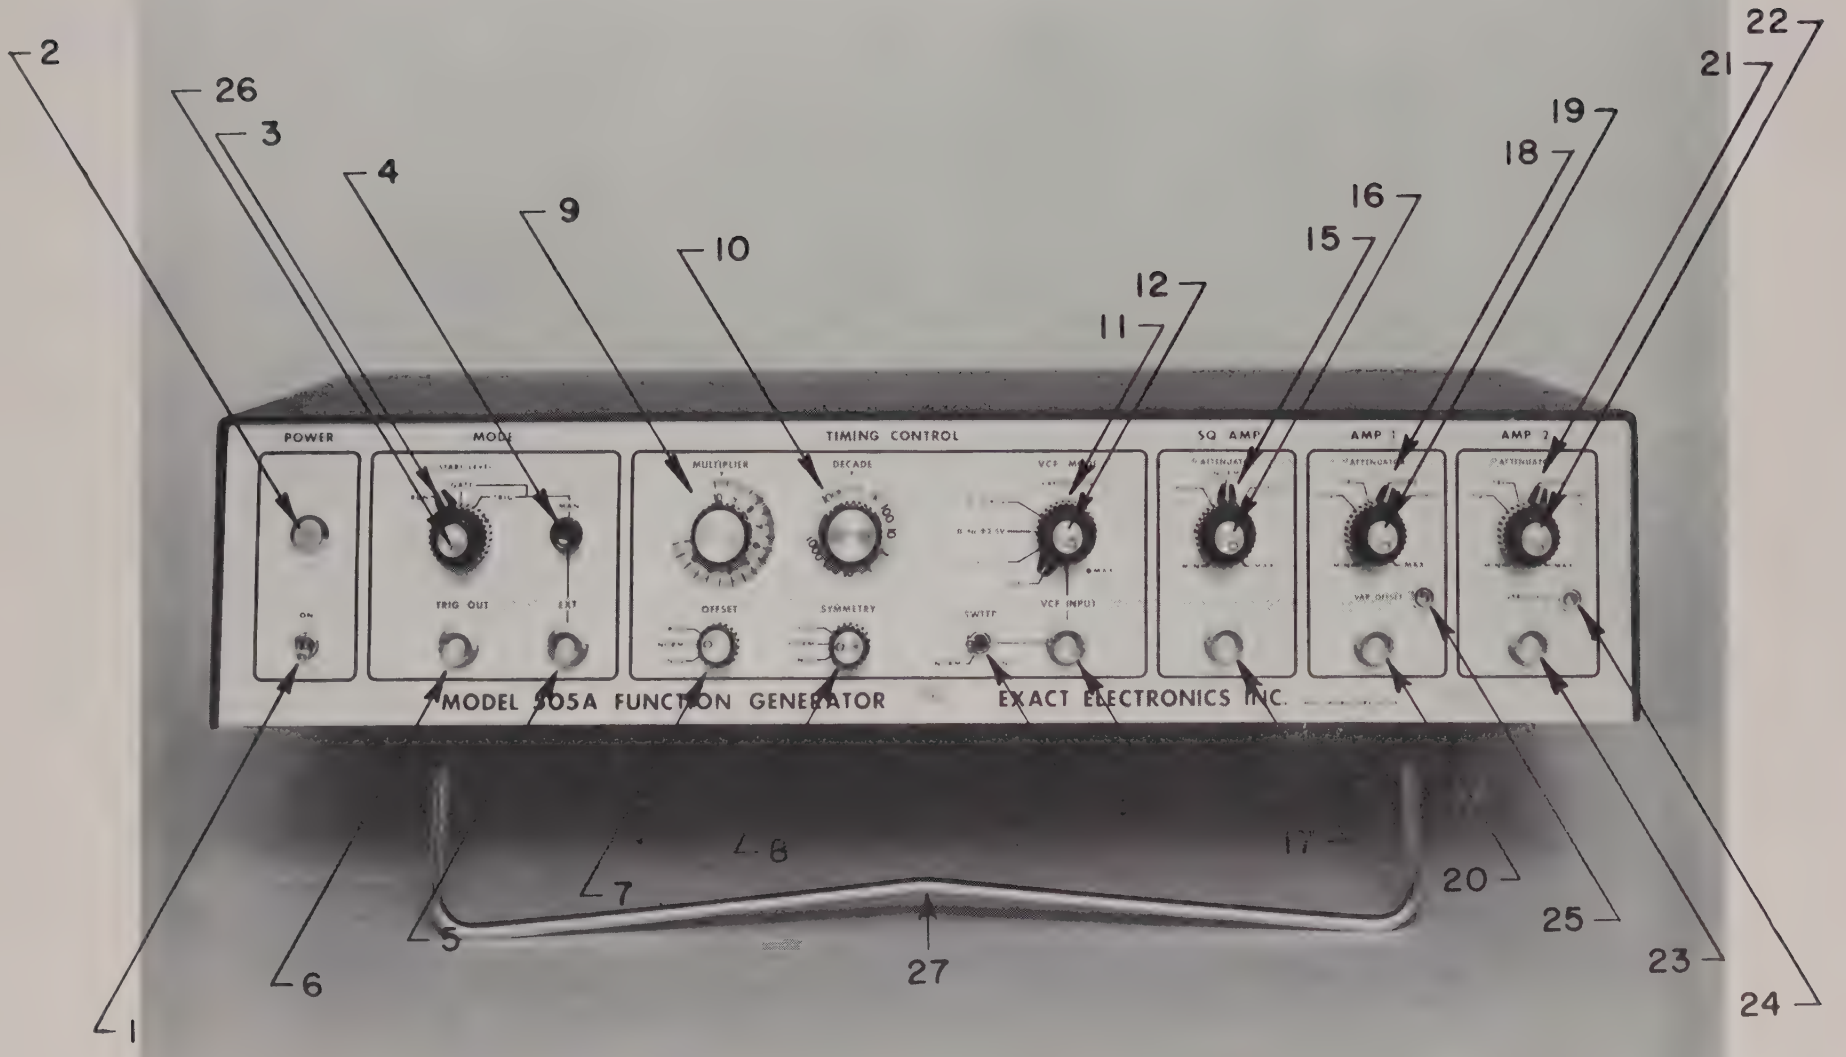
POWER
MODE
TIMING CONTROL
SQ AMP
AMP 1
AMP 2
MULTIPLIER
DECADE
VCF MOD
ON
TRIG OUT
EXT
OFFSET
SYMMETRY
SWEEP
VCF INPUT
VAR OFFSET
MODEL 505A FUNCTION GENERATOR
EXACT ELECTRONICS INC.
1
2
3
4
5
6
7
8
9
10
11
12
15
16
17
18
19
20
21
22
23
24
25
26
27

3.1.0 FRONT PANEL FAMILIARITY

3.1.1 Location and Function of Controls

1. Power on/off switch
2. Power ON light indicator
3. Gate/Trigger/Free Run mode selector switch
4. Manual Gate/Trigger pushbutton
5. External Gate/ Trigger input jack
6. External Trigger output jack for triggering external equipment
7. Offset control - provides either positive or negative offset from ground for triangle, ramp or sine out of amplifiers 1 and 2.
8. Symmetry switch - used to convert triangle into a ramp or square wave into a pulse
9. Multiplier dial - multiplies decade frequency
10. Decade selector switch - selects any one of ten decade ranges.
11. VCF input mode selector - selects one of three voltage controlled frequency inputs. Selection depends on what type of voltage is available.
12. VCF expansion control - variable sweeping range adjustment. Full maximum gives 50:1 sweep with +5V, -5V or ±2½V ramp VCF input.
13. VCF input jack
14. VCF sweep direction selector - selects direction of sweep with any given input voltage. Example, in Norm position with a plus ramp input, generator will sweep down in frequency from dial setting. In the Inv position with same plus input voltage, generator will sweep from low end of sweep range (50:1 lower than dial setting) up to expansion ratio set by expansion control. Refer to section 3.3.13 for sweep control characteristics when VCF mode selector switch is in the 0 to -5V and 0 to ±2½V positions.

3.1.1 LOCATION AND FUNCTION OF CONTROLS (continued)

15. Square amp selector - selects bi-polar square, positive square, negative square. Also selects bi-polar pulse, positive pulse and negative pulse if Sym Switch is either Pos or Neg.

16. Square Amp attenuator - attenuates output from max amplitude down to approximately 0. Below 100mv refer to Section 2, Amplitude Adjustment.

17. Square Amp output connector

18. Amplifier 1 selector - selects square, triangle, sine or Amplifier 2. Also selects ramp, reverse ramp and pulse if SYM switch is positive or negative. Amp 1 selector to Tri for ramp, square for pulse.

19. Amplifier 1 attenuator - attenuates outputs from maximum amplitude down to approximately zero volts.

20. Amplifier 1 output

21. Amplifier 2 selector - selects square, triangle, sine or Amp 1 inverted. Also selects ramp, reverse ramp and pulse if Sym switch is Pos or Neg. Amp 1 selector to Tri for ramp or square for pulse.

22. Amplifier 2 attenuator - attenuates output from maximum amplitude down to approximately zero volts.

23. Amplifier 2 output connector

24. Amplifier 2 variable ±4V D.C. offset

25. Amplifier 1 variable ±4V D.C. offset

26. Variable trigger start-stop adjustment. Varies the start point up to 90°, 45° above 100KHz.

27. Retractable tilt stand

3.2.0 FIRST TIME OPERATION

3.2.1 A. Set all function generator controls as follows

POWER	ON
MODE	RUN
OFFSET	NORM
SYMMETRY	OFF

3.2.1 A. Function generator controls (continued)

MULTIPLIER	X10
DECADE	1K
SWEEP	NORM
VCF MODE	0 to +5V
VCF EXPANSION	MAX
SQ AMP	NORM
AMP 1	SQ
AMP 1 ATTEN	MAX
SQ AMP ATTEN	MAX
AMP 2	SQ
AMP 2 ATTEN	MAX
TRIG OUT	Connect trig out jack to monitor oscilloscope external trigger input. Use coaxial cable.

B. Set oscilloscope as follows

VERTICAL SENSITIVITY	5V/CM
INPUT COUPLING	DC
SWEEP TIME	100μSEC/CM
TRIGGER	EXTERNAL POS

3.2.2 PROCEDURE FOR PRODUCING BI-POLAR SQUARE

A. Same settings as in 3.2.1

B. Monitor square amp output. Bi-polar square waves are also available from Amp 1 and Amp 2 outputs.

3.2.3 PROCEDURE FOR PRODUCING POSITIVE SQUARE

A. Same settings as in 3.2.1 with exception of SQ AMP selector which should be POS.

B. Monitor Sq Amp output. A positive square is also available out of Amp 1, negative square from Amp 2.

3.2.4 PROCEDURE FOR PRODUCING NEGATIVE SQUARE

A. Same settings as in 3.2.1 with exception of SQ AMP selector which should be NEG.

B. Monitor Sq Amp output. A negative square is also available out of Amp 1, positive square from Amp 2.

3.2.5 PROCEDURE FOR PRODUCING BI-POLAR SQUARE PULSES

A. Same settings as in 3.2.1 with exception of SYMMETRY switch which should be POS or NEG.

B. Monitor Sq. Amp output. Bi-polar square pulse is also available from Amp 1 and Amp 2 outputs.

3.2.6 PROCEDURE FOR PRODUCING POSITIVE SQUARE PULSES

A. Same settings as in 3.2.1 with exception of SYMMETRY switch which should be POS or NEG and SQ AMP selector to POS.

B. Monitor Sq Amp output. Positive square pulse is also available from Amp 1 and Amp 2 outputs.

3.2.7 PROCEDURE FOR PRODUCING NEGATIVE SQUARE PULSES

A. Same settings as in 3.2.1 with exception of SYMMETRY switch which should be POS or NEG and SQ AMP selector to NEG.

B. Monitor Sq Amp output. Negative square pulse is also available from Amp 1 and Amp 2 outputs.

3.2.8 PROCEDURE FOR PRODUCING SINE WAVEFORMS

A. Same settings as in 3.2.1 with exception of Amp 1 and Amp 2 selectors which are set to SINE.

B. Monitor Amp 1 or Amp 2 output. Amp 2 sine will be 180° out of phase with Amp 1.

3.2.9 PROCEDURE FOR PRODUCING TRIANGLE WAVEFORMS

A. Same settings as in 3.2.1 with exception of Amp 1 and Amp 2 selectors which are set to TRIANGLE.

B. Monitor Amp 1 or Amp 2 output. Amp 2 triangle will be 180° out of phase with Amp 1.

3.2.10 PROCEDURE FOR PRODUCING RAMP WAVEFORMS

Same procedure and settings as in 3.2.9 A-B with exception of SYMMETRY switch which should be POS.

3.2.11 PROCEDURE FOR PRODUCING REVERSE RAMP WAVEFORMS

Same procedure and settings as in 3.2.9 A-B with exception of SYMMETRY switch which should be NEG.

3.2.12 PROCEDURE FOR PUSH-PULL OPERATION

Amp 1 and Amp 2 provide push-pull outputs automatically with individual amplitude controls. When Amp 2 is in Amp INV position, you would still have a push-pull output except that amplitudes of both amplifiers can be controlled by Amp 1 attenuator.

3.2.12 PROCEDURE FOR PUSH-PULL OPERATION (continued)

Amp 2 amplitude attenuator is used for balance. For example, if Amp 1 were set to Sine and Amp 2 set to Amp 1 INV, the unit will produce a push-pull sine output. Amp 1 produces sine at zero degrees while Amp 2 produces sine output at 180 degrees. The attenuator for Amp 2 is now used to match the amplitude of sine waveform out of Amp 1. Adjusting attenuator of Amp 1 will now control amplitude of both waveforms.

3.2.13 VCF OPERATION (Models 503A and 505A only)

A VCF Mode selector switch provides a selection of input voltages depending on what is available. They are 0 to +5V, 0 to -5V and 0 to ±2½V. INPUT MUST MATCH VCF MODE SELECTOR. When used in conjunction with the sweep switch, the user has a choice of sweeps; he may sweep up in frequency or down in frequency, or up and down about a center frequency in the ±2½V position. Center frequency will be approximately one-half dial setting.

Sweep direction vs input voltage:

1. 0 to +5V position - With sweep switch in NORM position and a 0 to plus input voltage, generator will sweep from dial frequency down to low end of sweeping range set by expansion control. In INV position generator frequency will drop to 1/50th of dial setting, then sweep up to a frequency to a point set by expansion control. With expansion control fully CW, generator will sweep up to a dial frequency. The INV position requires an external frequency counter to determine exact frequency settings.

2. 0 to -5V position - With sweep switch to NORM the generator will initially drop to approximately 1/50th of dial setting with zero volts input. Precise frequency must be determined with an external frequency counter. When a 0 to minus voltage is applied, the generator will sweep up in frequency to an upper frequency which is set by expansion control. Again, an external frequency counter is required to determine upper frequency.

   With sweep switch to INV position, generator will sweep from dial setting down to a frequency set by the expansion control.

3.2.13 VCF OPERATION (continued)

3. 0 to ±2½V position - when VCF mode switch is set to ±2½V with zero volts input, the generator frequency will drop to approximately one-half of dial setting. With sweep switch set to NORM and a ramp input starting at -2½V, the generator will drop in frequency from the center frequency to the low end of the sweeping range, approximately 1/50th of dial setting. As ramp goes positive, generator frequency will increase at a linear rate until the input reaches the +2½V peak, at which time the generator will be at approximately dial setting. When the sweep switch is set to INV the reverse will happen. Exact frequency settings must be determined with an external counter.

3.2.14 GATING, TRIGGERING (single shot) 504A and 505A

NOTE: LOCKOUT CIRCUITRY WILL NOT FUNCTION PROPERLY WHEN THE OFFSET SWITCH IS IN THE NEG POSITION.

A. Gating operation (D.C. coupled)

1. Switch mode selector to Gate.

2. Monitor any output.

3. Push manual Gate/Trig button and observe output continues as long as depressed.

4. Once button is released, observe that last cycle is completed before locking out.

5. Using external +5 volts feeding Ext gate input, observe that generator free runs as long as input is applied.

B. Trigger (single shot) operation

1. Switch mode selector to Trig.

2. Monitor any output.

3. Push manual Gate/Trig button and observe that a single pulse is generated each time button is depressed.

4. Using external source of +5 volts feed Ext input, observing that a single pulse is generated for each external trigger input pulse.

3.2.15 OFFSET CONTROL

The following waveforms should be observed, depending upon the position of the offset switch. In the Offset mode, generator frequency will double from the dial setting.

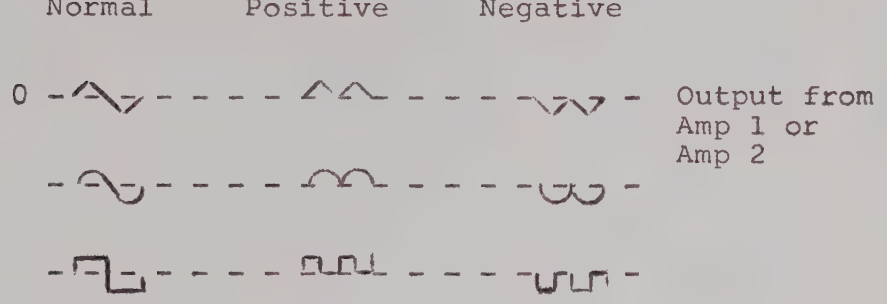

NOTE: Square amplifier output will double in frequency with offset control; however to offset square amplifier, the square amplifier selector must be used.

SECTION 4 CIRCUIT DESCRIPTION

4.1.0 CIRCUIT DESCRIPTION

4.1.1 BLOCK DIAGRAM (refer to figure 7.1.0, Section 7.)

4.1.2 POWER SUPPLY

The regulated power supply produces all operating voltages required by the instrument. It includes regulated ±18V and unregulated ±30V. The power supply is short circuit protected.

4.1.3 INTEGRATOR

The purpose of the integrator is basically to integrate a square waveform into a linear triangle wave form.

4.1.4 X10 AMP

The X10 Amp is an operational amplifier with a gain variable from 10 to 1. The triangle from the integrator is passed through this amplifier.

This variable gain amplifier causes the triangle amplitude to vary, thus allowing the frequency to be changed.

4.1.5 LEVEL DETECTOR

The function of the Level Detector is to produce a square waveform which is used to connect the + and -VCF supply to the integrator to obtain the triangle waveform.

4.1.6 TIMING AND FEEDBACK CIRCUITRY

The purpose of the timing and feedback circuitry is to connect the integrator and level detector together to make a free-running generator producing square and triangle waveforms plus a method for varying the frequency simultaneously.

The timing circuitry connects the level detector to the integrator circuit. The combination of these circuits produces a free-running oscillator, producing a square waveform and a triangle waveform. The timing circuitry also provides a method of controlling and varying the frequency of the free-running oscillator circuit.

4.1.7 SINE SHAPER

The sine shaper is basically an amplifier utilizing the non-linear characteristics of semiconductor

4.1.7 SINE SHAPER (continued)

diodes to cause the amplifier gain to vary non-linearly. The triangle waveform is fed into the sine shaper and the resultant sine waveform is produced.

4.1.8 AMP 1 (non inverting)

Amp 1 is basically a high-gain, wide bandwidth amplifier with negative feedback.

Any of four inputs (square, triangle, sine or the output of the other amplifier) may be selected. The selected waveform is amplified and applied to the output.

The amplifier will drive 600 ohms at greater than 25V P-P and is short-circuit protected. Output amplitude will vary with load.

4.1.9 AMP 2

Amp 2 is essentially identical to Amp 1 but is inverting.

4.1.10 SQUARE AMPLIFIER

The square amplifier is basically an electronic switch. It is driven by the square wave from the level detector. The use of such a circuit produces a good square wave with relatively fast rise and fall times.

Overshoot, ringing and droop are limited by peak clamping of both negative and positive extremes. This amplifier will drive a 600-ohm load at 25V P-P and a 50-ohm load at a lower amplitude. This amplifier is short circuit protected.

4.1.11 VCF AMPLIFIER

The purpose of the VCF Amp is to provide an equal positive and negative voltage which can be varied simultaneously by the application of an external VCF input voltage (voltage controlled frequency).

4.1.12 LOCKOUT AMPLIFIER

The purpose of the lockout amplifier is to enable the generator to lock out (stop running). Two lockout modes are provided, gate and trigger. In the gate mode, the generator can be externally or manually gated on as long as signal is applied. In

4.1.12 LOCKOUT AMPLIFIER (continued)

the trigger mode the generator will produce one complete cycle each time a signal is received.

4.2.0 CIRCUIT THEORY OF OPERATION

4.2.1 POWER SUPPLY (refer to figure 7.2.0, Section 7)

The power supply produces ±18V and ±30V to the instrument and consists of two basically identical series regulators which produce a low ripple ±18V from an unregulated ±30V source.

Line voltage is applied to transformer T100 through the ON/OFF switch S100 and fuse F100. The transformer produces 30 volts AC which is fed to rectifier assembly D100 which produces the unregulated ±30V. Capacitors C100 and C110 provide filtering of the unregulated +30V.

Because both the +18V and the -18V regulators are basically identical, only the positive regulator will be discussed here. Q100 is basically a current source. The maximum current is limited by resistor R101.

REGULATOR OPERATION (+18V supply)

A reference voltage of approximately +9V is applied to one side of differential amplifier Q160 and Q180. The reference zener D162 is connected through D121 and voltage divider R123 and R122 to apply approximately +18V on C121 initially to provide a starting voltage for the regulator.

Q160 will supply current to the base of Q120 which will in turn supply voltage to the base of Q140.

Emitter follower Q140 supplies the regulated +18V. The emitter voltage of Q140 is fed through voltage divider R182, R183 and R184.

The arm of R183 is adjustable and provides approximately +9V at the base of Q180 when Q140 emitter voltage is +18V.

If the output voltage increases due to a decrease in load or an increase in line voltage, the base voltage at Q180 will increase, causing the collector current of Q160 to decrease. The base voltage of Q160 is fixed by zener diode D162 at approximately +9V.

With a decrease in collector current of Q160, voltage at the base of Q120 will increase, causing less

REGULATOR OPERATION (continued)

collector current to flow through Q120 and R124, lowering the voltage at the base of Q140 until the emitter voltage has returned to +18V.

+18V adjust is used to calibrate the power supply to +18V ±3mv. -18V supply operates in essentially the same manner.

4.2.2 INTEGRATOR (refer to figure 7.3.0, Section 7)

The integrator circuit is utilized to produce a very linear output triangle by integrating the square waveform produced by the level detector and the VCF amplifier. The integrator is an operational amplifier.

The operational amplifier Q230 has a matched FET input to obtain a very high input impedance.

Q200 and Q210, matched FET's, provide an extremely high input impedance into the operational amplifier. Feedback from the output emitter follower, Q250 and Q255, is accomplished through the integrating capacitors, C201 through C206, selected by the Decade switch and is also applied to the inverting side of the operational amplifier. This provides negative feedback, forcing the summing junction to remain at virtual ground. The Int_Bal control is adjusted to balance the two inputs of the differential operational amplifier.

With the positive VCF supply connected to the timing resistor, the output of the operational amplifier will try to switch negative immediately.

The positive voltage applied to the timing resistor and connected to the summing junction will allow a finite current to flow through the timing resistor. This current will be constant as the VCF voltage is constant and the summing junction is held at virtual ground due to the extremely high gain and negative feedback. Due to the negative feedback through the integrating capacitor, output must charge the integrating capacitor.

As the timing current flows from the summing junction, an equal but opposite current will be applied through the integrating capacitor in the feedback loop. This feedback current through the integrating capacitor must remain constant as the input timing current is constant. This will cause the output to rise negative charging the capacitor at a constant rate.

4.2.2 INTEGRATOR (continued)

The output is connected to the level detector through the X10 Amp. When the X10 Amp output reaches a predetermined level, the level detector will change state and invert the square waveform applied to the switching bridge. This will in turn reverse the operation described and the integrator output will reverse and start rising positively, thus producing a linear triangle waveform at the output.

By switching in different timing resistors and integrating capacitors, frequency can be changed in decade steps. By varying the Multiplier dial, the triangle amplitude applied to the integrating capacitors is changed causing a linear change in timing current and thereby changing frequency. By switching resistors and capacitors with the Decade switch and adjusting the Multiplier dial, any desired frequency from 0.0001 to 1MHz may be obtained.

The Sym switch, S560, is provided to produce non-symmetrical operation required for the various non-symmetrical waveforms such as the ramp, reverse ramp and square waveform pulses. Switch S560 enables the VCF voltage to be connected directly to the summing junction, by-passing the timing resistor.

When S560 is switched to the negative position, R575 connects the applied negative VCF voltage directly to the summing junction.

When the positive VCF voltage is connected, the timing resistor will be by-passed by R575, a 10K resistor, causing a much larger timing current to flow. The output of the integrator will rise positive much faster as a result of the increased timing current.

When the output of the X10 Amp reaches the trip point of the level detector, the VCF supply will reverse polarity as previously described. With the negative VCF supply now connected, the integrator wil integrate at the same rate as in the NORM position.

4.2.3 X10 AMP (refer to figure 7.4.0, Section 7)

The purpose of the X10 Amp is to vary the amplitude of the triangle waveform from the output of

4.2.3 X10 AMP (continued)

the integrator. The amplitude of the triangle waveform from the integrator determines the amount of time required to charge the feedback capacitor. If the amplitude of this triangle changes, the frequency will change.

The X10 Amp is composed of Q260, Q280 and Q290. Q260 is an operational amplifier with a fixed gain of approximately 10.

The output of the X10 Amp is fed through output emitter followers Q280 and Q290 to the input of the level detector. The triangle amplitude at the input of the level detector will remain constant as this is controlled by the level detector trip points.

R261 (multiplier) and R263 form a voltage divider to the input of the operational amplifier. With the arm of the Mult control set at maximum (X10), the triangle amp at the output of the Integrator will be minimum. A .4V P-P triangle would produce a 4V P-P triangle at the X10 Amp output.

With the Mult set at minimum (X1), approximately a 4V P-P triangle waveform will be required to drive the output of the X10 amplifier to 4V P-P. It takes much longer to charge the feedback capacitor to 4V P-P than to .4V P-P. In this manner, the Mult in conjunction with the X10 Amp varies the frequency of the generator manually.

4.2.4 LEVEL DETECTOR (refer to figure 7.5.0, Section 7)

The level detector is used in conjunction with the integrator to produce a free-running square and triangle waveform.

The input to the level detector is connected to the output of the X10 Amp. Q300 is a constant current source for differential amplifier Q310 and Q320. Q340 and Q350 form a second differential amplifier which is connected to Q310 and Q320 to form a high-gain amplifier circuit.

The output voltage swing of Q340 and Q350 collectors are both clamped by a diode bridge to approximately ±1.5V P-P.

4.2.4 LEVEL DETECTOR (continued)

With the input rising positive, Q310 will turn off and Q320 will turn on. Once Q310 is turned off, the collector voltage of Q310 will go negative. This will in turn cause Q350 base to go negative, causing Q350 to turn off and Q340 to conduct harder. Q340 collector voltage will go farther negative, causing Q320 base to go negative and Q320 to conduct harder. Positive feedback Q350 collector voltage will increase due to Q350 turning off. This in turn causes the output to switch to its positive state.

A positive input waveform causes the output to switch positive when the input trip point is reached (inverting). In this manner, the integrator, X10 Amp and the level detector create a free-running square and triangle waveform simultaneously.

Q340 collector signal is applied to the output emitter follower which drives the square amplifier and Q380 which produces the trigger out signal.

4.2.5 SINE SHAPER (refer to figure 7.8.0, Section 7)

The sine shaper is basically a differential operational amplifier with non-linear feedback which will produce a low-distortion sine wave from a linear triangle input.

Transistors Q600, Q610 and Q620, Q630 are two differential amplifiers connected together to form a high-gain amplifier.

With the input rising at a constant slope (positive triangle), Q630 collector voltage will go negative. As the output rises negatively, the feedback network voltage divider will essentially connect smaller and smaller resistance across the fixed gain feedback resistor R674, thus causing the gain to decrease as the output voltage rises negatively.

When the input triangle changes slope, the output will simply reverse polarity and rise positive, producing the same non-linear action. The constantly changing gain of the amplifier will produce the required sine waveform.

Q640 emitter follower and Q650 constant current source provide the necessary current to drive the feedback network. Q660 and Q670 emitter followers provide the moderately low output impedance to drive the associated circuitry.

4.2.6 SQUARE AMPLIFIER (refer to figure 7.10.0, Section 7)

The square amplifier is essentially a high-speed switch which produces a 28V P-P output square wave at less than 50 nanosecond rise and fall times.

The square wave from the level detector is fed into the square amplifier input. With the squarewave in its positive state, Q800 will turn on, causing Q800 collector to go negative. This negative signal at Q800 causes Q810 to saturate, thus pulling the collector voltage of Q810 positive very rapidly. The positive input signal will hold Q830 off as long as the input remains positive. When the input switches negative, Q840 collector will switch negative very rapidly.

This squarewave is applied through selector switch S810 to the output emitter follower.

4.2.7 SQUARE SELECTOR SWITCH S810

When switched to the POS SQ position, a diode is in series with the squarewave being applied to the output emitter follower. This will allow signal to pass in only one direction.

When the selector switch is placed in the NEG SQ position, only the negative portion of the square waveform will pass to the emitter follower and on to the output.

4.2.8 AMP 1 (non inverting) (refer to figure 7.11.0, Section 7)

Amp 1 provides the selected waveform at 28V P-P into 600 ohms at the output.

The signal is applied at the input to Amp 1 (TP900). A positive signal will cause Q900 to turn on, driving Q910 collector positive. This amplified signal is applied to output buffer Q920 and Q950 which drive Amp 1 output. The gain is fixed by R941 and R931 to approximately 3.

4.2.9 AMP 2 (inverting) (refer to figure 7.9.0, Section 7)

Amp 2 also provides the selected waveform at 28V P-P into 600 ohms at the output (inverted).

The signal is applied to the emitters of input transistors Q700 and Q730. Q700 and Q730 bases are grounded.

4.2.9 AMP 2 (continued)

A positive signal will cause Q700 to turn off. This will cause Q710 to turn off driving the output negative. This signal is applied to the output buffer Q720 and Q750 which drive the output of Amp 2.

The gain is fixed at approximately 3 as in Amp 1.

4.2.10 VCF AMP (503A and 505A only) (refer to fig 7.6.0)

The VCF Amp provides a ± voltage to the timing resistors which can be varied causing the frequency to change.

Q500 differential amplifier is connected to Q540 to form the positive VCF supply amplifier. Q530 is a constant current source for Q500. With Q500 output base grounded, a positive signal at Q500 input base will cause Q508 input transistor to turn on, driving Q540 base negative and the output positive. Negative feedback (R544, R547) fixes the gain at about 4.

With the input grounded, the output will be approximately 500mv. With a +5V signal at the input, the output will be at +16V. The negative supply is composed of transistors Q550, Q560 and Q580.

A voltage divider (R562, R563 and R581) is connected from the +16V supply to the -16V supply. Base of Q560 will set at about zero volts due to the voltage divider. +16V supply will cause Q560 to turn off driving Q580 base negative, driving output of Q580 negative. When the output reaches -16V, voltage at the base of Q560 will reach zero volts and thus maintain the negative supply at -16V as long as +16V supply remains at +16V. In this manner, the negative supply will track the positive supply and always provide an equal but opposite voltage.

As VCF input voltage varies from zero volts to +5V, VCF supply voltages will vary from ±16V to approximately ±500mv.

The VCF mode switch provides three different modes of operation so that the user may operate the VCF with virtually any signal input.

4.2.11 LOCKOUT AMPLIFIER (continued)

GATE MODE

When in the Gate mode of operation, the ground at Q430-Q440 collectors is removed through S400. The flip flop will remain in the Run state until the positive-going pulse from the square wave at pin 12 causes Q460 to turn on, reversing the state of the flip flop. A negative signal is now applied at Q480 base (approximately 0 V D.C.). As the signal at Q490 base approaches 0 V, Q490 will turn on, causing Q480 to turn off. With Q480 off, the lockout diodes become forward biased and the generator will lock out (stop running). By depressing the Man. pushbutton or applying a positive signal at the Ext input, Q400, normally off, will turn on and Q420, normally on, will turn off. The Schmitt (Q400-Q420) will remain in the Run state as long as signal is applied. With Q400 on, approximately 0 V will be applied at Q470. Q470 will remain off as long as signal is applied.

A positive signal from Q420 collector is applied to Q430 base, placing the flip flop in the Run state.

With Q470 off, Q460 emitter is floating. The signal applied to Q460 base from the square wave will have no effect until external signal is removed, allowing Q400 to turn off and Q470 on. This will allow the first positive pulse from the square wave applied to Q460 base to place the flip flop in the lockout mode again.

The generator will free run as long as external signal remains at the input.

TRIGGER MODE

The function of the lockout amplifier is identically the same as in the Gate mode with the following exception.

Q460 emitter is grounded in the Trig mode through S400. Upon completion of the first cycle, the positive pulse from the square wave (pin 12) will turn Q460 on, placing the flip flop in the Lockout mode after completion of the first full cycle.

Each time an external signal is applied, one full cycle will be completed.

The external signal must be removed before another external signal is applied.

4.2.11 LOCKOUT AMPLIFIER

The Lockout Amplifier is composed of transistors Q400, Q420, Q430, Q440, Q450, Q460, Q470, Q480 and Q490.

The input of the X10 Amp (TP 260) is connected to the input of differential amplifier Q480-Q490.

The summing junction (TP 200) is connected through diodes D484 and D483 to the collectors of Q480. The lockout diodes will be forward biased when Q480 is off and reverse biased when Q480 is on.

As Q490 base rises above Q480 base, Q490 will turn on and Q480 off, forward biasing the lockout diodes. When the lockout diodes become forward biased, the Integrator will stop integrating.

By varying the potential at the base of Q480, it is possible to cause the Integrator to stop at any desired level.

The Lockout D.C. Adj. is used to set the L.O. level at zero volts at the output of the X10 Amp (TP 280).

The Start Level control allows the operator to control the level (or phase) at which the generator will start in the Gate and Trigger modes. The level (or phase) may be shifted from the positive extreme to the negative extreme or approximately 90°. The 10K and 100K ranges are limited somewhat as to the amount of offset which may be obtained.

The gating and triggering logic controls the level at the base of Q480.

Q430, Q440, Q450 and Q460 form a flip flop.

When Q450 and Q460 are in the OFF state, a positive signal will be applied at Q480 base. In this condition, Q480 will remain on, reverse biasing the lockout diodes, allowing the generator to free run.

Q400 and Q420 form a Schmitt trigger.

The Manual pushbutton and the Ext input are connected to Q400 base.

RUN MODE

In the Run mode, Q430-Q440 collectors are grounded through S400, causing the flip flop to remain in the Run state. In this mode, the flip flop is unaffected by the application of external signal or depressing of the Man. switch.

SECTION 5 CALIBRATION

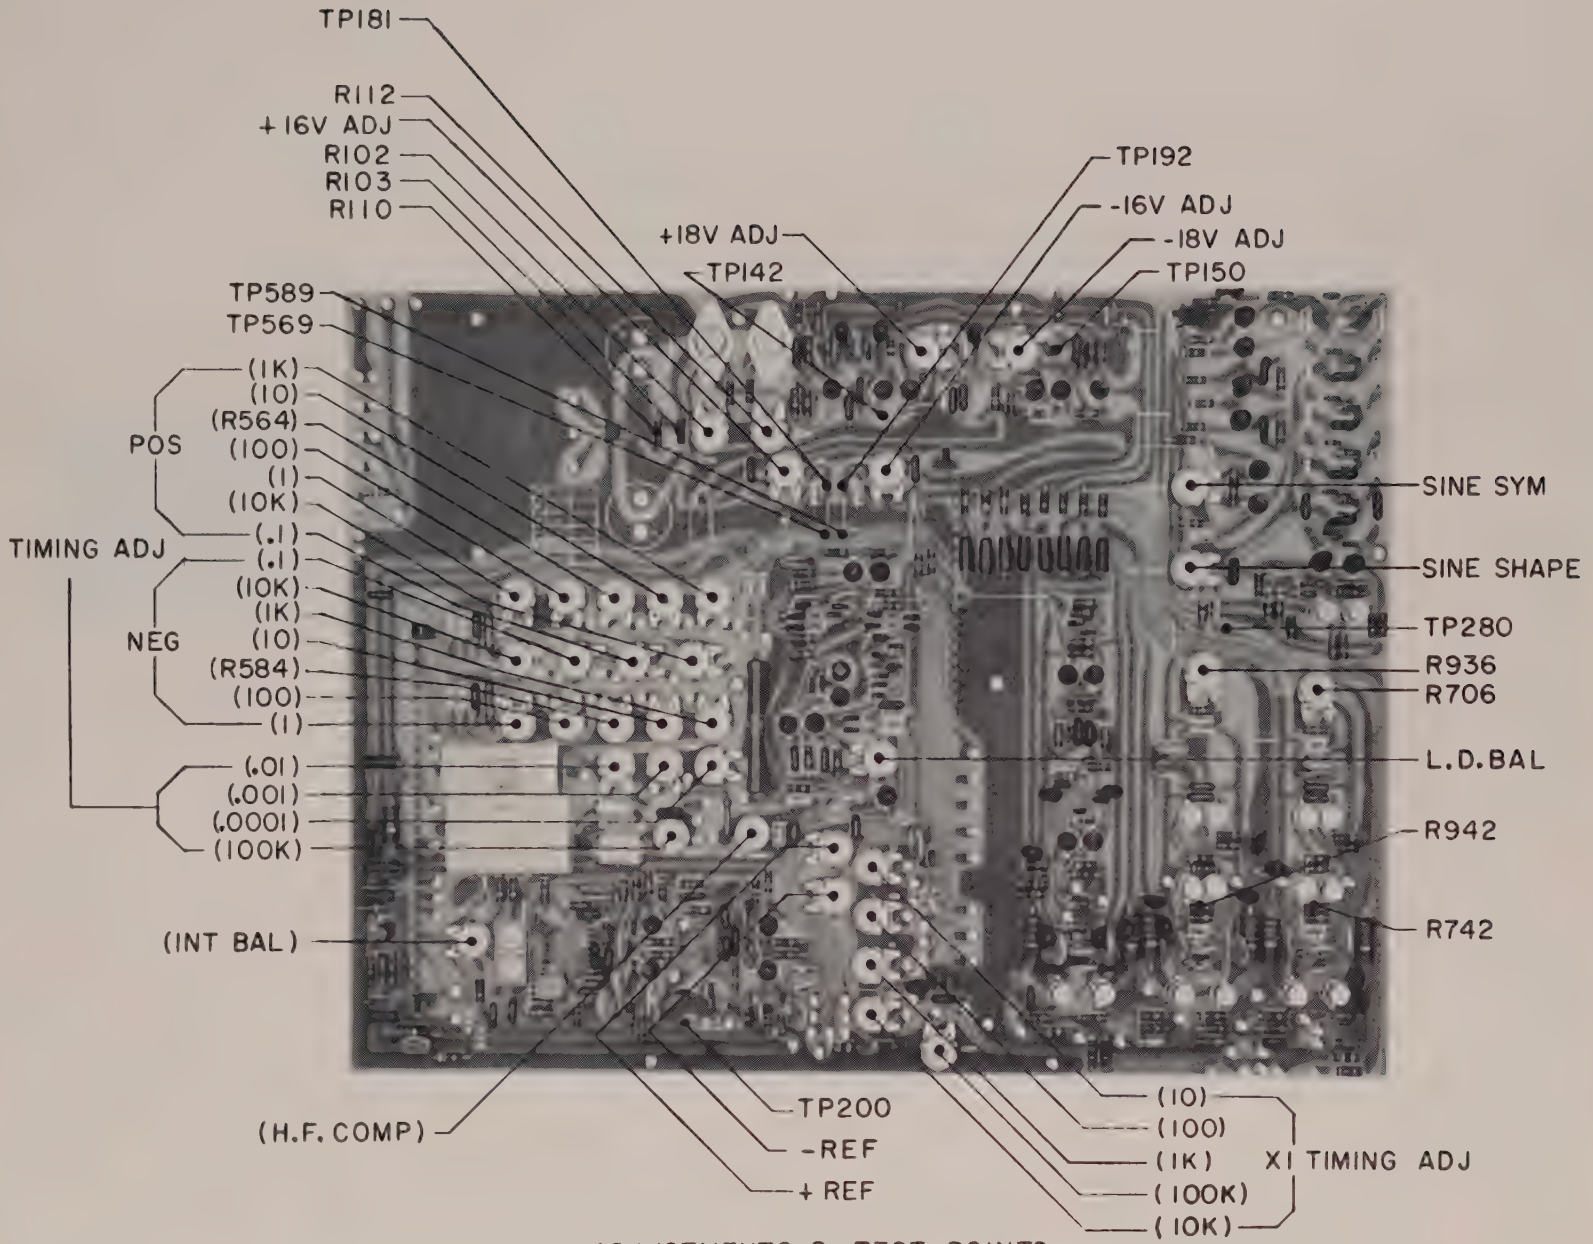

ADJUSTMENTS & TEST POINTS

MODEL 505A,504A,503A,500A

FIGURE 5.0.1

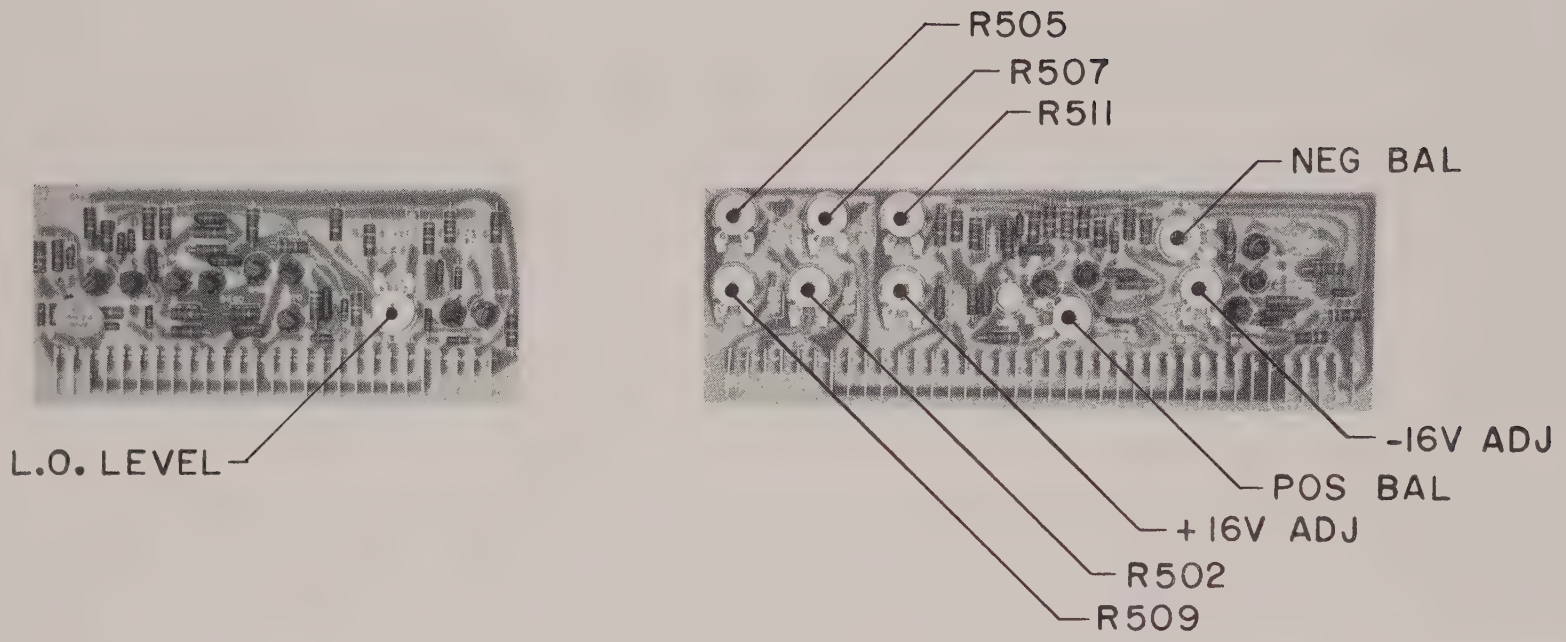

ADJUSTMENTS & TEST POINTS

LOCKOUT AMP & VCF AMP

FIGURE 5.0.2

5.1.0 FAILURE TO OPERATE

Read operating instructions to insure a thorough understanding of all front panel controls.

Should instrument fail to have an output from any of three amplifier outputs, check the following.

A. Unplug instrument and check 117V 3AG 1/2 amp fuse, or 3AG 1/4 amp for 220V operation, located on rear panel.

B. Remove cover and check for 117V AC between TP100 and 102. This checks power line cord.

Measure between TP104 and 107 for 117V AC. This check is for power on/off switch and associated wire. It insures that power is going into power transformer.

If trouble is not located in above steps, follow calibration procedure until trouble is located.

5.2.0 FAILURE TO MEET FACTORY SPECIFICATIONS

Check the following.

A. Proper operating instructions in Section 3 to insure a thorough understanding of all front panel controls.

B. Perform all steps of calibration procedure. If instrument still does not meet specifications, contact factory and arrange to return for a complete check-out and evaluation.

5.3.0 CALIBRATION PROCEDURE

The following test equipment or suitable equivalents of known accuracy are required for complete calibration of the Types 500A, 503A, 504A and 505A function generators.

A. Oscilloscope, D.C. to 50MHz, Tektronix 547 with 1A1 and W plug-ins.

B. Distortion Analyzer, Hewlett Packard 333A.

C. Variac Powerstat

D. Constant voltage DC source accurate to 1mv

E. Frequency Counter, CMC 607A.

F. Differential voltmeter, Medistor A-75.

G. VOM, Simpson 260

H. 600-ohm purely resistive load.

CALIBRATION PROCEDURE APPLIES TO MODELS 500A, 503A, 504A AND 505A unless otherwise indicated.

Before proceeding set waveform generator controls as follows

MODE	RUN
MULTIPLIER	10
DECADE	1K
VCF	OFF
OFFSET	NORM
SYMMETRY	NORM
SWEEP	NORM

5.3.1 POWER SUPPLY

NOTE: Instrument should be ON for at least thirty minutes before any of the following adjustments is made.

A. With instrument running, monitor the voltage across R103 (2Ω resistor) with VOM.

B. With a jumper lead, short the +18V supply, TP 180, to ground. Adjust R102 to obtain 1.2V ±500mv as indicated on VOM and remove short.

NOTE: DO NOT short circuit +18V supply longer than necessary, as damage may occur to Q100.

C. With a jumper lead, short the -18V supply, TP 190, to ground and adjust R112 to obtain 1.2V ±500mv as indicated on VOM and remove short.

NOTE: Use same precaution, as damage may occur to Q110.

D. +18V supply calibration: Connect differential voltmeter to +18V supply, TP 180. Adjust +18V adjust to obtain +18V ±2mv.

E. -18V supply calibration: Connect differential voltmeter to -18V supply, TP 190. Adjust -18V adjust to obtain -18V ±2mv.

F. Line regulation check

1. Connect differential voltmeter to +18V test point, TP 180.

2. Using Variac, vary line voltage from 105V to 125V while monitoring supply voltage. Supply voltage should remain constant ±10mv.

3. Connect differential voltmeter to -18V supply, TP 190.

5.3.1 POWER SUPPLY

F. Line regulation check (continued)

4. Using Variac, vary line voltage from 105V to 125V while monitoring supply voltage. Supply voltage should remain constant ±10mv.

G. Power supply ripple check

1. Set oscilloscope controls as follows

VERTICAL SENSITIVITY	MAX
INPUT COUPLING	AC
SWEEP TIME	10msec/cm
TRIGGER	LINE

2. Measure 120Hz ripple content of the +18V, TP 180, and -18V, TP 190, supplies. Ripple on each supply should be less than 5mv.

5.3.2 INTEGRATOR BALANCE

A. Monitor TP 280 (X10 Amp output) with oscilloscope.

B. Ground TP 200 (summing junction).

C. Adjust Int Bal (R219) until the output level remains near zero volts. *

*Noise and 60-cycle ripple will be noticed when adjusted properly.

5.3.3 +16V CALIBRATION (Models 500A and 504A only, or 503A and 505A if VCF board is removed and jumpers installed between TP181-TP569 and TP191-TP589. This would be done only if instrument was required to be put in quick operation and the VCF board was defective.

Connect differential voltmeter to +18V supply, TP181. Adjust +16V adjust, R188, to obtain +16V ±3mv.

5.3.4 -16V CALIBRATION (same models as in 5.3.3)

Connect differential voltmeter to -18V supply, TP191. Adjust -16V adjust, R195, to obtain -16V ±3mv.

5.3.5 LEVEL DETECTOR BALANCE

A. Set oscilloscope controls as follows, using a differential plug-in as Tektronix Type W or equivalent.

VERTICAL SENSITIVITY	MAX SENSITIVITY DIFFERENTIAL MODE
INPUT COUPLING	DC
SWEEP TIMING	.1msec/cm
TRIGGER	EXT POS

MONITOR TEST POINT 280
(triangle waveform at X10 Amp output)

B. Set function generator controls as follows

MODE	RUN
MULTIPLIER	10
DECADE	1K
OFFSET	NORM
SYM	NORM

C. While switching the offset switch from Pos to Neg, notice approximately zero volts reference at the peaks of the triangle in Neg and Pos positions.

D. Adjust Level Detector Bal (LD adjust) until these peaks are equally centered about ground ±50mv.

E. Place offset switch to Norm position.

F. Adjust L.D. Pos and Neg Ref adj. to obtain a +4.2V peak ±50mv and a -4.2V peak ±50mv at TP280.

5.3.6 VCF AMP (Models 503A and 505A only)

A. Check to see that VCF plug-board, 443-111, is inserted and that jumpers between +16V (TP181-TP569) and -16V (TP191-TP589) are removed.

B. Set function generator controls as follows

VCF MODE	OFF
SWEEP	NORM
EXPANSION	FULL CW
INPUT VOLTAGE	GROUND

C. Ground TP531 and adjust +VCF balance with differential voltmeter to 0 V and TP569 (+16V supply).

D. Remove ground and adjust +16V adjust (R188) for +16V ±3mv at TP569 (+16V supply).

E. Adjust -16V Adj (R195) to obtain -16V ±3mv at TP589 (-16V supply).

5.3.6 VCF AMP (continued)

F. Set function generator controls as follows

VCF MODE	0 to +5V
SWEEP	INV
EXPANSION	FULL CW

G. Adjust -VCF Bal to obtain equal voltages at TP569 and TP589 ±3mv using differential voltmeter.

H. Repeat steps E through G until both conditions are met.

5.3.7 TIMING

A. Set function generator controls as follows

MODE	RUN
DECADE	100
SYM	NORM
VCF MODE	OFF
OFFSET	NORM
SQ AMP	NORM

TRIG OUT TO SCOPE EXT TRIG IN

B. Monitor Square Amp output with counter.

NOTE: Steps C, D and E are not required for normal calibration, only if the timing potentiometer has been replaced or if steps H through T cannot be met.

C. Remove Multiplier dial and turn multiplier pot full CCW.

D. Monitoring output frequency, turn multiplier pot CW until frequency has increased 7% to 10%.

E. Replace multiplier dial carefully without moving multiplier control shaft and tighten both set screws with "1" on dial skirt directly in line with index mark on front panel.

F. Set Multiplier to 10 and adjust 100 neg. adjust and 100 pos. adjust to obtain 1KHz ±.5% symmetrical <.5%. Symmetry can be checked with A-B function on a counter or an oscilloscope.

G. Set Multiplier to 1 and adjust (100) X1 timing adjust to obtain 100KHz ±.5%.

H. 100K X10 Timing

1. Set Decade to 100K, Multiplier to X10.

5.3.7 TIMING

H. 100K X10 Timing (continued)

2. Monitor TP280 with oscilloscope. Adjust (H.F. Comp) for a triangle of 4.2V P-P ±100mv.

3. Monitoring square output with counter, adjust 100K timing capacitor for 1MHz ±.5%.

J. Decade 10K X10 Timing

1. Set Decade to 10K, Multiplier to X10.

2. Set Sq Amp to Norm, Attenuator to Max CW.

3. Set Amp 1 to Sq, Attenuator to Max CW.

4. Connect counter to Sq Amp.

5. Connect oscilloscope to Amp 1, set scope controls as follows

TIME/CM	1µsec
SWEEP MAGNIFIER	X10
TRIG SOURCE	INT
TRIG SLOPE	+

6. Adjust the positive and negative 10K timing potentiometers while switching the Trig slope from + to - on scope until the square risetime and square falltime cross the center line of the scope within one-half a major division while at the same time adjusting for 100KHz ±.5% on counter. This adjusts the square symmetry so that A and B are of equal time ±.5% and frequency is 100K ±.5%.

K. Decade 1K X10 Timing

1. Set Decade to 1K, Multiplier to 10.

2. Set Square Amp to Norm, Attenuator to Max CW.

3. Set Amp 1 to Square, Attenuator to Max. CW.

4. Connect counter to Sq. Amp.

5. Connect oscilloscope to Amp 1 with scope controls as follows

TIME/CM	1µsec
SWEEP MAGNIFIER	X10
TRIG SOURCE	INTERNAL
TRIG SLOPE	+

5.3.7 TIMING

K. Decade 1K X10 Timing (continued)

6. Adjust the positive and negative 10K timing pots while switching the scope Trig Slope from + to - until the square risetime and square falltime cross the center line of the scope within one-half a major division while at the same time adjusting for 10KHz ±.5%. This adjusts the square symmetry so that A and B are of equal time ±.5% and frequency is 100K ±.5%.

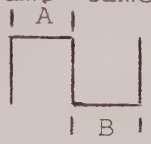

L. Decade 100 X10 Timing

1. Set Decade to 100, Multiplier to 10.

2. Connect counter to Sq. Amp.

3. Set counter to Time function and while adjusting 100 position and 100 negative timing pots, switch Function knob from A-B to B-A until time is adjusted to one half of dial frequency (counter should read 500 and 500). Set counter to Freq. and counter should read 1KHz ±.5%.

M. Decade 10 x X10 Timing

1. Set Decade to 10, Multiplier to 10.

2. Connect counter to Sq. Amp.

3. Set counter to Time function and while adjusting 10 positive and 10 negative timing potentiometers, switch Function knob from A-B to B-A until time is adjusted to one half of dial frequency. Counter should read 500 and 500. Set counter to frequency and check that frequency is 100Hz ±.5%.

N. Decade 1 X10 Timing

1. Set Decade to 1, Multiplier to 10.

2. Connect counter to Sq. Amp.

3. Set counter to Time function and while adjusting 1 positive and 1 negative timing potentiometers, switch function knob from A-B to B-A until time is adjusted to one half of dial setting. Counter should read 500 and 500. Check to see that frequency is 10Hz ±.5%.

5.3.7 TIMING (continued)

P. .1 X10 Timing

1. Set Decade to 1, Multiplier to 10.

2. Connect counter to Sq. Amp.

3. Set counter to Time function and while adjusting .1 positive and .1 negative timing potentiometers, switch Function knob from A-B to B-A until time is adjusted to one half of dial frequency. Counter should read 500 and 500. Check to see that frequency is 1Hz ±.5%.

Q. Decades .01, .001 and .0001 Timing

1. Set Decade to .01, Multiplier to 10.

2. Connect counter to Sq. Amp.

3. Set counter to Time function and while adjusting .01 positive and .01 negative timing potentiometers switch Function knob from A-B to B-A until time is adjusted to one half of dial frequency. Counter should read 500 and 500.

4. Adjust .01 Timing adjust for .1Hz ±.5%.

5. Switch Decade to .001, adjust .001 Timing to .01Hz ±.5%.

6. Switch Decade to .0001. Adjust .0001 Timing to a frequency of .001Hz ±.5%.

R. X1 Timing for Decades 100K, 10K, 1K, 100, 10

1. Switch Decade to 100K, Multiplier to 1. Adjust 100K X1 Timing Adj. to 100KHz ±.5% as read on counter.

2. Switch Decade to 10K. Adjust 10K Timing Adj to 10KHz ±.5% as read on counter.

3. Switch Decade to 1K. Adjust 1K Timing Adj to 1KHz ±.5% as read on counter.

4. Switch Decade to 100. Adjust 100 Timing Adj to 100Hz ±.5% as read on counter.

5. Switch Decade to 10. Adjust 10 Timing Adj to 10Hz ±.5% as read on counter.

S. Check the remaining decades on the Multiplier X1 end to insure that frequency is within ±3%. If it is not, repeat steps 3.5.7 N through R.

5.3.7 TIMING (continued)

T. Check Multiplier dial tracking on all decades to insure that tracking is within ±3.5% of absolute.

5.3.8 VCF MODE CALIBRATION (Models 503A and 505A only)

A. 0 to +5V

1. Set function generator controls as follows

DECADE	1K
MULT	10
VCF MODE	0 to +5V
SWEEP	NORM
VCF INPUT VOLTAGE	+5V ±2mv

2. Adjust EXP CONTROL to obtain 1/50 of dial frequency, 200Hz ±1%.

3. Set function generator controls as follows

SWEEP	INV
INPUT VOLTAGE	+5V ±2mv

Adjust R507 until the output frequency is within ±.5% of the dial frequency, 10KHz ±.5%.

B. 0 to ±2.5V

1. Set function generator controls as follows

VCF MODE	0 to ±2.5V
SWEEP	NORMAL
EXP	FULL CW
INPUT VOLTAGE	GND

2. Adjust R505 to obtain one-half the dial frequency, 5KHz ±.5%.

3. Set function generator controls as follows

SWEEP	INV
INPUT VOLTAGE	GND

The frequency should be approximately 5% to 15% higher than in Step 2. This is normal.

4. Set function generator controls as follows

VCF MODE	0 to ±2.5V
SWEEP	NORM
INPUT VOLTAGE	+2.5V ±3mv

Adjust VCF Expansion control to obtain 200Hz ±1%.

5.3.8 VCF MODES

B. 0 to ±2.5V (continued)

5. Apply -2.5V ±3mv at VCF input. The output frequency should now be within ±2% of dialed frequency, 10KHz.

6. Set function generator controls as follows

VCF MODE	0 to ±2.5V
SWEEP	INV
INPUT VOLTAGE	-2.5V ±3mv

Adjust VCF Expansion control to obtain 200Hz ±1%.

7. Apply +2.5V ±3mv at VCF input. The output frequency should be approximately 10KHz ±.5%

C. 0 to -5V

1. Set function generator controls as follows

VCF MODE	0 to -5V
SWEEP	INV
EXP	FULL CW
INPUT VOLTAGE	GND

2. Adjust R509 to obtain 10KHz ±.5%.

3. Apply -5V ±3mv at VCF input and adjust R502 for 200Hz ±1%.

4. Set function generator controls as follows

SWEEP	NORM
INPUT VOLTAGE	-5V ±3mv

Adjust Expansion control to obtain 10KHz ±1%.

5. Apply 0 V ±3mv to VCF input and adjust R511 to obtain 200Hz ±1%.

5.3.9 SYMMETRY CONTROL CHECK (no calibration required)

A. Monitor the triangle waveform at TP280 X10 Amp output.

B. Place the SYM switch in the POS position and note that the ramp rises positive.

C. Place the SYM switch in the NEG position and note that the ramp rises negative.

D. Note that the ramp falltime is less than 10% of the total period of the waveform from .0001Hz to 10KHz.

5.3.9 SYMMETRY CONTROL CHECK (continued)

E. Place SYM switch in NORM position.

5.3.10 OFFSET CONTROL CHECK (no calibration required)

A. Monitor the triangle waveform at TP280 X10 Amp output.

B. Place offset switch in POS position and note that the frequency is doubled and that the triangle has shifted up 4V and has decreased in amplitude from 8.4V P-P to 4.2V P-P (0 to +4.2V P).

C. Place the offset switch in the NEG position and note an equal but opposite change (0 to -4.2V P).

5.3.11 LOCKOUT CALIBRATION (Models 504A and 505A only)

A. Insert the Lockout P.C. board, 443-112, and set function generator controls as follows

MODE	GATE
DECADE	100
MULT	10
OFFSET	NORM
SYM	NORM

B. Set the L.O. Level Adj mid-range and adjust level at TP280 (X10 Amp out) to 0 V with start level control on front panel. The start level should vary +4V by adjusting the start level control.

C. Depress the MAN pushbutton and note that the generator will free run as long as the button is depressed.

D. Place the Mode switch in the Trig position and note that the generator will complete one cycle each time the button is depressed.

NOTE: Scope triggering is very critical in order to observe single pulse.

E. Place the Mode switch in the Gate position. Apply an external gating signal of at least +3V. The generator will free run as long as gating signal is present.

NOTE: The external gating or triggering signal must be >+3V to "turn on" and must return to 0 V or less to "turn off."

F. Place the Mode switch in the Trig position. Apply an external signal as in previous step. The generator will complete one cycle each time the signal rises above +3V.

NOTE: As in previous step, the signal must return to 0 V or less before another signal is applied.

5.3.11 LOCKOUT CALIBRATION (continued)

G. Set function generator controls as follows

MODE	GATE
DECADE	100K
MULT	10
OFFSET	NORM
SYM	NORM

Apply an external gating signal at a frequency of 990KHz and note that the generator will gate on and off.

H. Repeat previous step in Trig position, again noting that scope triggering is very critical when observing a single pulse.

5.3.12 TRIGGER OUT CHECK

Check trigger output for differentiated square wave of greater than ±1V P open circuit.

5.3.13 SINE SHAPER CALIBRATION

A. Set Decade at 100 and Mult at 10.

B. Monitor the sine distortion at Amp 1 output.

C. Adjust Sine Shape and Sine Sym to obtain minimum distortion as indicated on distortion analyzer, <.6% .0001 to 10KHz, <1% 10KHz to 100KHz , <2% 100KHz to 1MHz.

5.3.14 SQUARE AMP CHECK (no calibration required)

A. Check for greater than 25V P-P square wave into 600Ω load.

B. Check negative and positive square for greater than 12.5V into 600Ω load.

C. Check D.C. reference level of 0 V ±100mv.

D. Check risetime and falltime for <50ns.

5.3.15 AMP 1 CALIBRATION

A. Set function generator controls as follows

MODE	RUN
DECADE	100
MULTIPLIER	10
VCF MODE	OFF
OFFSET	NORM
SYM	NORM
SWEEP	NORM
AMP 1 MODE	TRIANGLE
AMP 1 ATTEN	MAX

5.3.15 AMP 1 CALIBRATION (continued)

B. Monitor Amp 1 output.

C. Set Amp 1 attenuator to minimum amplitude, adjust Var Offset (front panel) to obtain 0 V ±50mv.

D. Set Amp 1 for a 28V P-P triangle and adjust R936 to obtain approximately 500 to 700mv voltage drop across R942 as measured with VOM.

E. Check all waveforms for greater than 25V P-P into 600Ω.

F. Check square wave rise and fall times for less than 50ns.

G. Check Var Offset for >±4V.

5.3.16 AMP 2 CALIBRATION

A. Set function generator controls as follows

MODE	RUN
DECADE	100
MULT	10
VCF MODE	OFF
OFFSET	NORM
SYM	NORM
SWEEP	NORM
AMP 2 MODE	TRI
AMP 2 ATTEN	MAX

B. Monitor Amp 2 output.

C. Set Amp 2 attenuator to minimum amplitude and adjust Var Offset (front panel) to obtain 10V ±50mv.

D. Set Amp 2 for a 28V P-P triangle and adjust R706 to obtain approximately 500 to 700mv voltage drop across R742 as measured with VOM.

E. Check all waveforms for greater than 25V P-P into 600Ω.

F. Check square wave rise and fall times for less than 150ns.

G. Check Var Offset for >±4V.

SECTION 6 PARTS LIST

MANUFACTURERS

Arco Electronics, Inc.
Manufacturing Div.
Community Drive
Great Neck, New York

Bendix Corporation
Microwave Devices, Inc.
Hurricane Road
Franklin, Indiana

Buckeye Stamping Co.
555 Marion Road
Columbus, Ohio 43207

Carling Electric, Inc.
507 New Park Avenue
W. Hartford, Ct.

Continental Device Corp.
12515 Chaldron Avenue
Hawthrone, California

Dickson Electronics Corp.
Box 1390
Scottsdale, Arizona

Elco Corporation
Maryland Rd & Computer Ave
Willow Grove, Pa.

Electra Midland Corp.
3151 Fiberglas Road
Kansas City, Kansas

Elpac, Inc.
3760 Campus Drive
Newport Beach, California

Erie Technological Prod.
644 West 12th St.
Erie, Pa. 16512

Fairchild Controls
5625 Kearny Villa Rd.
San Diego, California

IRC Div. of TRW, Inc.
Box 887
Burlington, Iowa

Kemet, Comp. Dept
Union Carbide, Inc.
13607 E. Whittier
Whittier, California

Littlefuse, Inc.
800 E. N.W. Highway
Des Plaines, Ill. 60016

Mallory, P.R. & Co.
3029 E. Washington
Indianapolis, Indiana

Miller Electric Co.
Box 231
Woonsocket, R.I.

Motorola Semiconductor
P. O. Box 955
Phoenix, Arizona

Ohmite Div.
Allen Bradley Co.
1201 S. Second
Milwaukee, Wisc.

Penn Resistor Co.
526 N. Broad St.
Lansdale, Pa. 19446

Radio Materials Co.
4242 W. Bryn Mawr Ave
Chicago, Ill 60646

Raytheon Company
Components Div.
465 Centre St.
Quincy, Mass 02169

Sangamo Electric Co.
Capacitor Div.
Box 128
Pickens, S.C. 29671

Sartron
114 N. Main
Newberg, Oregon

Stackpole Carbon Co.
Electronic Comp. Div.
St. Marys, Pa. 15857

Texas Instruments Inc.
Industrial Prod. Div.
Box 66027
Houston, Texas 77006

TRW: see IRC

Union Carbide Corp.
Electronics Div.
Box 5928
Greenville, S.C.

RESISTORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
R100	68K 1/2W comp 5% resistor	301-683	Stackpole	RC20
R101	1K 1/2W comp 5% resistor	301-102	Stackpole	RC20
R102	10K potentiometer	311-109	Mallory	MTC-4
R111	1K 1/2W comp 5% resistor	301-102	Stackpole	RC20
R112	10K potentiometer	311-109	Mallory	MTC-4
R121	1.6K 1/2W comp 5% resistor	301-162	Stackpole	RC20
R122	12K 1/2W comp 5% resistor	301-123	Stackpole	RC20
R123	4.3K 1/2W comp 5% resistor	301-432	Stackpole	RC20
R124	9.1K 1/2W comp 5% resistor	301-912	Stackpole	RC20
R131	7.5K 1/2W comp 5% resistor	301-752	Stackpole	RC20
R132	1.6K 1/2W comp 5% resistor	301-162	Stackpole	RC20
R142	100Ω potentiometer	311-099	Mallory	MTC-4
R143	1K 1/2W comp 5% resistor	301-102	Stackpole	RC20
R144	845Ω 1/4W M.F. 1% resistor	313-8450	Electra	MF5C
R151	100Ω potentiometer	311-099	Mallory	MTC-4
R161	649Ω 1/4W M.F. 1% resistor	313-6490	Electra	MF5C
R171	15K 1/2W comp 5% resistor	301-153	Stackpole	RC20
R172	20K 1/2W comp 5% resistor	301-203	Stackpole	RC20
R173	1K 1/2W comp 5% resistor	301-102	Stackpole	RC20
R181	2.7K 1/2W comp 5% resistor	301-272	Stackpole	RC20
R182	8.2K 1/2W comp 5% resistor	301-822	Stackpole	RC20
R183	1K potentiometer	311-102	Mallory	MTC-4
R184	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R185	2.49K 1/4W M.F. 1% resistor	313-2491	Electra	MF5C
R186	4.99K 1/4W M.F. 1% resistor	313-4991	Electra	MF5C
R187	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R188	392Ω 1/4W M.F. 1% resistor	313-3920	Electra	MF5C
R189	200Ω potentiometer	311-100	Mallory	MTC-4
R190	3.57K 1/4W M.F. 1% resistor	313-3571	Electra	MF5C
R191	7.5K 1/2W comp 5% resistor	301-752	Stackplle	RC20
R192	200Ω potentiometer	311-100	Mallory	MTC-4
R193	7.50K 1/4W M.F. 1% resistor	313-7501	Electra	MF5C
R194	3.57K 1/4W M.F. 1% resistor	313-3571	Electra	MF5C
R195	200Ω potentiometer	311-100	Mallory	MTC-4
R196	392Ω 1/4W M.F. 1% resistor	313-3920	Electra	MF5C
R201	10K 1/4W M.F. 1% resistor	313-1002	Electra	MF5C
R202	2.2K 1/2W comp 5% resistor	301-222	Stackpole	RC20
R210	10K 1/4W M.F. 1% resistor	313-1002	Electra	MF5C
R211	2.2K 1/2W comp 5% resistor	301-222	Stackpole	RC20
R212	221Ω 1/4W M.F. 1% resistor	313-2210	Electra	MF5C
R213	1K 1/4W M.F. 1% resistor	313-1001	Electra	MF5C
R214	3.92K 1/4W M.F. 1% resistor	313-3921	Electra	MF5C
R215	1K potentiometer	311-102	Mallory	MTC-4
R216	3.92K 1/4W M.F. 1% resistor	313-3921	Electra	MF5C
R231	470Ω 1/2W comp 5% resistor	301-471	Stackpole	RC20
R232	470Ω 1/2W comp 5% resistor	301-471	Stackpole	RC20
R233	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R234	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R235	680Ω 1/2W comp 5% resistor	301-681	Stackpole	RC20
R236	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R237	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R238	6.8K 1/2W comp 5% resistor	301-682	Stackpole	RC20

*R217 through R223: see last page of resistors

RESISTORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
R250	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R251	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R252	120Ω 1W comp 5% resistor	303-121	Stackpole	RC32
R253	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R255	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R256	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R257	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R258	120Ω 1W comp 5% resistor	303-121	Stackpole	RC32
R261	1K potentiometer	311-107	Ohmite	CMU1021
R262	39Ω 1/2W comp 5% resistor	301-390	Stackpole	RC20
R263	200Ω potentiometer	311-100	Mallory	MTC-4
R264	200Ω potentiometer	311-100	Mallory	MTC-4
R265	200Ω potentiometer	311-100	Mallory	MTC-4
R266	200Ω potentiometer	311-100	Mallory	MTC-4
R267	200Ω potentiometer	311-100	Mallory	MTC-4
R268	2K 1/4W M.F. 1% resistor	313-2001	Electra	MF5C
R269	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R270	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R271	6.8K 1/2W comp 5% resistor	301-682	Stackpole	RC20
R272	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R273	1.5K 1/2W comp 5% resistor	301-152	Stackpole	RC20
R274	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R275	18.2K 1/4W M.F. 1% resistor	313-1822	Electra	MF5C
R276	560Ω 1/2W comp 5% resistor	301-561	Stackpole	RC20
R282	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R283	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R284	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R291	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R293	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R294	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R301	12.1K 1/4W M.F. 1% resistor	313-1212	Electra	MF5C
R302	1.8K 1/2W comp 5% resistor	301-182	Stackpole	RC20
R303	100Ω potentiometer	311-099	Mallory	MTC-4
R304	3.01K 1/4W M.F. 1% resistor	313-3011	Electra	MF5C
R311	1K 1/4W M.F. 1% resistor	313-1001	Electra	MF5C
R312	442Ω 1/4W M.F. 1% resistor	313-4420	Electra	MF5C
R313	3.65K 1/4W M.F. 1% resistor	313-3651	Electra	MF5C
R315	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R321	402Ω 1/4W M.F. 1% resistor	313-4020	Electra	MF5C
R323	3.65K 1/4W M.F. 1% resistor	313-3651	Electra	MF5C
R324	500Ω potentiometer	311-101	Mallory	MTC-4
R325	4.75K 1/4W M.F. 1% resistor	313-4751	Electra	MF5C
R326	4.75K 1/4W M.F. 1% resistor	313-4751	Electra	MF5C
R327	500Ω potentiometer	311-101	Mallory	MTC-4
R341	2.7K 1/2W comp 5% resistor	301-272	Stackpole	RC20
R351	2.7K 1/2W comp 5% resistor	301-272	Stackpole	RC20
R353	1K 1/2W comp 5% resistor	301-102	Stackpole	RC20
R361	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R362	4.7K 1/2W comp 5% resistor	301-472	Stackpole	RC20
R363	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R371	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R372	4.7K 1/2W comp 5% resistor	301-472	Stackpole	RC20

RESISTORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
R373	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R380	3.6K 1/2W comp 5% resistor	301-362	Stackpole	RC20
R381	1.5K 1/2W comp 5% resistor	301-152	Stackpole	RC20
R382	2.2K 1/2W comp 5% resistor	301-222	Stackpole	RC20
R383	6.8K 1/2W comp 5% resistor	301-682	Stackpole	RC20
R384	4.7K 1/2W comp 5% resistor	301-472	Stackpole	RC20
R400	2.2K 1/2W comp 5% resistor	301-222	Stackpole	RC20
R401	6.2K 1/2W comp 5% resistor	301-622	Stackpole	RC20
R402	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R403	6.2K 1/2W comp 5% resistor	301-622	Stackpole	RC20
R404	1.6K 1/2W comp 5% resistor	301-162	Stackpole	RC20
R405	1.8K 1/2W comp 5% resistor	301-182	Stackpole	RC20
R406	10K potentiometer	311-113	Ohmite	CMU1031
R407	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R420	470Ω 1/2W comp 5% resistor	301-471	Stackpole	RC20
R421	7.5K 1/2W comp 5% resistor	301-752	Stackpole	RC20
R430	6.2K 1/2W comp 5% resistor	301-622	Stackpole	RC20
R431	1K 1/2W comp 5% resistor	301-102	Stackpole	RC20
R440	2.2K 1/2W comp 5% resistor	301-222	Stackpole	RC20
R441	7.5K 1/2W comp 5% resistor	301-752	Stackpole	RC20
R450	2.2K 1/2W comp 5% resistor	301-222	Stackpole	RC20
R451	7.5K 1/2W comp 5% resistor	301-752	Stackpole	RC20
R460	6.2K 1/2W comp 5% resistor	301-622	Stackpole	RC20
R461	3.3K 1/2W comp 5% resistor	301-332	Stackpole	RC20
R470	39K 1/2W comp 5% resistor	301-393	Stackpole	RC20
R481	2.7K 1/2W comp 5% resistor	301-272	Stackpole	RC20
R482	36K 1/2W comp 5% resistor	301-363	Stackpole	RC20
R483	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R484	100Ω potentiometer	311-099	Mallory	MTC-4
R485	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R486	27K 1/2W comp 5% resistor	301-273	Stackpole	RC20
R490	3.74K 1/4W M.F. 1% resistor	313-3741	Electra	MF5C
R492	5.6K 1/2W comp 5% resistor	301-562	Stackpole	RC20
R501	24.9K 1/4W M.F. 1% resistor	313-2492	Electra	MF5C
R502	5K potentiometer	311-103	Mallory	MTC-4
R503	19.1K 1/4W M.F. 1% resistor	313-1912	Electra	MF5C
R504	71.5K 1/4W M.F. 1% resistor	313-7152	Electra	MF5C
R505	10K potentiometer	311-109	Mallory	MTC-4
R506	14.3K 1/4W M.F. 1% resistor	313-1432	Electra	MF5C
R507	1K potentiometer	311-102	Mallory	MTC-4
R508	35.7K 1/4W M.F. 1% resistor	313-3572	Electra	MF5C
R509	5K potentiometer	311-103	Mallory	MTC-4
R510	1.8M 1/2W comp 5% resistor	301-185	Stackpole	RC20
R511	3.5M potentiometer	311-106	Mallory	MTC-4
R512	71.5K 1/4W M.F. 1% resistor	313-7152	Electra	MF5C
R513	36.5K 1/4W 1% M.F. resistor	313-3652	Electra	MF5C
R514	2K potentiometer	311-115	Mallory	MTC-4
R515	10K potentiometer	311-326	Ohmite	CB1031
R516	10K 1/4W M.F. 1% resistor	313-1002	Electra	MF5C
R517	82Ω 1/2W comp 5% resistor	301-820	Stackpole	RC20
R518	6.19K 1/4W M.F. 1% resistor	313-6191	Electra	MF5C

RESISTORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
R519	820Ω 1/2W comp 5% resistor	301-821	Stackpole	RC20
R520	6.19K 1/4W M.F. 1% resistor	313-6191	Electra	MF5C
R521	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R522	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R523	6.8M 1/2W comp 5% resistor	301-685	Stackpole	RC20
R531	100Ω potentiometer	311-099	Mallory	MTC-4
R532	4.7K 1/2W comp 5% resistor	301-472	Stackpole	RC20
R533	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R534	5.6K 1/2W comp 5% resistor	301-562	Stackpole	RC20
R541	6.8M 1/2W comp 5% resistor	301-685	Stackpole	RC20
R542	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R543	270Ω 1/2W comp 5% resistor	301-271	Stackpole	RC20
R544	31.6K 1/4W M.F. 1% resistor	313-3162	Electra	MF5C
R545	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R546	1.5M 1/2W comp 5% resistor	301-155	Stackpole	RC20
R551	6.19K 1/4W M.F. 1% resistor	313-6191	Electra	MF5C
R552	7.5K 1/2W comp 5% resistor	301-752	Stackpole	MF5C
R553	100Ω potentiometer	311-099	Mallory	MTC-4
R554	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R555	6.19K 1/4W M.F. 1% resistor	313-6191	Electra	MF5C
R556	820Ω 1/2W comp 5% resistor	301-821	Stackpole	RC20
R561	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R562	10K 1/4W M.F. 1% resistor	313-1002	Electra	MF5C
R563	500Ω potentiometer	311-101	Mallory	MTC-4
R564	10K potentiometer	311-109	Mallory	MTC-4
R565	8.45M 1/2W dep. carbon 1%	309-8454	Penn	FCA15
R566	845K 1/4W M.F. 1% resistor	313-8453	Electra	MF5C
R567	84.5K 1/4W M.F. 1% resistor	313-8452	Electra	MF5C
R568	1M potentiometer	311-111	Mallory	MTC-4
R569	100K potentiometer	311-110	Mallory	MTC-4
R570	10K potentiometer	311-109	Mallory	MTC-4
R571	100K potentiometer	311-110	Mallory	MTC-4
R572	10K potentiometer	311-109	Mallory	MTC-4
R573	10K potentiometer	311-109	Mallory	MTC-4
R574	28K 1/4W M.F. 1% resistor	313-2802	Electra	MF5C
R575	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R576	82.5K 1/4W M.F. 1% resistor	313-8252	Electra	MF5C
R581	10K 1/4W M.F. 1% resistor	313-1002	Electra	MF5C
R582	270Ω 1/2W comp 5% resistor	301-271	Stackpole	RC20
R583	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R585	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R584, R586 through R597: see last page of resistors				
R600	3.92K 1/4W M.F. 1% resistor	313-3921	Electra	MF5C
R601	200Ω potentiometer	311-100	Mallory	MTC-4
R602	1.30K 1/4W M.F. 1% resistor	313-1301	Electra	MF5C

RESISTORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
R610	3.92K 1/4W M.F. 1% resistor	313-3921	Electra	MF5C
R611	1K 1/2W comp 5% resistor	301-102	Stackpole	RC20
R612	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R613	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R614	3.9K 1/2W comp 5% resistor	301-392	Stackpole	RC20
R620	910Ω 1/2W comp 5% resistor	301-911	Stackpole	RC20
R621	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R622	3K 1/2W comp 5% resistor	301-302	Stackpole	RC20
R630	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R631	3K 1/2W comp 5% resistor	301-302	Stackpole	RC20
R640	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R641	121Ω 1/4W M.F. 1% resistor	313-1210	Electra	MF5C
R642	221Ω 1/4W M.F. 1% resistor	313-2210	Electra	MF5C
R643	267Ω 1/4W M.F. 1% resistor	313-2670	Electra	MF5C
R650	750 1/2W comp 5% resistor	301-751	Stackpole	RC20
R651	1K 1/2W comp 5% resistor	301-102	Stackpole	RC20
R652	121Ω 1/4W M.F. 1% resistor	313-1210	Electra	MF5C
R653	825Ω 1/4W M.F. 1% resistor	313-8250	Electra	MF5C
R654	221Ω 1/4W M.F. 1% resistor	313-2210	Electra	MF5C
R655	3.32K 1/4W M.F. 1% resistor	313-3321	Electra	MF5C
R656	267Ω 1/4W M.F. 1% resistor	313-2670	Electra	MF5C
R657	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R660	475Ω 1/4W M.F. 1% resistor	313-4750	Electra	MF5C
R661	562Ω 1/4W M.F. 1% resistor	313-5620	Electra	MF5C
R662	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R663	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R665	33Ω 1/2W comp 5% resistor	301-330	Stackpole	RC20
R670	3.92K 1/4W M.F. 1% resistor	313-3921	Electra	MF5C
R671	475Ω 1/4W M.F. 1% resistor	313-4750	Electra	MF5C
R672	8.25K 1/4W M.F. 1% resistor	313-8251	Electra	MF5C
R673	562Ω 1/4W M.F. 1% resistor	313-5620	Electra	MF5C
R674	2.21K 1/4W M.F. 1% resistor	313-2211	Electra	MF5C
R675	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R676	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R681	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R682	4.7K 1/2W comp 5% resistor	301-472	Stackpole	RC20
R683	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R691	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R692	4.7K 1/2W comp 5% resistor	301-472	Stackpole	RC20
R693	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R694	33Ω 1/2W comp 5% resistor	301-330	Stackpole	RC20
R695	22Ω 1/2W comp 5% resistor	301-220	Stackpole	RC20
R701	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R702	1K potentiometer	311-107	Ohmite	CMU1021
R703	619Ω 1/4W M.F. 1% resistor	313-6190	Electra	MF5C
R704	22Ω 1/2W comp 5% resistor	301-220	Stackpole	RC20
R705	560Ω 1/2W comp 5% resistor	301-561	Stackpole	RC20
R706	10K potentiometer	311-109	Mallory	MTC-4
R711	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R712	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R721	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R722	220Ω 2W comp 5% resistor	305-221	Stackpole	RC42
R723	22Ω 1/2W comp 5% resistor	301-220	Stackpole	RC20

RESISTORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
R731	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R732	825Ω 1/4W M.F. 1% resistor	313-8250	Electra	MF5C
R733	22Ω 1/2W comp 5% resistor	301-220	Stackpole	RC20
R734	619Ω 1/4W M.F. 1% resistor	313-6190	Electra	MF5C
R741	3.32K 1/4W M.F. 1% resistor	313-3321	Electra	MF5C
R742	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R743	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R751	22Ω 1/2W comp 5% resistor	301-220	Stackpole	RC20
R752	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R753	220Ω 2W comp 5% resistor	305-221	Stackpole	RC42
R754	1.82K 1/4W M.F. 1% resistor	313-1821	Electra	MF5C
R755	20K potentiometer	311-320	Beckman	78LR20K
R756	12K 1/2W comp 5% resistor	301-123	Stackpole	RC20
R801	2.7K 1/2W comp 5% resistor	301-272	Stackpole	RC20
R802	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R803	1.8K 1/2W comp 5% resistor	301-182	Stackpole	RC20
R804	2.2K 1/2W comp 5% resistor	301-222	Stackpole	RC20
R810	2Ω 1/2W comp 5% resistor	301-020	Stackpole	RC20
R811	1K 1/2W comp 5% resistor	301-102	Stackpole	RC20
R812	12K 1/2W comp 5% resistor	301-123	Stackpole	RC20
R813	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R814	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R820	10Ω 1/2W comp 5% resistor	301-100	Stackpole	RC20
R821	4.7K 1/2W comp 5% resistor	301-472	Stackpole	RC20
R822	220Ω 2W comp 5% resistor	305-221	Stackpole	RC42
R823	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R824	1.10K 1/4W M.F. 1% resistor	313-1101	Electra	MF5C
R825	1.82K 1/4W M.F. 1% resistor	313-1820	Electra	MF5C
R826	39Ω 1/2W comp 5% resistor	301-390	Stackpole	RC20
R831	150Ω 1/2W comp 5% resistor	301-151	Stackpole	RC20
R832	1.3K 1/2W comp 5% resistor	301-132	Stackpole	RC20
R833	2.7K 1/2W comp 5% resistor	301-272	Stackpole	RC20
R834	2.2K 1/2W comp 5% resistor	301-222	Stackpole	RC20
R841	1.2K 1/2W comp 5% resistor	301-122	Stackpole	RC20
R842	12K 1/2W comp 5% resistor	301-123	Stackpole	RC20
R843	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R844	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R851	1K potentiometer	311-107	Ohmite	CMU1021
R852	15Ω 1/2W comp 5% resistor	301-150	Stackpole	RC20
R853	220Ω 2W comp 5% resistor	305-221	Stackpole	RC42
R854	4.7K 1/2W comp 5% resistor	301-472	Stackpole	RC20
R855	10Ω 1/2W comp 5% resistor	301-100	Stackpole	RC20
R856	330Ω 1/2W comp 5% resistor	301-331	Stackpole	RC20
R901	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R902	619Ω 1/4W M.F. 1% resistor	313-6190	Electra	MF5C
R903	1K potentiometer	311-107	Ohmite	CMU1021
R904	22Ω 1/2W comp 5% resistor	301-220	Stackpole	RC20
R905	10Ω 1/2W comp 5% resistor	301-100	Stackpole	RC20
R911	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R912	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20

RESISTORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
R921	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R922	220Ω 2W comp 5% resistor	305-221	Stackpole	RC42
R923	22Ω 1/2W comp 5% resistor	301-220	Stackpole	RC20
R924	1K 1/4W M.F. 1% resistor	313-1001	Electra	MF5C
R925	10Ω 1/2W comp 5% resistor	301-100	Stackpole	RC20
R931	22Ω 1/2W comp 5% resistor	301-220	Stackpole	RC20
R932	619Ω 1/4W M.F. 1% resistor	313-6190	Electra	MF5C
R933	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R934	365Ω 1/4W M.F. 1% resistor	313-3650	Electra	MF5C
R935	560Ω 1/2W comp 5% resistor	301-561	Stackpole	RC20
R936	10K potentiometer		Mallory	MTC-4
R937	10Ω 1/2W comp 5% resistor	301-100	Stackpole	RC20
R941	1.10K 1/4W M.F. 1% resistor	313-1101	Electra	MF5C
R942	100Ω 1/2W comp 5% resistor	301-101	Stackpole	RC20
R943	47Ω 1/2W comp 5% resistor	301-470	Stackpole	RC20
R944	2.7K 1/2W comp 5% resistor	301-272	Stackpole	RC20
R945	20K potentiometer	311-320	Beckman	78LR20K
R951	22Ω 1/2W comp 5% resistor	301-220	Stackpole	RC20
R952	5.62K 1/4W M.F. 1% resistor	313-5621	Electra	MF5C
R953	220Ω 2W comp 5% resistor	305-221	Stackpole	RC42
R954	10Ω 1/2W comp 5% resistor	301-100	Stackpole	RC20
R217	50K potentiometer	311-104	Mallory	MTC-4
R218	316K 1/4W M.F. 1% resistor	313-3163	Electra	MF5C
R219	500K potentiometer	311-105	Mallory	MTC-4
R220	3.16M 1/2W dep.carbon 1%	309-3164	Penn	FCA15
R221	5M potentiometer	311-116	Mallory	MTC-4
R222	31.6M 3W dep.carbon 1%	314-3165	Penn	FCA30
R223	3.48K 1/4W M.F. 1% resistor	313-3481	Electra	MF5C
R584	10K potentiometer	311-109	Mallory	MTC-4
R586	1M potentiometer	311-111	Mallory	MTC-4
R587	100K potentiometer	311-110	Mallory	MTC-4
R588	10K potentiometer	311-109	Mallory	MTC-4
R589	100K potentiometer	311-110	Mallory	MTC-4
R590	10K potentiometer	311-109	Mallory	MTC-4
R591	10K potentiometer	311-109	Mallory	MTC-4
R592	28K 1/4W M.F. 1% resistor	313-2802	Electra	MF5C
R593	84.5K 1/4W M.F. 1% resistor	313-8452	Electra	MF5C
R594	8.45M 1/2W dep.carbon 1%	309-8454	Penn	FCA15
R595	845K 1/4W M.F. 1% resistor	313-8453	Electra	MF5C
R596	10K 1/2W comp 5% resistor	301-103	Stackpole	RC20
R597	82.5K 1/4W M.F. 1% resistor	313-8252	Electra	MF5C

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
	CAPACITORS			
C100	2500mf 35V electrolytic	290-034	Sangamo	500-1954-0
C110	2500mf 35V electrolytic	290-034	Sangamo	500-1954-0
C121	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C141	270pf 500V dipped mica	281-540	Arco	DM15-271J
C161	6.8mf 35V electrolytic	290-043	Dixon	D6R8GB35K
C171	270pf 500V dipped mica	281-540	Arco	DM15-271J
C181	.01mf 500V disc	283-005	RMC	SM-Z5U
C182	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C190	.01mf 500V disc	283-005	RMC	SM-Z5U
C201	8-50pf trimmer	281-022	Erie	557-013-34E
C202	270pf 500V dipped mica	281-540	Arco	DM15-271J
C203	.001mf 600V polystyrene	290-018	Mallory	SX210
C204	.01mf 600V polystyrene	290-019	Mallory	SX110
C205	1mf 100V	290-022	Elpac	B1A105J
C206	10mf 100V	285-213	TRW	X663F
C231	.01mf 500V disc	283-005	RMC	SM-Z5U
C232	39pf 500V dipped mica	281-531	Arco	DM15-390J
C233	.01mf 500V disc	283-005	RMC	SM-Z5U
C234	39pf 500V dipped mica	281-531	Arco	DM15-390J
C235	68pf 500V dipped mica	281-523	Arco	DM15-680J
C236	5pf 500V dipped mica	281-501	Arco	DM15-050A
C237	39pf 500V dipped mica	281-531	Arco	DM15-390J
C238	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C239	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C250	.01mf 500V disc	283-005	RMC	SM-Z5U
C251	.01mf 500V disc	283-005	RMC	SM-Z5U
C255	.01mf 500V disc	283-005	RMC	SM-Z5U
C256	.01mf 500V disc	283-005	RMC	SM-Z5U
C257	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C258	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C264	.01mf 500V disc	283-005	RMC	SM-Z5U
C265	10pf 500V dipped mica	281-529	Arco	DM15-100J
C266	120pf 500V dipped mica	281-534	Arco	DM15-121J
C267	.01mf 500V disc	283-005	RMC	SM-Z5U
C269	12pf 500V dipped mica	281-541	Arco	DM15-120J
C280	.01mf 500V disc	283-005	RMC	SM-Z5U
C281	.01mf 500V disc	283-005	RMC	SM-Z5U
C291	.01mf 500V disc	283-005	RMC	SM-Z5U
C292	.01mf 500V disc	283-005	RMC	SM-Z5U
C301	.01mf 500V disc	283-005	RMC	SM-Z5U
C311	8-50pf trimmer	281-022	Erie	557-013-34E
C312	47pf 500V dipped mica	281-532	Arco	DM15-470J
C350	.01mf 500V disc	283-005	RMC	SM-Z5U
C351	.01mf 500V disc	283-005	RMC	SM-Z5U
C352	.01mf 500V disc	283-005	RMC	SM-Z5U
C353	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C354	.01mf 500V disc	283-005	RMC	SM-Z5U
C361	.01mf 500V disc	283-005	RMC	SM-Z5U
C371	.01mf 500V disc	283-005	RMC	SM-Z5U

CAPACITORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
C380	68pf 500V dipped mica	281-523	Arco	DM15-680J
C381	.01mf 500V disc	283-005	RMC	SM-Z5U
C400	.01mf 500V disc	283-005	RMC	SM-Z5U
C430	120pf 500V dipped mica	281-534	Arco	DM15-121J
C440	47pf 500V dipped mica	281-532	Arco	DM15-470J
C450	47pf 500V dipped mica	281-532	Arco	DM15-470J
C460	39pf 500V dipped mica	281-531	Arco	DM15-390J
C461	22pf 500V dipped mica	281-530	Arco	DM15-220J
C470	22pf 500V dipped mica	281-530	Arco	DM15-220J
C501	270pf 500V dipped mica	281-540	Arco	DM15-271J
C541	68pf 500V dipped mica	281-523	Arco	DM15-680J
C542	22pf 500V dipped mica	281-530	Arco	DM15-220J
C543	.01mf 500V disc	283-005	RMC	SM-Z5U
C551	.01mf 500V disc	283-005	RMC	SM-Z5U
C581	68pf 500V dipped mica	281-523	Arco	DM15-680J
C620	10pf 500V dipped mica	281-529	Arco	DM15-100J
C630	10pf 500V dipped mica	281-529	Arco	DM15-100J
C641	.01mf 500V disc	283-005	RMC	SM-Z5U
C650	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C651	10pf 500V dipped mica	281-529	Arco	DM15-100J
C652	10pf 500V dipped mica	281-529	Arco	DM15-100J
C653	82pf 500V dipped mica	281-533	Arco	DM15-820J
C670	22pf 500V dipped mica	281-530	Arco	DM15-220J
C671	10pf 500V dipped mica	281-529	Arco	DM15-100J
C672	22pf 500V dipped mica	281-530	Arco	DM15-220J
C701	.01mf 500V disc	283-005	RMC	SM-Z5U
C702	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C721	.01mf 500V disc	283-005	RMC	SM-Z5U
C724	.01mf 500V disc	283-005	RMC	SM-Z5U
C731	.01mf 500V disc	283-005	RMC	SM-Z5U
C732	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C751	.01mf 500V disc	283-005	RMC	SM-Z5U
C752	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C754	.01 mf 500V disc	283-005	RMC	SM-Z5U
C801	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C802	22pf 500V dipped mica	281-530	Arco	DM15-220J
C810	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C811	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C820	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C821	.01mf 500V disc	283-005	RMC	SM-Z5U
C822	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C823	7pf 500V dipped mica	281-536	Arco	DM15-070J
C824	8pf 500V dipped mica	281-535	Arco	DM15-080J
C825	.01mf 500V disc	283-005	RMC	SM-Z5U
C831	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C832	22pf 500V dipped mica	281-530	Arco	DM15-220J
C840	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C841	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K

CAPACITORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
C850	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C851	.01 500V disc	283-005	RMC	SM-Z5U
C852	7pf 500V dipped mica	281-536	Arco	DM15-070J
C853	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C854	.01 500V disc	283-005	RMC	SM-Z5U
C855	10pf 500V dipped mica	281-529	Arco	DM15-100J
C900	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C901	.01 500V disc	283-005	RMC	SM-Z5U
C921	.01 500V disc	283-005	RMC	SM-Z5U
C922	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C923	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C924	.01 500V disc	283-005	RMC	SM-Z5U
C930	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C931	.01 500V disc	283-005	RMC	SM-Z5U
C932	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C951	.01 500V disc	283-005	RMC	SM-Z5U
C952	6.8mf 35V tantalum	290-042	Kemet	K6R8C35K
C953	6.8mf 35V tantalum	290-043	Dixon	D6R8GB35K
C954	.01mf 500V disc	283-005	RMC	SM-Z5U

DIODES

D100	MDA920A-3 rectifier	152-0920	Motorola
D101	1N4001 rectifier	152-4001	T.I.
D110	1N4001 rectifier	152-4001	T.I.
D121	1N914	152-0914	Raytheon
D161	1N914	152-0914	Raytheon
D162	1N935A zener diode	152-0935A	Motorola
D181	1N4001 rectifier	152-4001	T.I.
D191	1N4001 rectifier	152-4001	T.I.
D230	1N5242 12V 5% zener	152-5242	Motorola
D250	1N1541	152-1541	C.D.C.
D255	1N1541	152-0541	C.D.C.
D256	1N5242 12V 5% zener	152-5242	Motorola
D261 through D356:	1N914	152-0914	Raytheon
D357-8	1N752A zener	152-0752A	T.I.
D359 through D403:	1N914	152-0914	Raytheon
D420	1N753A zener	152-0753A	T.I.
D421 through D481:	1N914	152-0914	Raytheon
D482	1N753A zener	152-0753A	T.I.
D483	1N914	152-0914	Raytheon
D484	1N1541	152-0541	C.D.C.
D485	1N914	152-0914	Raytheon

DIODES

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG. PART
D501	1N752A zener	152-0752A	Motorola	
D541-2	1N914	152-0914	Raytheon	
D561	1N752A zener	152-0752A	Motorola	
D581	1N914	152-0914	Raytheon	
D640	1N935A zener	152-0935A	Motorola	
D641-2-3	1N914	152-0914	Raytheon	
D650	1N5241 5% 11V zener	152-5241	Raytheon	
D651 through D690:	1N914	152-0914	Raytheon	
D701 through D751:	1N914 matched	153-0003	Raytheon	
D801	1N914	152-0914	Raytheon	
D802	1N753A 6.2V zener	152-0753A	T.I.	
D811	1N914	152-0914	Raytheon	
D812	TI55	152-0055	T.I.	
D813, 821, 831:	1N914	152-0914	Raytheon	
D832	1N753A 6.2V zener	152-0753A	T.I.	
D840	1N914	152-0914	Raytheon	
D841	TI55	152-055	T.I.	
D842, 851	1N914	152-0914	Raytheon	
D901 through D951:	1N914 matched	153-0003	Raytheon	

TRANSISTORS

Q100	2N4898 PNP	156-4898	Motorola	
Q110	2N4910 NPN	156-4910	Motorola	
Q120	2N4121 PNP	156-4121	Fairchild	
Q130	TIS87 NPN	156-0087	T.I.	
Q140	2N4910 NPN	156-4910	Motorola	
Q150	2N4898 PNP	156-4898	Motorola	
Q160	TIS87 NPN	156-0087	T.I.	
Q170	2N4121 PNP	156-4121	Fairchild	
Q180	TIS87 NPN	156-0087	T.I.	
Q190	2N4121 PNP	156-4121	Fairchild	
Q200	F5085A matched P channel FET	157-0005	Union Carbide	
Q210	F5085A matched P channel FET	157-0005	Union Carbide	
Q230	CA3030 IC	158-0008	RCA	
Q250	TIS87	156-0087	T.I.	
Q255	2N4121 PNP	156-4121	Fairchild	
Q260	CA3030 IC	158-0008	RCA	
Q280	TIS87 NPN	156-0087	T.I.	
Q290	2N4121 PNP	156-4121	Fairchild	
Q300	2N4121 PNP	156-4121	Fairchild	
Q310	2N4121 matched PNP	157-4121	Fairchild	
Q320	2N4121 matched PNP	157-4121	Fairchild	
Q340, 350, 360:	TIS87 NPN	156-0087	T.I.	
Q370	2N4121 PNP	156-4121	Fairchild	
Q380	TIS87 NPN	156-0087	T.I.	

TRANSISTORS

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG PART
Q400 through Q490:	TIS87	156-0087	T.I.	
Q500	2N4045 dual NPN	156-4045	Union Carbide	
Q530	TIS87 NPN	156-0087	T.I.	
Q540	2N4121 PNP	156-4121	Fairchild	
Q550-560	2N4121 PNP matched	157-4121	Fairchild	
Q580	TIS87 NPN	156-0087	T.I.	
Q600, 610	TIS87 NPN transistor	156-0087	T.I.	
Q620 through Q660:	2N4121 PNP	156-4121	Fairchild	
Q670	TIS87 NPN	156-0087	T.I.	
Q680	2N2219 NPN	156-2219	T.I.	
Q690	2N2905 PNP	156-2905	T.I.	
Q700	2N2219 NPN matched	157-0007	T.I.	
Q710	2N2905 PNP matched	157-0007	T.I.	
Q720	2N2219 NPN	156-2219	T.I.	
Q730	2N2905 PNP matched	157-0007	T.I.	
Q740	2N2219 NPN matched	157-0007	T.I.	
Q750	2N2905 PNP	156-2905	T.I.	
Q800	TIS87 NPN	156-0087	T.I.	
Q810	2N4121 PNP	156-4121	Fairchild	
Q820	2N2219 NPN	156-2219	T.I.	
Q830	2N4121 PNP	156-4121	Fairchild	
Q840	TIS87 NPN	156-0087	T.I.	
Q850	2N2905 PNP	156-2905	T.I.	
Q900	2N2219 NPN	156-2219	T.I.	
Q910	2N2905 PNP	156-2905	T.I.	
Q920	2N2219 NPN	156-2219	T.I.	
Q930	2N2905 PNP	156-2905	T.I.	
Q940	2N2219 NPN	156-2219	T.I.	
Q950	2N2905 PNP	156-2905	T.I.	

SWITCHES

S100	power, SPDT	260-103	Alco	MST 105D
S200	decade, 6-p 2-11 pos (s)	260-089	Oak	399736K
S300	offset, 3-p 3-pos (s)	260-090	Oak	½" subminiatu
S400	mode, 4-p 4-pos (ns)	260-084		
S401	man.-pushbutton SPDT (M)	260-086	Alco	MSP 105F
S500	sweep 3pdt	260-087	Alco	MST 305D
S501	VCF mode	260-084		
S560	symmetry 3-p 3-pos (s)	260-090	Oak	½" subminiatu
S700	Amp 2 output 1-p 11-pos (ns)	260-085		
S810	Sq Amp output "	260-085		
S900	Amp 1 output "	260-085		

CIRCUIT REF	DESCRIPTION	EXACT PART	MFG.	MFG PART
J380	connector - BNC	131-046	Bendix	667-6
J400	connector - Elco	131-031	Elco #02-027-013-5-200	
J401	connector - BNC	131-046	Bendix	667-6
J500	connector - BNC	131-046	Bendix	667-6
J501	connector - Elco	131-032	Elco #02-038-013-5-200	
J721	connector - BNC	131-046	Bendix	667-6
J821	connector - BNC	131-046	Bendix	667-6
J921	connector - BNC	131-046	Bendix	667-6
P100	power cord	161-016	Miller Elec	E-1894
P400	connector - Elco	131-029	Elco #02-027-114-3-200	
P501	connector - Elco	131-030	Elco #02-038-114-3-200	
F100	fuse 1/2amp SloBlo 3AG	159-024	Littlefuse	
DS100	lamp, neon	136-045	Alco	BNF-2
T100	transformer	120-030	Sartron	4184

SECTION 7 SCHEMATICS

7.1.0	BLOCK DIAGRAM
7.1.1	P.C. ASSEMBLY, MAIN BOARD 500A, 503A, 504A, 505A
7.1.2	P.C. ASSEMBLY, VCF BOARD
7.1.3	P.C. ASSEMBLY, GATE LOCKOUT
7.2.0	POWER SUPPLY
7.3.0	INTEGRATOR
7.4.0	X10 AMPLIFIER
7.5.0	LEVEL DETECTOR
7.6.0	VCF AMPLIFIER
7.7.0	LOCKOUT AMPLIFIER
7.8.0	SINE SHAPER
7.9.0	AMPLIFIER 2
7.10.0	SQUARE AMPLIFIER
7.11.0	AMPLIFIER 1
7.12.0	TIMING AND FEEDBACK CIRCUITRY

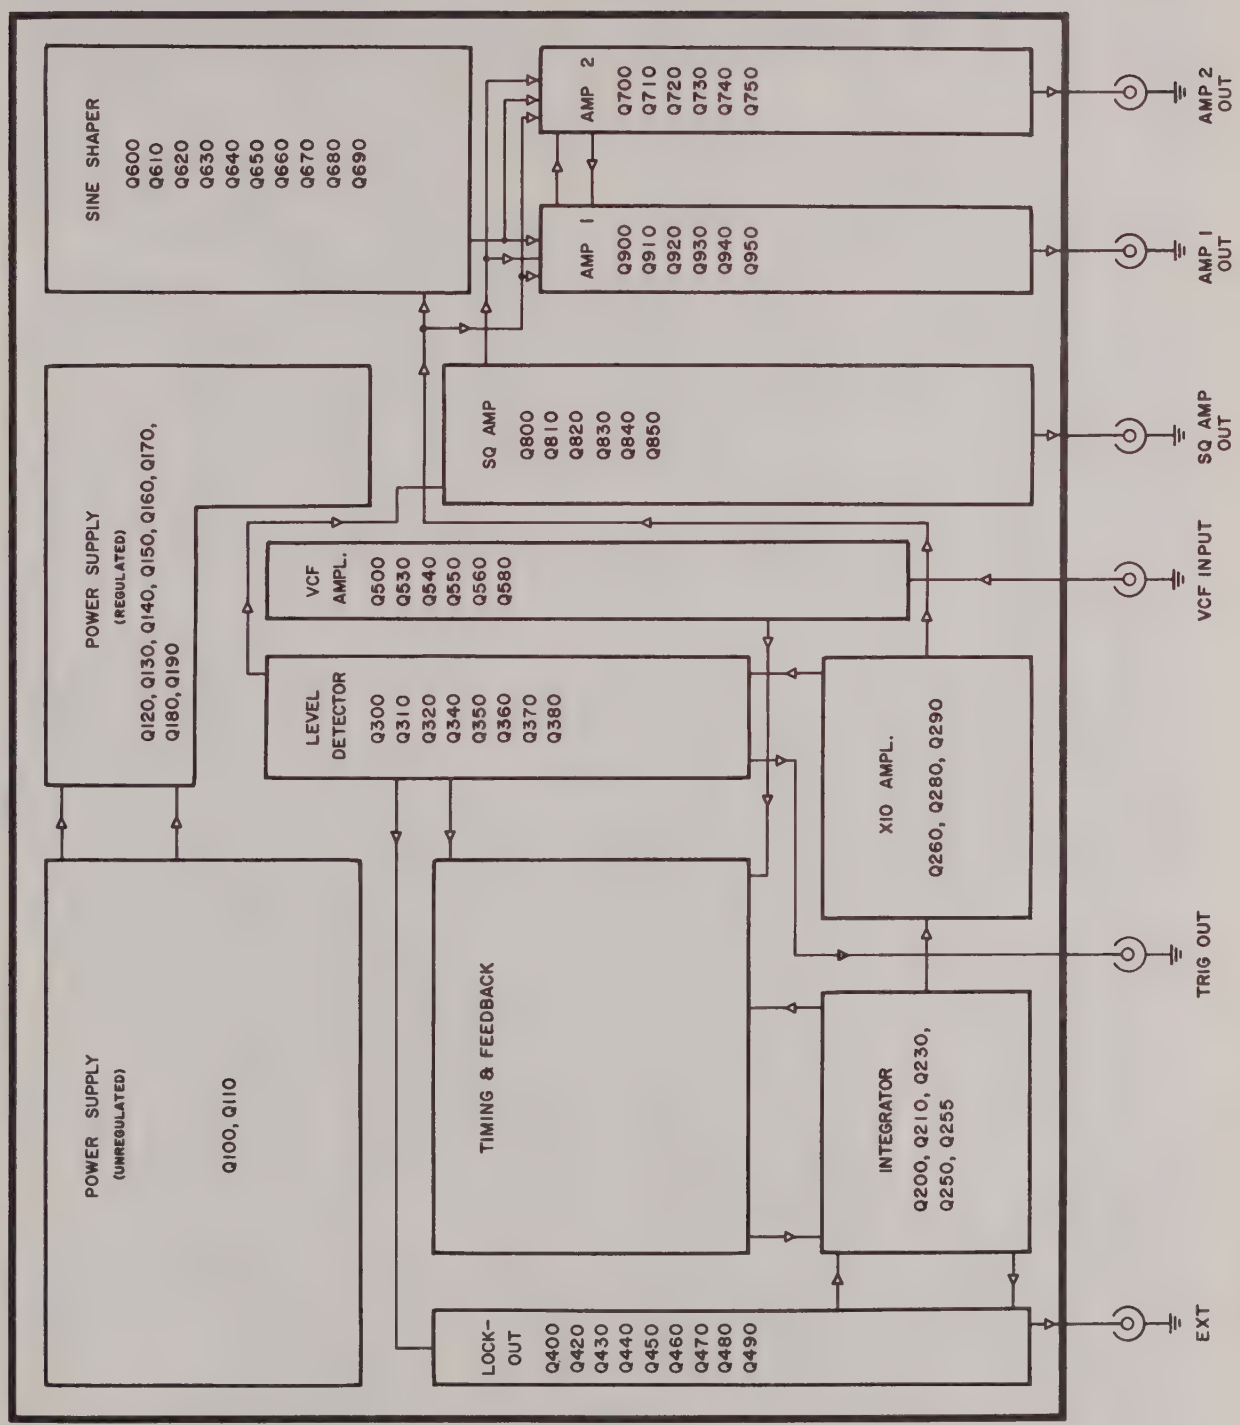

FIG. 7.1.0
BLOCK DIAGRAM

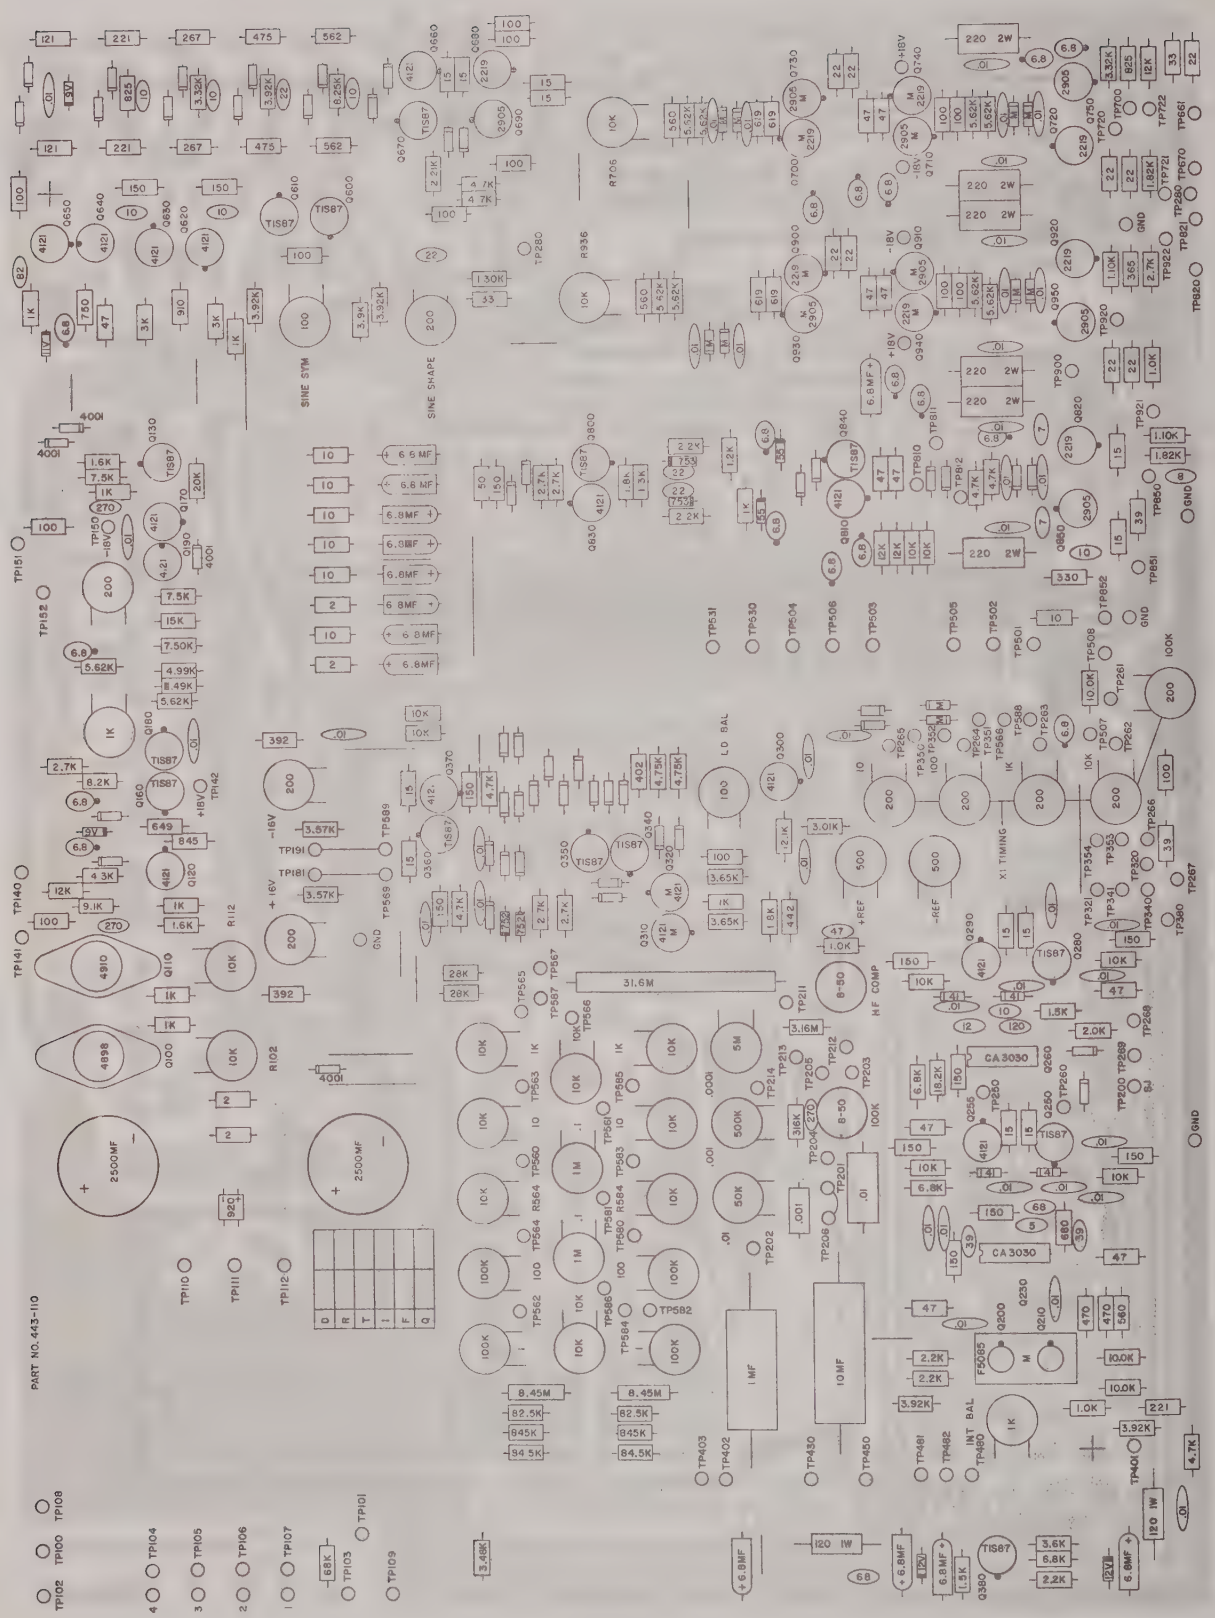
PART NO. 443-110
SINE SYM
SINE SHAPE
LO BAL
HF COMP
INT BAL
X1 TIMING
CA 3030
CA 3030
+REF
-REF
TP100
TP101
TP102
TP103
TP104
TP105
TP106
TP107
TP108
TP109
TP110
TP111
TP112
TP140
TP141
TP142
TP150
TP151
TP152
TP181
TP191
TP403
TP402
TP430
TP450
TP480
TP481
TP482
TP500
TP501
TP502
TP503
TP504
TP505
TP506
TP507
TP508
TP530
TP531
TP560
TP561
TP562
TP563
TP564
TP565
TP566
TP567
TP569
TP582
TP583
TP584
TP585
TP586
TP587
TP589
TP201
TP202
TP203
TP204
TP205
TP206
TP211
TP212
TP213
TP214
TP250
TP260
TP261
TP262
TP263
TP265
TP266
TP267
TP280
TP300
TP320
TP321
TP341
TP350
TP351
TP352
TP353
TP354
TP360
TP400
TP401
TP420
TP421
TP440
TP441
TP460
TP461

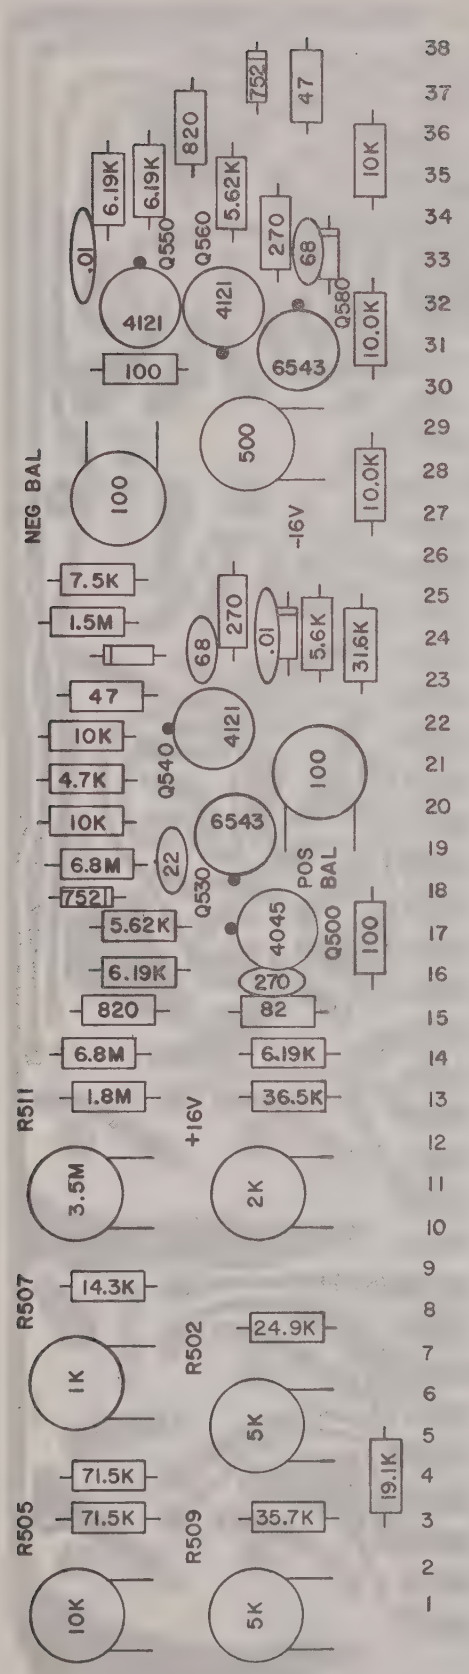

FIG 7.1.2
P.C. ASSEMBLY VCF BOARD

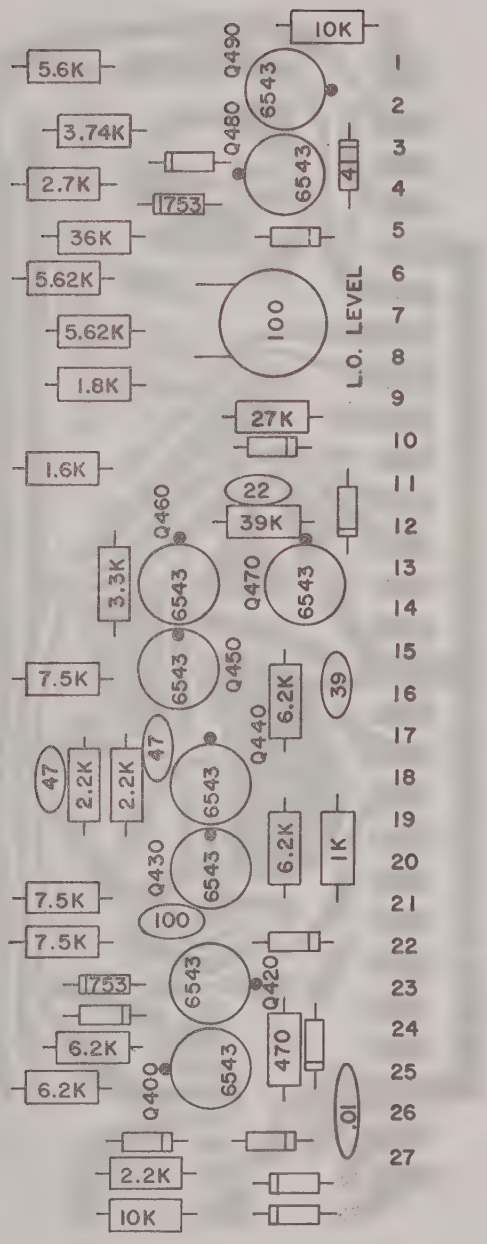

FIG 7.1.3
P.C. ASSEMBLY GATE LOCKOUT BOARD

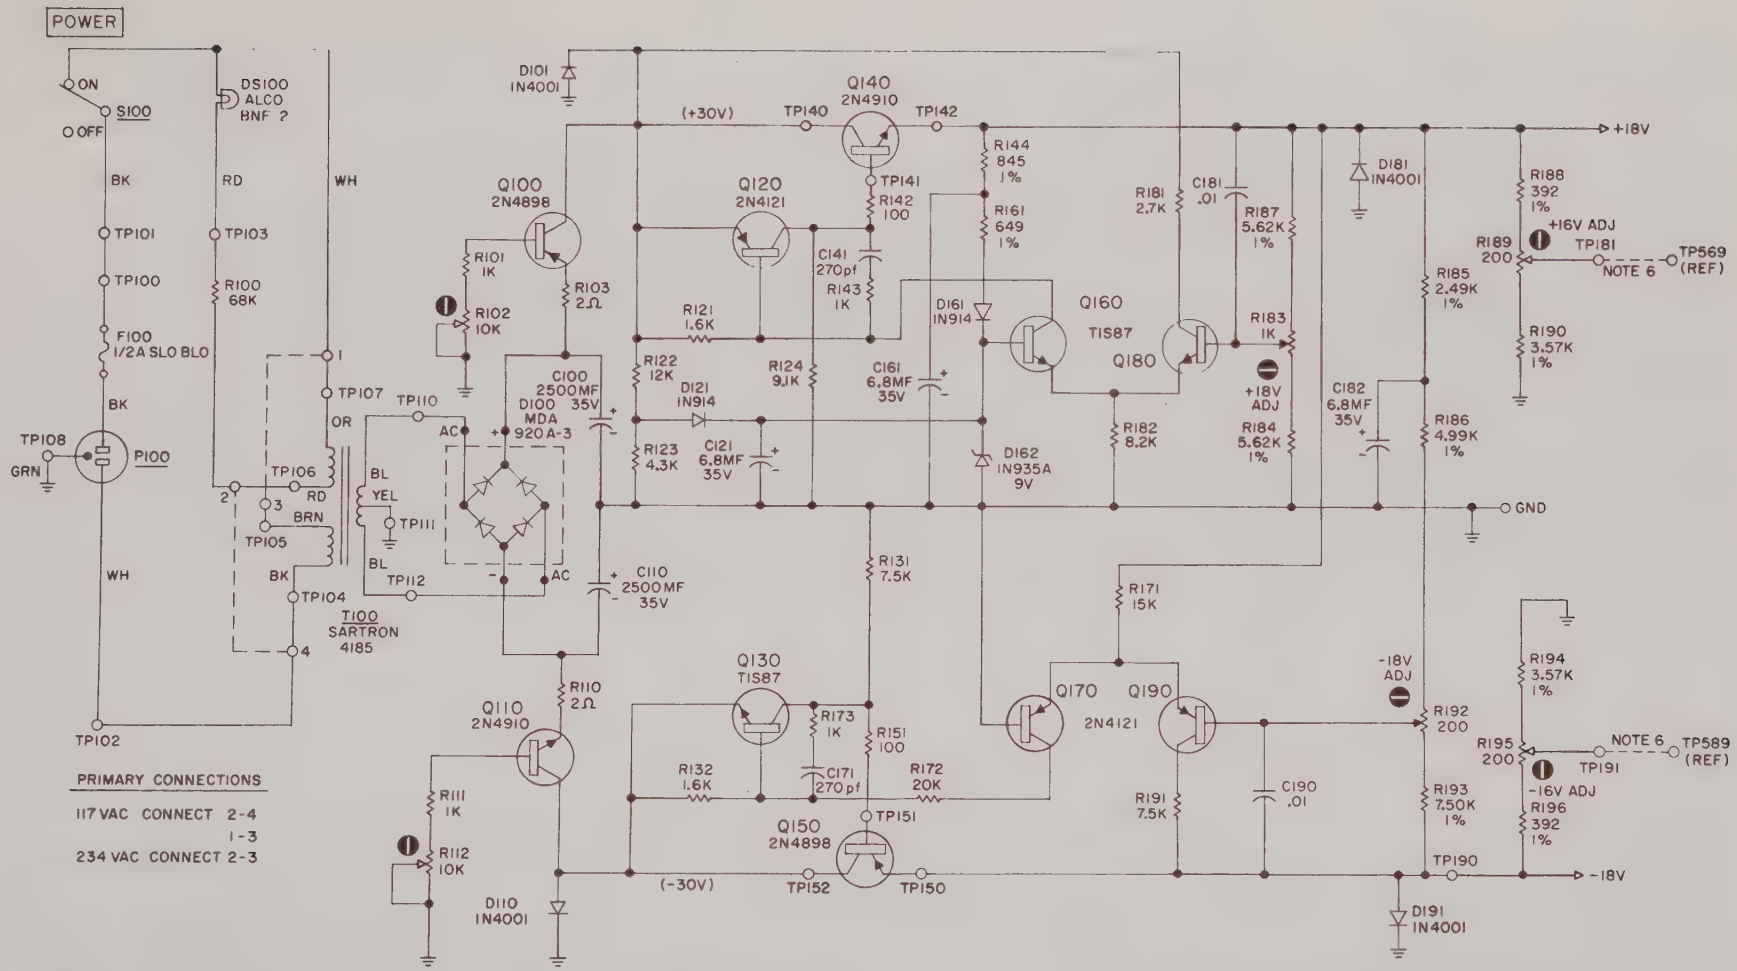

PRIMARY CONNECTIONS

117 VAC CONNECT 2-4
1-3
234 VAC CONNECT 2-3

6 JUMPER USED IN MODELS 500A, 504A ONLY
5 TIS87 PIN CONFIGURATION (BOTTOM VIEW)
4 ALL 1% RESISTORS 1/4W
3 ALL RESISTORS 1/2W 5%
2 ALL CAPACITORS MARKED IN MF
1 ALL RESISTORS MARKED IN OHMS
NOTES: UNLESS OTHERWISE INDICATED

FIG. 7.2.0
SCHEMATIC DIAGRAM — POWER SUPPLY

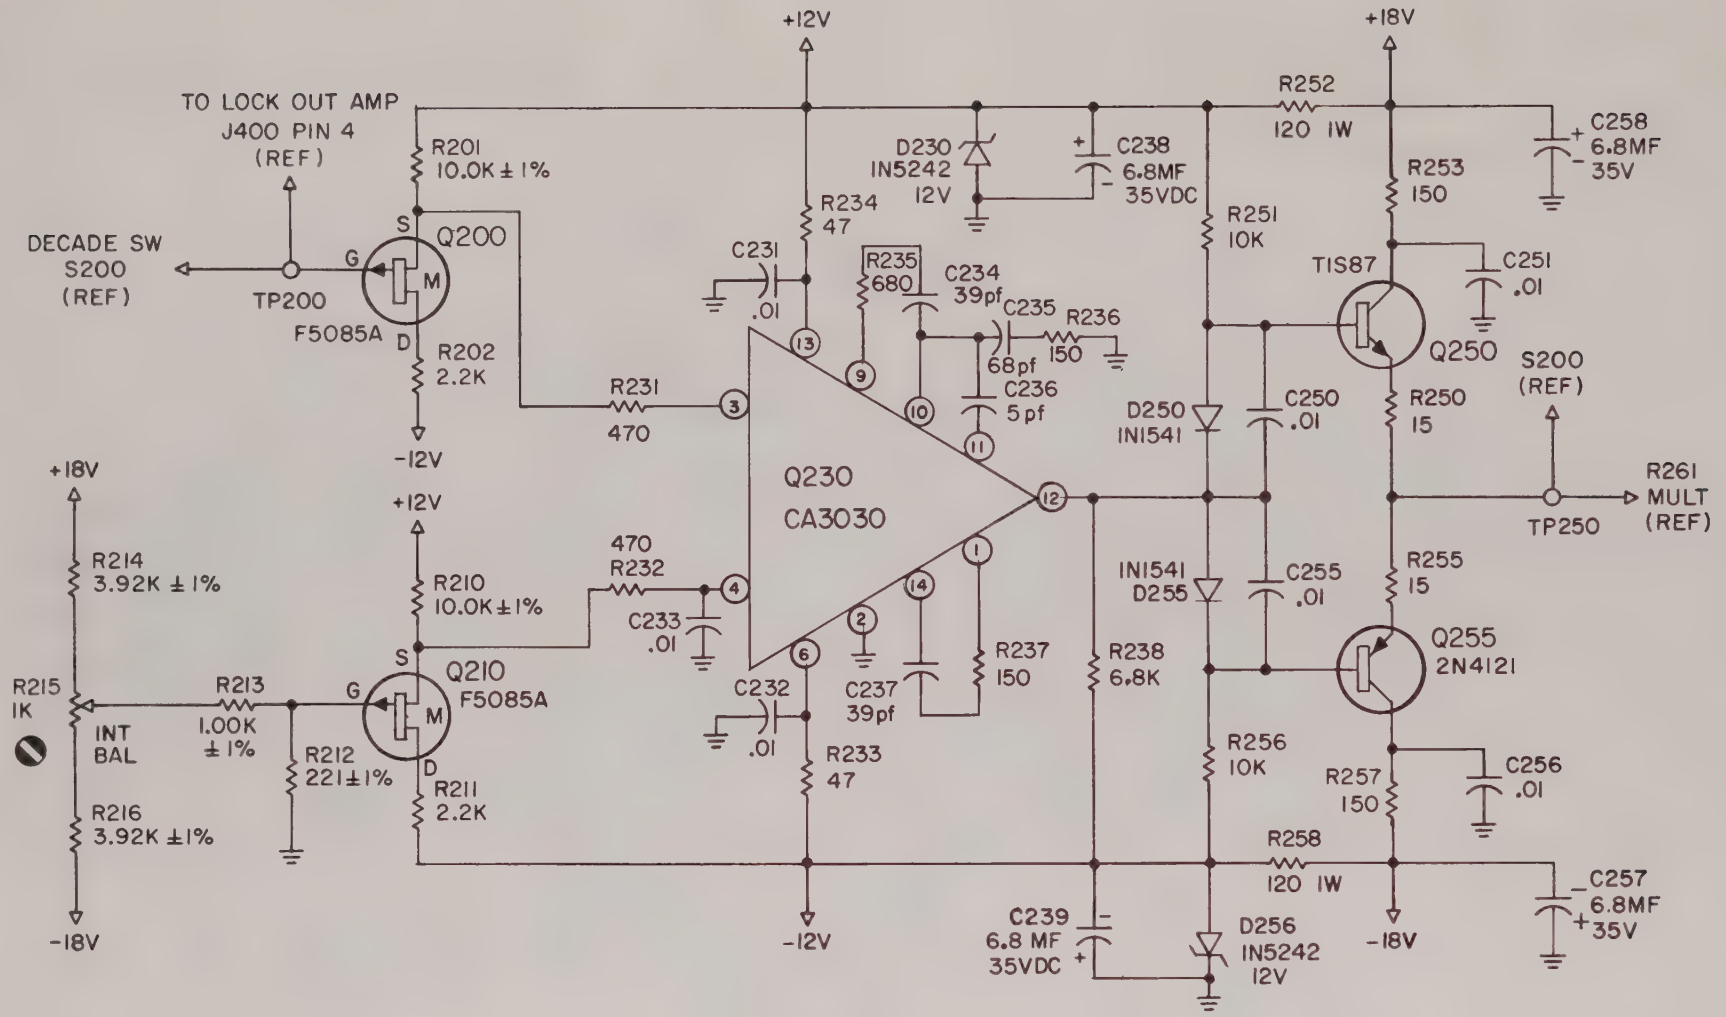

FIG. 7.3.0
SCHEMATIC DIAGRAM — INTEGRATOR

5. TIS87 PIN CONFIGURATION (BOTTOM VIEW)

4. ALL CAPACITORS IN MF
3. ALL 1% RESISTORS 1/4W
2. ALL RESISTORS 1/2W ±5%
1. ALL RESISTORS MARKED IN OHMS

NOTES: UNLESS OTHERWISE INDICATED

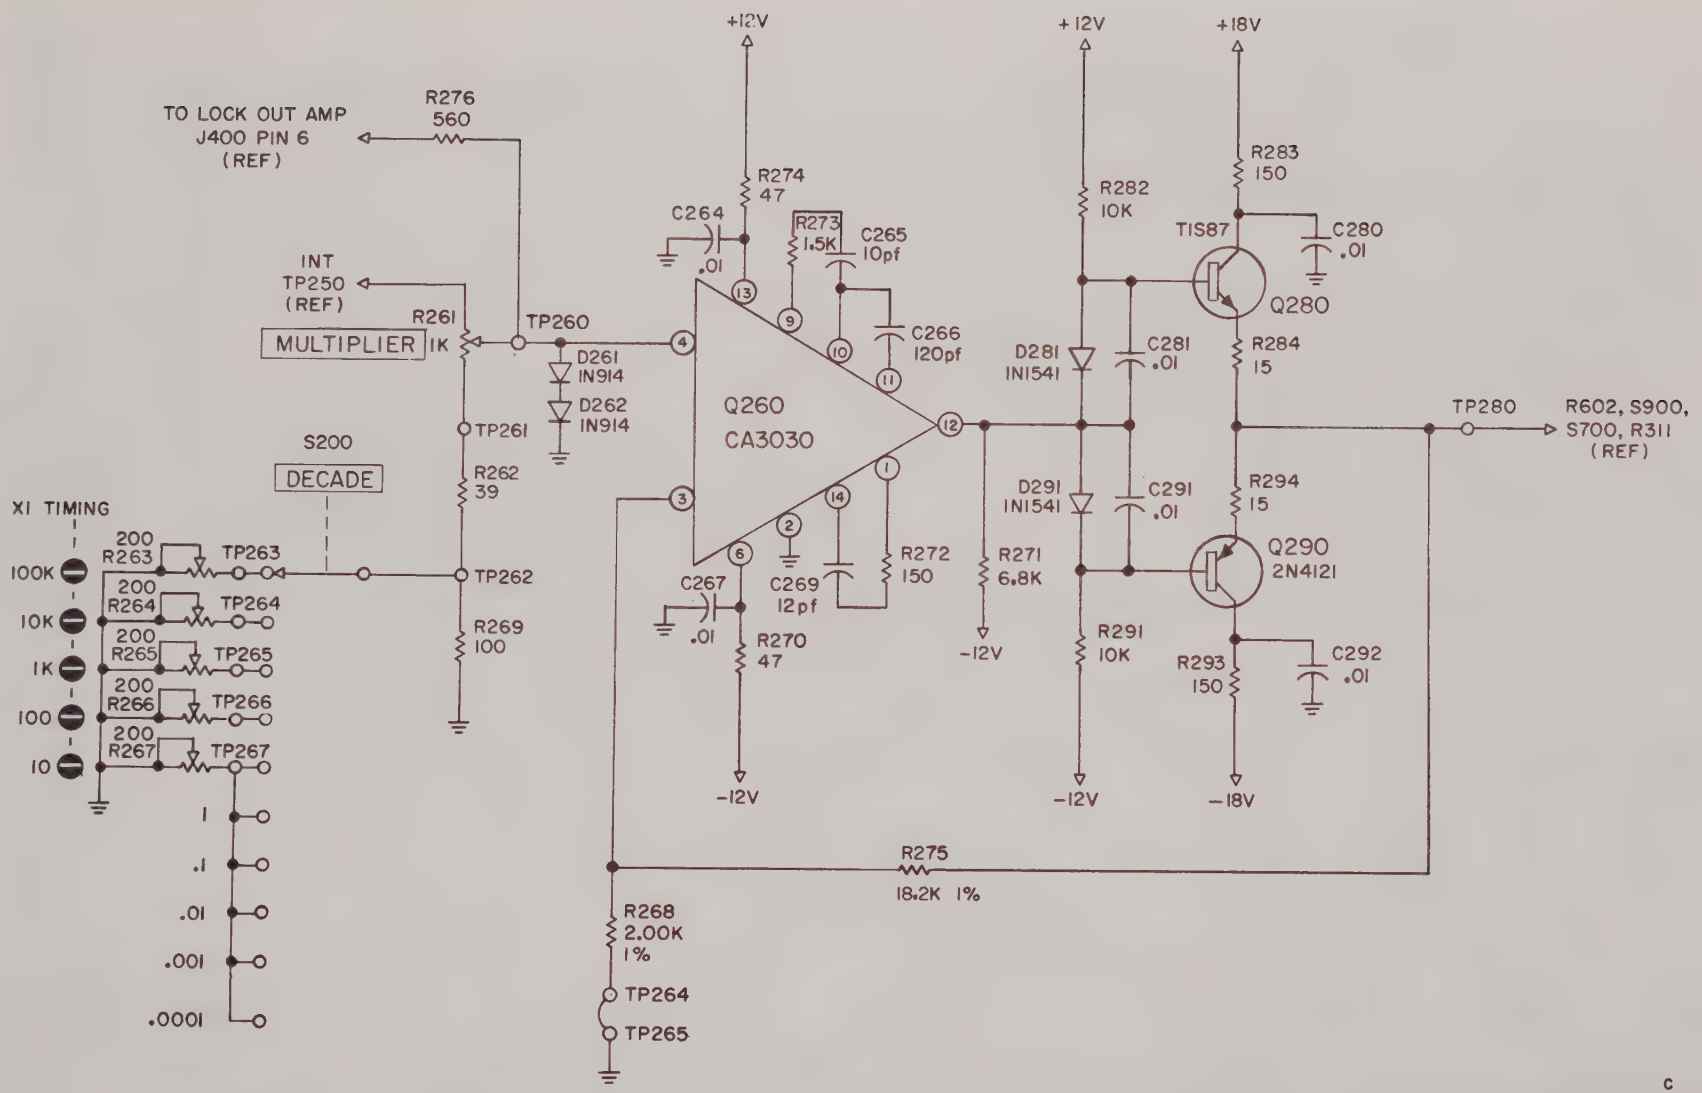

FIG. 7.4.0
SCHEMATIC DIAGRAM — X10 AMPLIFIER

5 TIS87 PIN CONFIGURATION (BOTTOM VIEW)

4. ALL CAPACITORS IN MF
3. ALL 1% RESISTORS 1/4 W
2. ALL RESISTORS 1/2 W 5%
1. ALL RESISTORS MARKED IN OHMS

NOTES: UNLESS OTHERWISE INDICATED

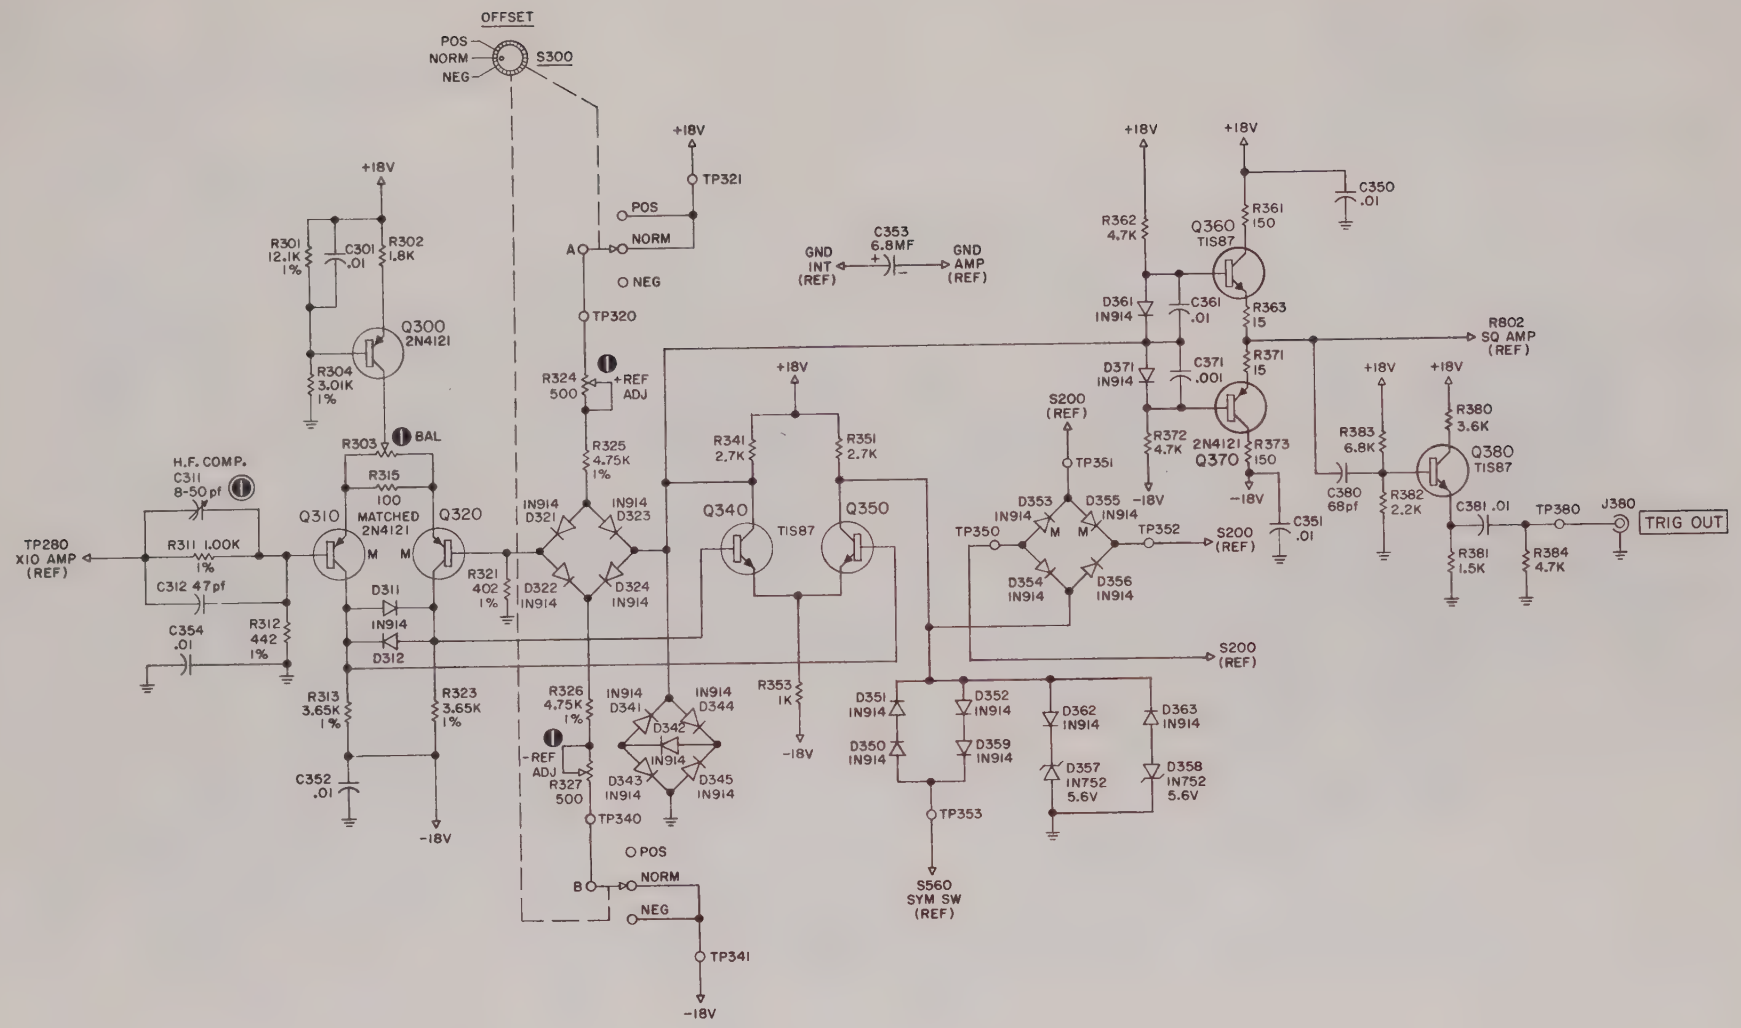

FIG. 7.5.0
SCHEMATIC DIAGRAM -- LEVEL DETECTOR

6. M DENOTES MATCHED COMPONENTS
5. TIS87 PIN CONFIGURATION (BOTTOM VIEW)
4. ALL CAPACITORS MARKED IN MF
3. ALL 1% RESISTORS 1/4W
2. ALL RESISTORS 1/2W 5%
1. ALL RESISTORS MARKED IN OHMS
NOTES: UNLESS OTHERWISE INDICATED

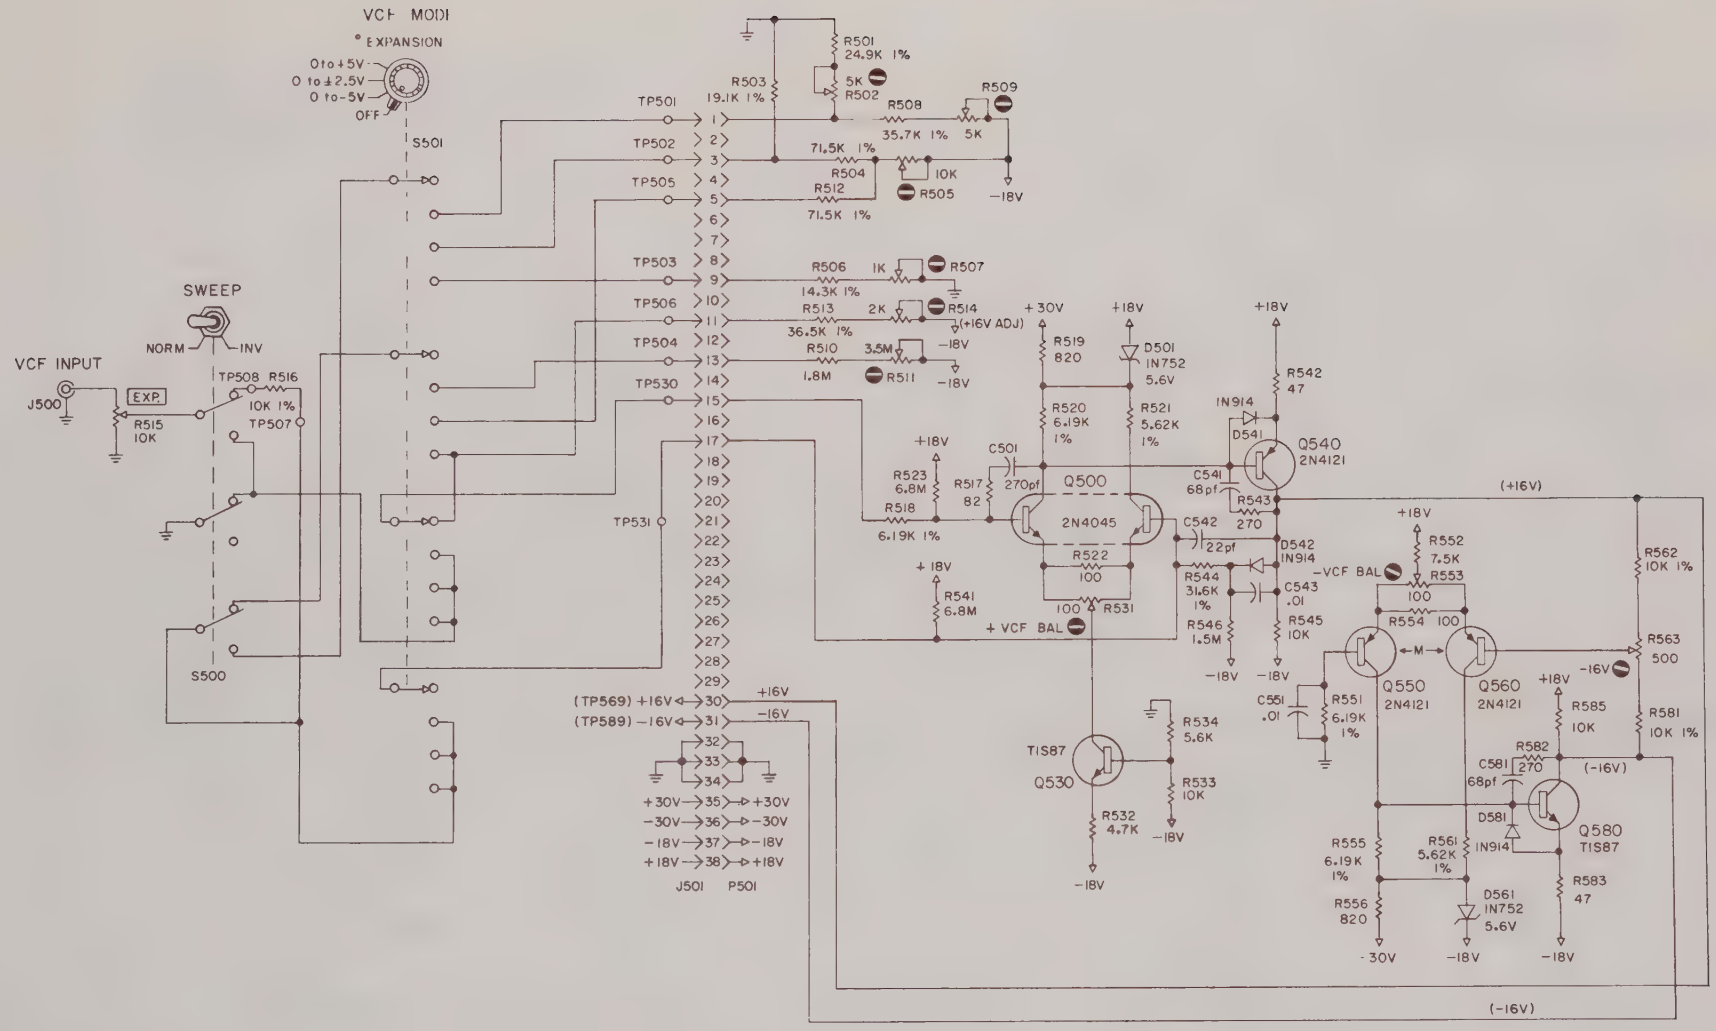

FIG. 7.6.0
SCHEMATIC DIAGRAM VCF AMPLIFIER

6 TIS87 PIN CONFIGURATION (BOTTOM VIEW)

5. M DENOTES MATCHED COMPONENTS
4. ALL CAPACITORS IN MF
3. ALL 1% RESISTORS 1/4W
2. ALL RESISTORS 1/2W 5%
1. ALL RESISTORS MARKED IN OHMS

NOTES: UNLESS OTHERWISE INDICATED

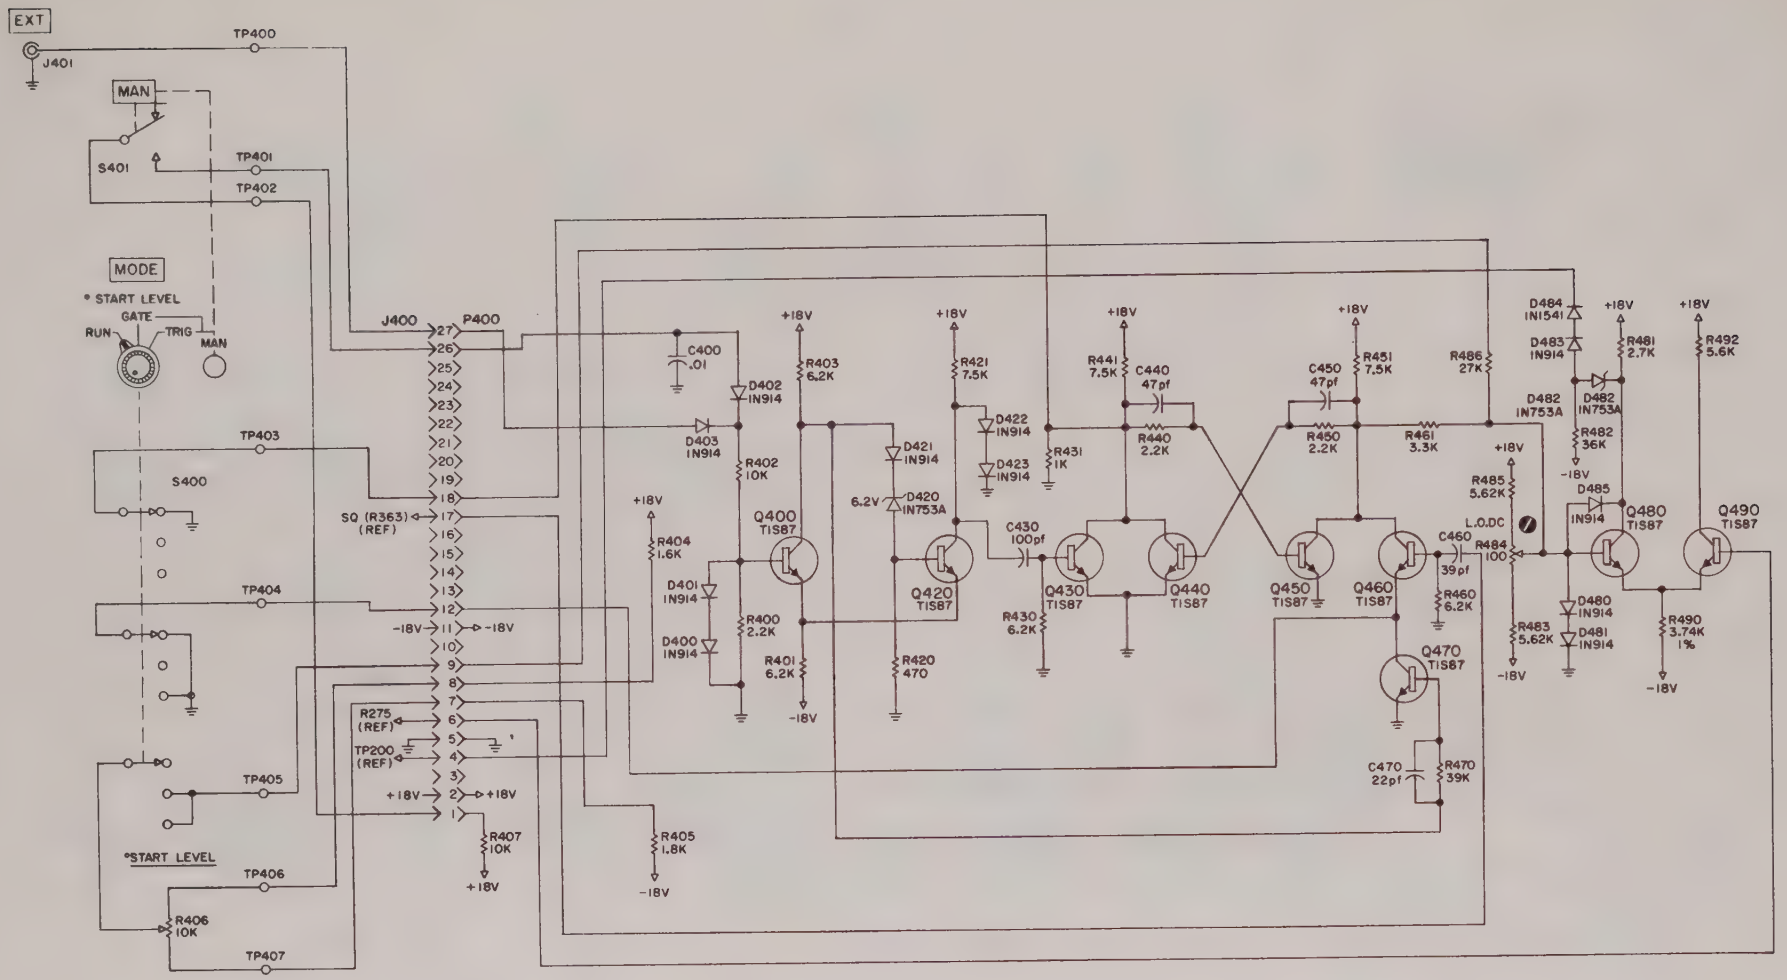

FIG. 7.7.0
SCHEMATIC DIAGRAM -- LOCKOUT AMPLIFIER

5 TIS87 PIN CONFIGURATION (BOTTOM VIEW)
4 ALL CAPACITORS MARKED IN MF
3 ALL 1% RESISTORS 1/4W
2 ALL RESISTORS 1/2W 5%
1 ALL RESISTORS MARKED IN OHMS
NOTES UNLESS OTHERWISE INDICATED

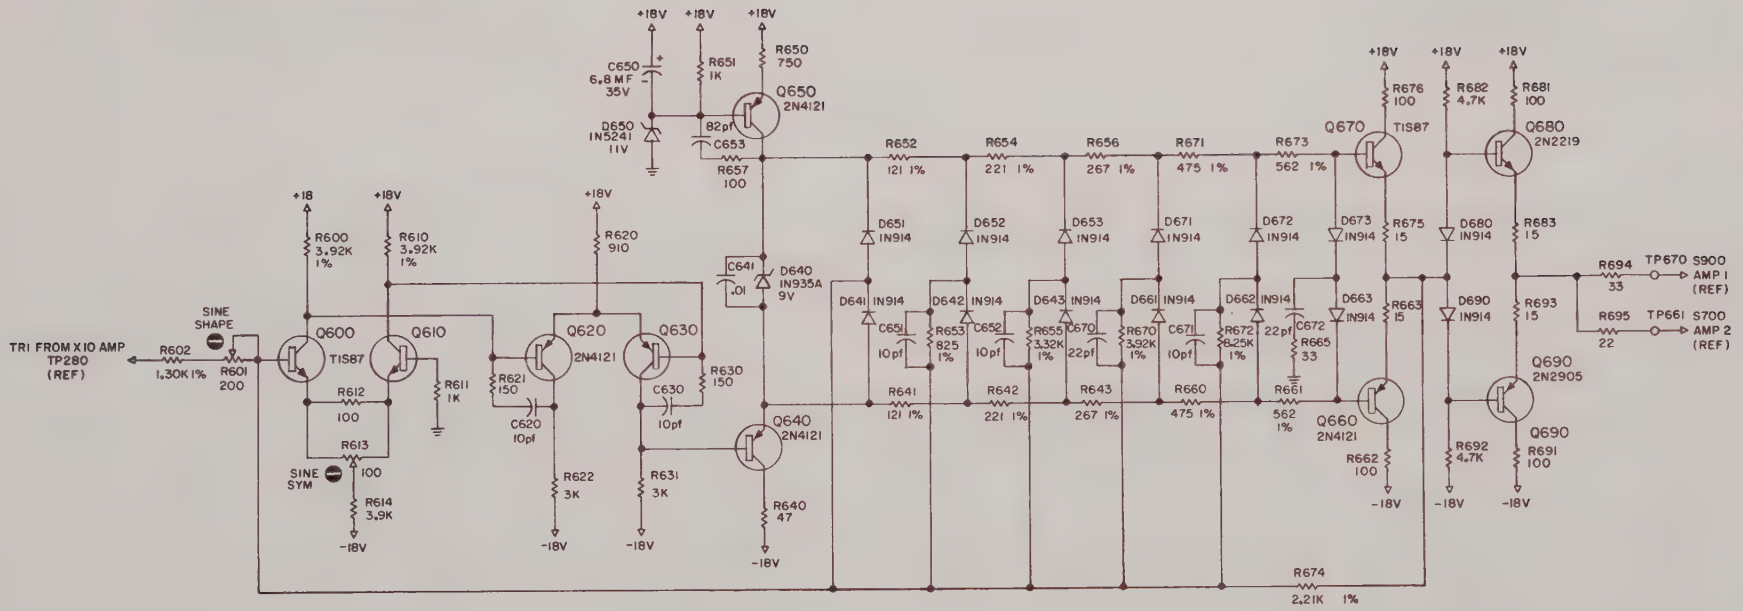

FIG. 7.8.0
SCHEMATIC DIAGRAM — SINE SHAPER

5. TIS87 PIN CONFIGURATION (BOTTOM VIEW)
4. ALL CAPACITORS IN MF
3. ALL 1% RESISTORS 1/4W
2. ALL RESISTORS 1/2W ±5%
1. ALL RESISTORS MARKED IN OHMS
NOTES: UNLESS OTHERWISE INDICATED

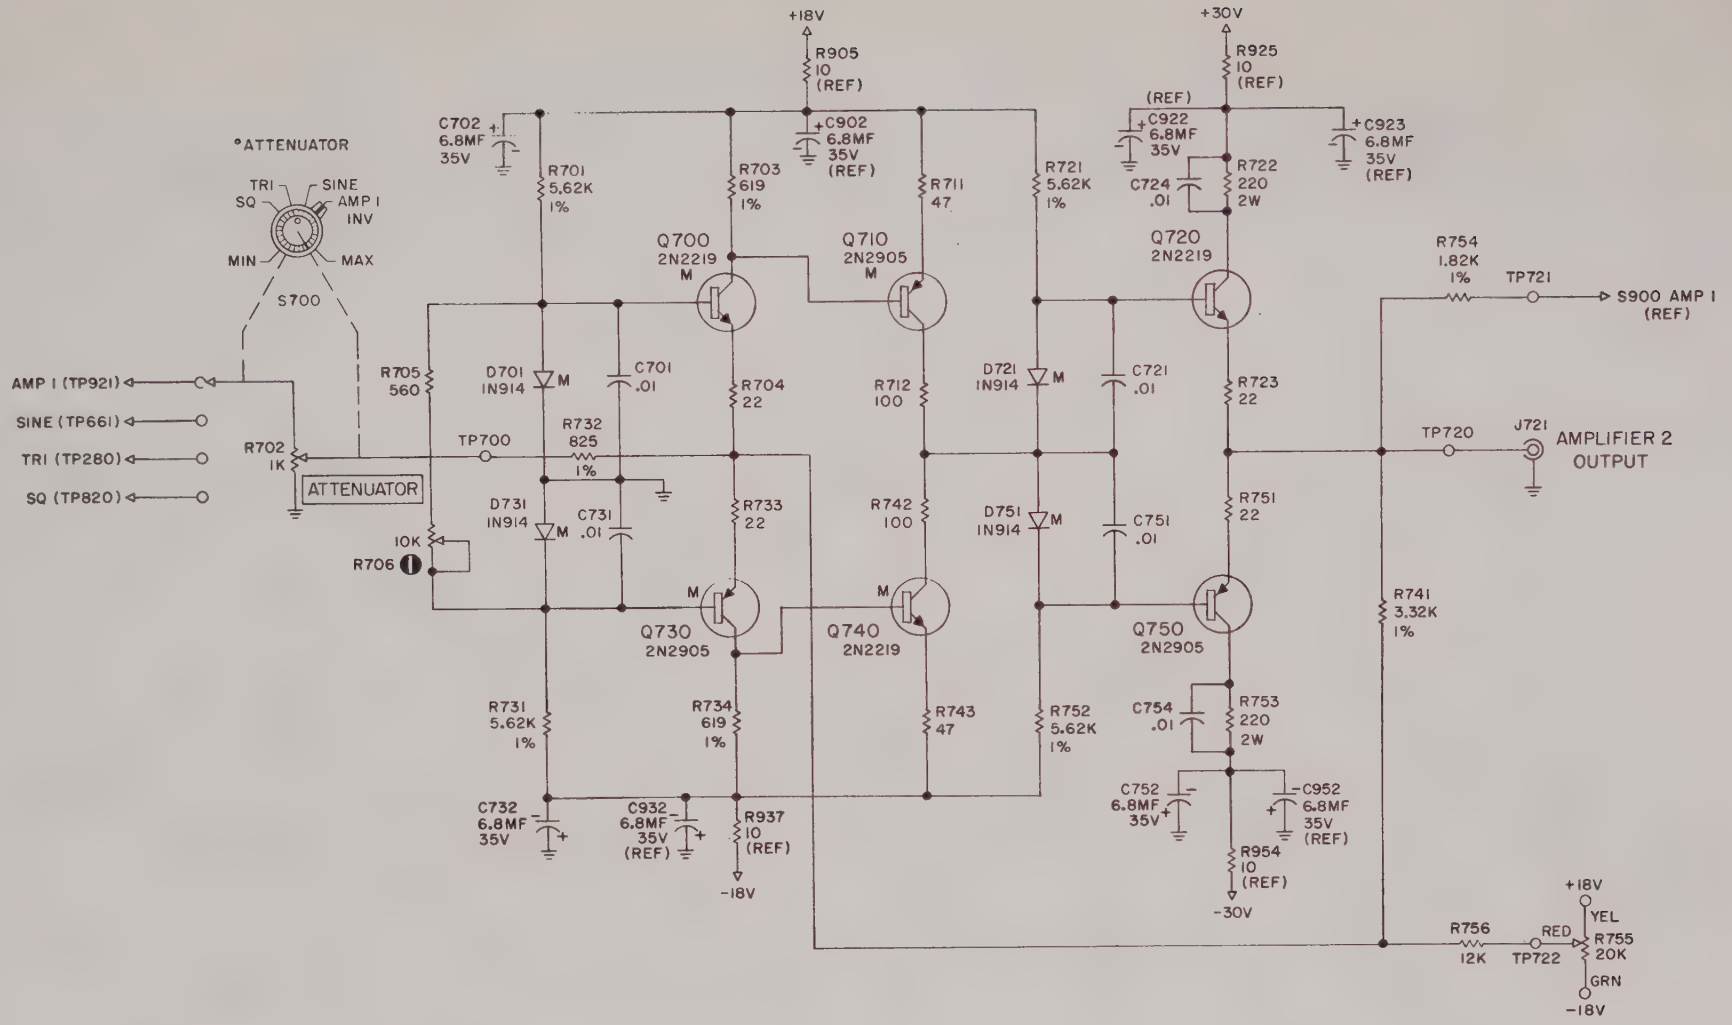

FIG. 7.9.0
SCHEMATIC DIAGRAM — AMP 2

5. M DENOTES MATCHED COMPONENTS
4. ALL 1% RESISTORS 1/4W
3. ALL RESISTORS 1/2W 5%
2. ALL CAPACITORS MARKED IN MF
1. ALL RESISTORS MARKED IN OHMS
NOTES: UNLESS OTHERWISE INDICATED

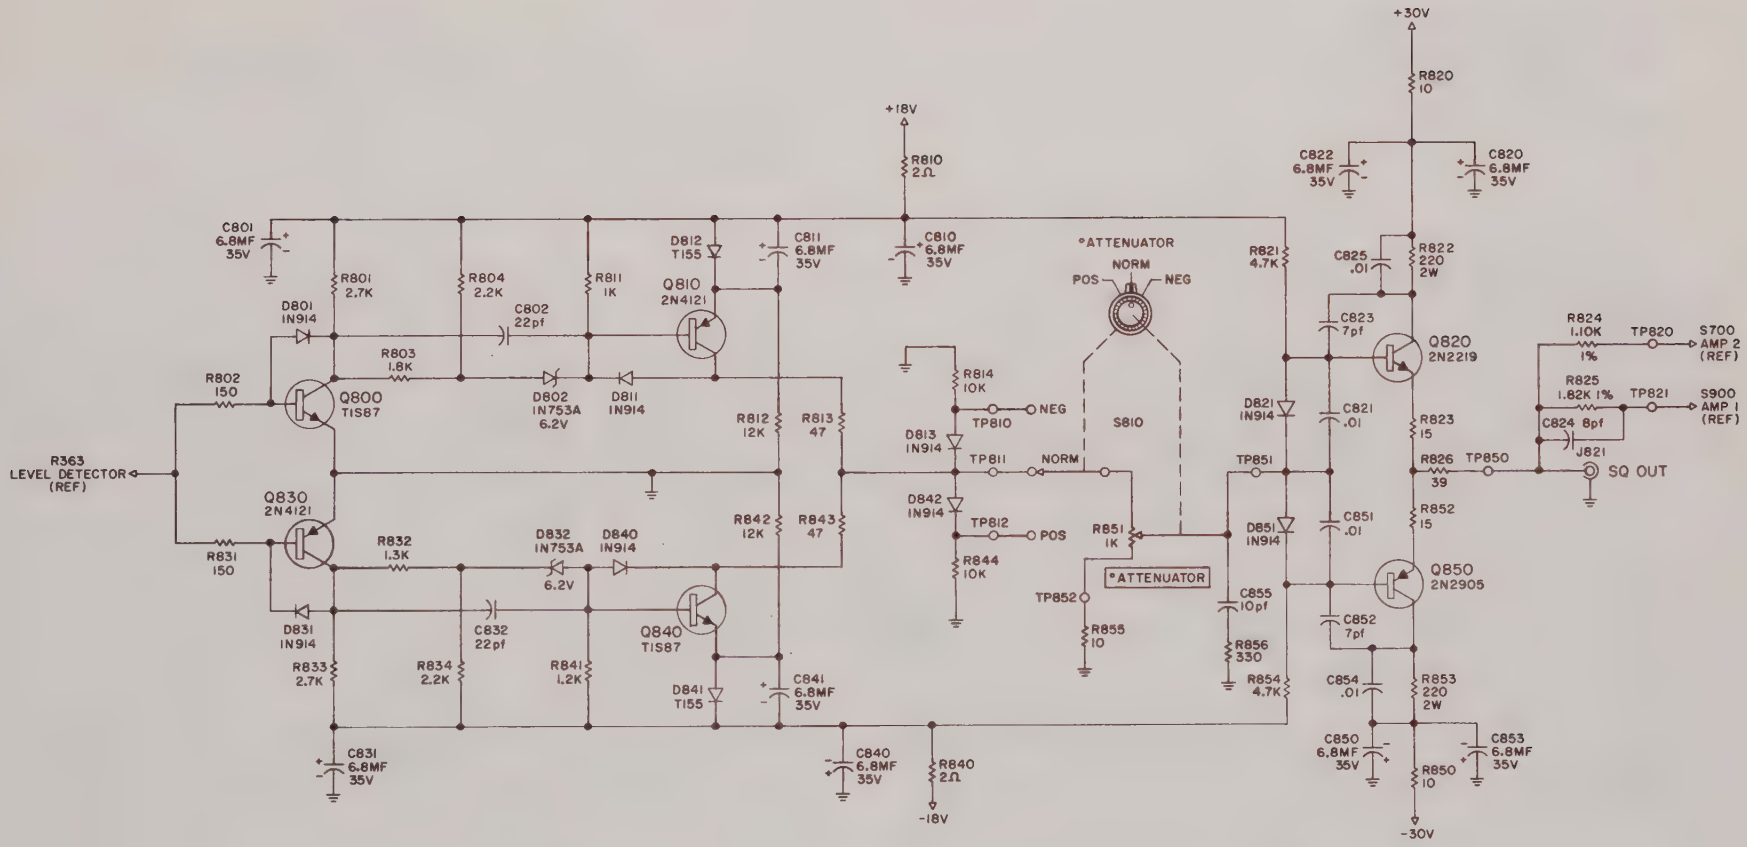

FIG. 7.10.0
SCHEMATIC DIAGRAM - SQUARE AMPLIFIER

5. TIS87 PIN CONFIGURATION (BOTTOM VIEW)
4. ALL CAPACITORS MARKED IN MF
3. ALL 1% RESISTORS 1/4W
2. ALL RESISTORS 1/2W 5%
1. ALL RESISTORS MARKED IN OHMS
NOTES: UNLESS OTHERWISE INDICATED

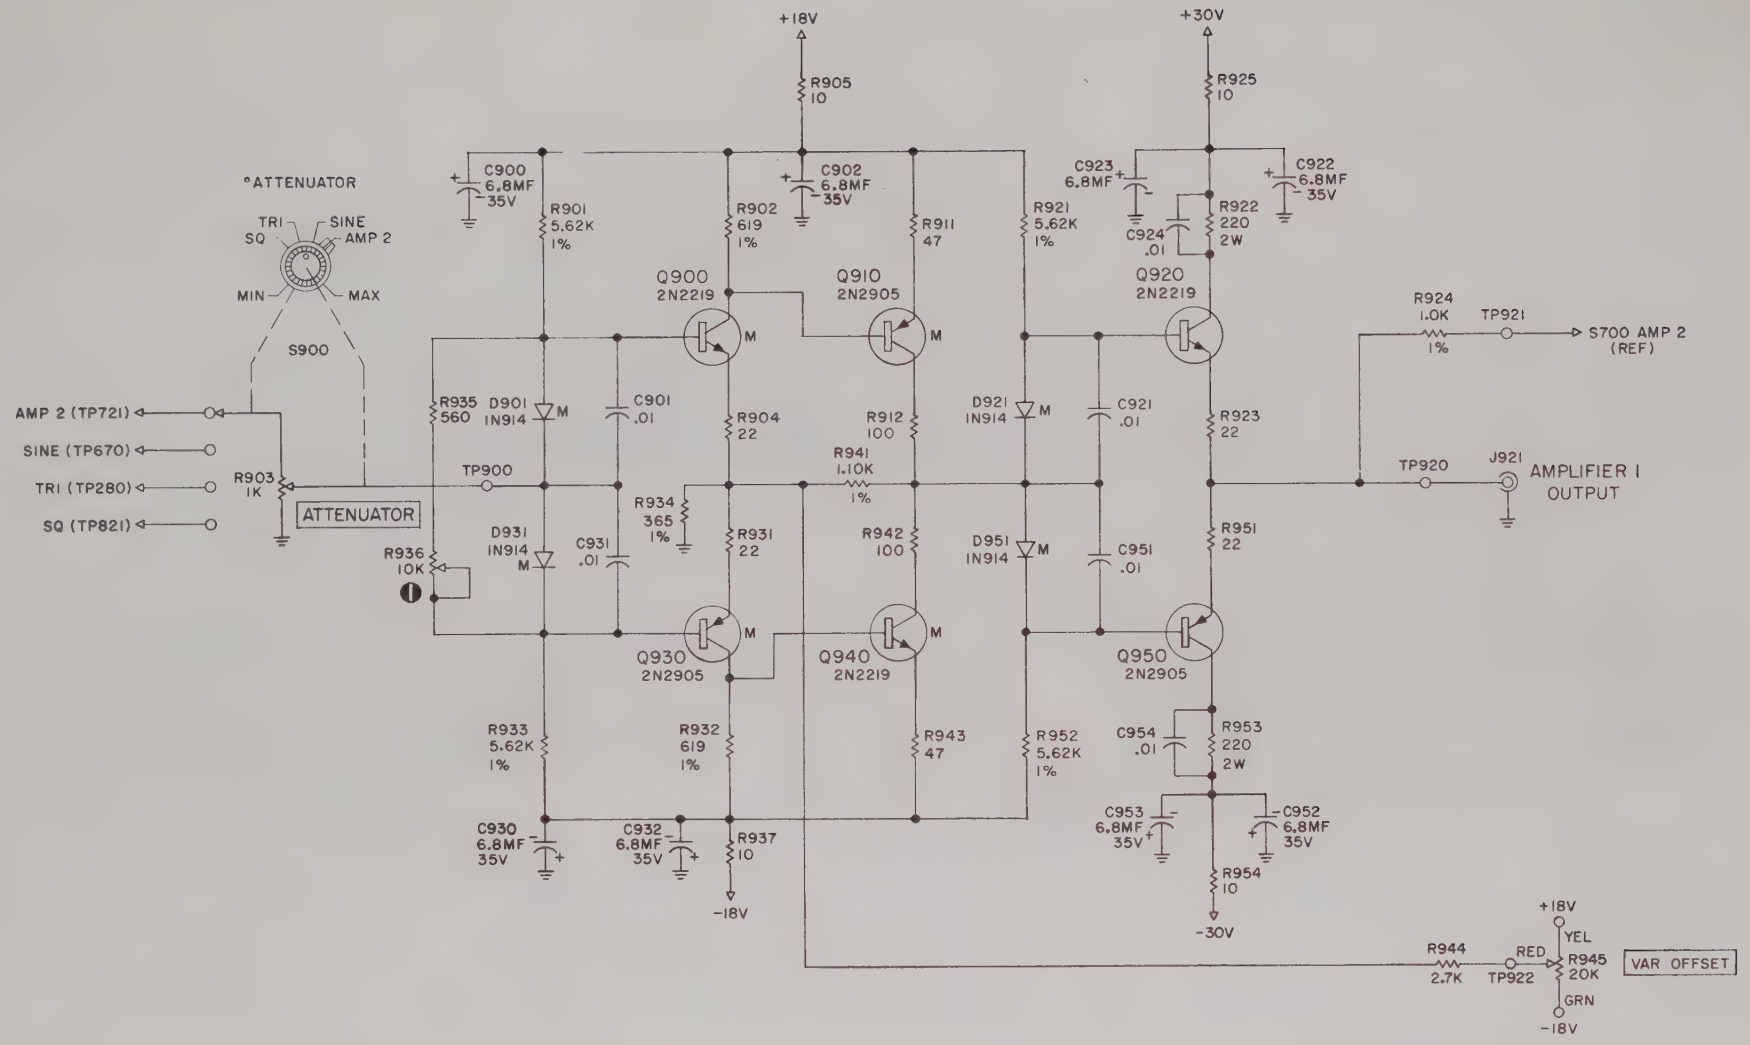

FIG. 7.11.0
SCHEMATIC DIAGRAM — AMP I

5. M DENOTES MATCHED COMPONENTS
4. ALL 1% RESISTORS 1/4W
3. ALL RESISTORS 1/2W 5%
2. ALL CAPACITORS MARKED IN MF
1. ALL RESISTORS MARKED IN OHMS
NOTES: UNLESS OTHERWISE INDICATED

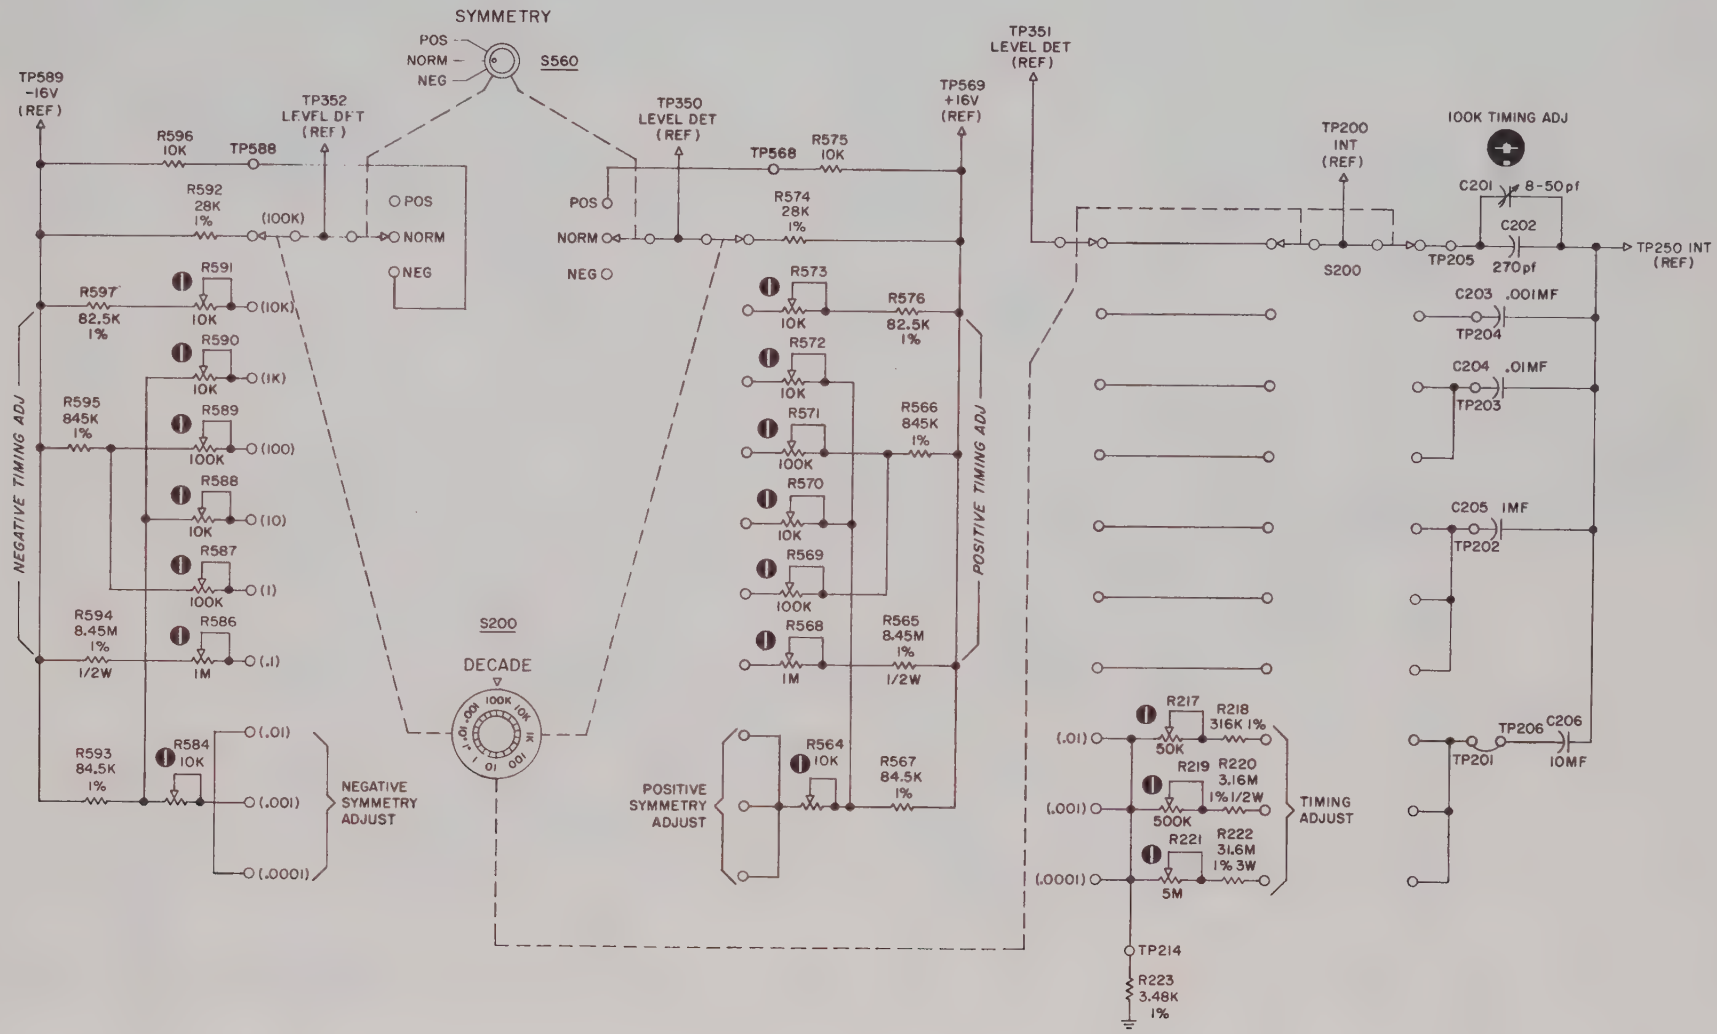

FIG. 7.12.0
SCHEMATIC DIAGRAM – TIMING & FEEDBACK CIRCUITRY

4. ALL CAPACITORS MARKED IN MF
3. ALL 1% RESISTORS 1/4W
2. ALL RESISTORS 1/2W 5%
1. ALL RESISTORS MARKED IN OHMS

NOTES: UNLESS OTHERWISE INDICATED

SECTION 8 REPRESENTATIVES DISTRIBUTORS

EASTERN U.S.

Martin P. Andrews, Inc. 319 Mott Road, Fayetteville, N.Y. 13066 (315)637-6405	New York State (not NYC)
Beacon Electronic Associates, Inc. P.O. Box 1278, Maitland, Fla. 32751 (305)647-3498	Florida
P.O. Box 10212, Ft. Lauderdale, Fla. 33305 564-4298	Florida
2285 Peachtree Rd N.E., Atlanta,Ga. (404)351-3654	Ala,Ga,Miss,Tenn
Instrument Representatives, Inc. 1046 Mass.Ave., Arlington,Mass 02174 (617)646-1034	Mass,Vt,Me,N.H.
P.O. Box 165, Glastonbury,Ct. 06033 (203) 633-0777	Connecticut,R.I.
Letronix 251 W. DeKalb Pike, King of Prussia,Pa. 19406 (215) 265-1020	E. Pennsylvania S. New Jersey
Measurement Technology, Inc. 295 Northern Blvd., Great Neck, N.Y. 11021 (516) 482-3500	NYC, L.I. N. New Jersey
Scientific Marketing Associates 8817 Hunting Lane, Laurel, Maryland 20810 (301) 776-5130	Delaware, Md., Wash.D.C. Loudon-Fairfax counties Va.
Technical Marketing Associates 5100 N. Glen Drive, Raleigh, N.C. (919)787-7244	N&S Carolinas Virginia
Technitron Instruments, Inc. 23203 Lorain Rd., N. Olmsted, Ohio 44070 (216) 734-0960	Ohio
1250 West Dorothy Lane, Dayton, Ohio 45409 (513) 298-9964	Ohio
13657 Grand River Avenue, Detroit, Michigan 48227 (313) 838-7324	Michigan
114 Spring Grove Road, Pittsburgh, Pa. 15235 (412) 371-1231	W. Pennsylvania W. Virginia

CENTRAL U.S.

Bard Associates, Inc. La Grange Industrial Park, La Grange, Ill. 60526 (312) 354-0660	Illinois, Iowa Wisconsin, Kansas, Missouri, Nebraska, N & S Dakotas
4000 Meadows Drive, Indianapolis, Ind. 46205 (317) 547-3113	Indiana
4640 West 77th St., Minneapolis, Minnesota (612) 922-8233	Minnesota

Southwest Electronic Industries, Inc. 621 Meadows Bldg., Dallas, Texas 75206 (214) 363-1671	N. Texas N. La.
1405 S. Post Oak Rd., Houston, Texas 77027 (713) 621-3760	S. Texas, S. La.
2015-C S. Lakewood, Tulsa, Oklahoma 74112 835-2481	Oklahoma, Arkansas

WESTERN U.S.

D. E. Bond Associates 2149 S. Clermont St., Denver, Colorado 80222 (303) 746-1234	Colorado, Utah Idaho, Montana Wyoming
P.O. Box 11331, Albuquerque, N. Mexico 87112 (505) 247-3442	New Mexico El Paso county, Tex.
The Abco Company 555 W. Ninth, San Pedro, California 90731 (213) 833-8333	S. California
The Mauldin Company 441 California Avenue, Palo Alto, California 94306 (415) 326-5291	N. California
Measurement Consultants P.O. Box 11099, Phoenix, Arizona 85017 (602) 264-1279	Arizona, Clark county, Nevada
Exact Electronics, Inc. P.O. Box 160, Hillsboro, Oregon 97123 (503) 648-6661	Oregon, Washington

CANADA

Atlas Instrument Corporation, Ltd.
50 Wingold Avenue, Toronto 19, Ontario
(416) 781-6174

3333 Cavendish Blvd., Montreal, Quebec
(514) 489-8495

342½ Elgin St., Ottawa, Ontario
(613) 233-9471

EXACT ELECTRONICS, INC. OVERSEAS DISTRIBUTORS

COASIN, S.A., Virrey del Pino 4071, Buenos Aires Argentina

Electronic Associates, Pty., Ltd., 26 Albany St. St. Leonards, N.S.W. Australia

Inglomark Markowitsch & Co., Mariahilfer Strasse 133 Wien XV Austria

Regulation-Mesure sprl, 22 Rue Saint-Hubert, Bruxelles Belgium

Ambriex, SA., Avenue Grace Aranha, 226-6°, Rio de Janeiro, Brazil

Pentz & Cia, Ltda., Casilla 2839, Santiago Chile

Oltronix A/S, Maltegaardsvej 18a, DK-2820, Gentofte Denmark

Into O/Y, P.O. Box 10153, Helsinki Finland

S.E.R.I.E.L. (SA), 48, Avenue Victor Hugo, Clamart France

Marios Dalleggio Representations, 2 Alopekis St., Athens, Greece

Industrial Agencies, 11 Mahatma Gandhi Road, Bombay 1, India

Eastronics, Ltd., 75 Haifa Road, Tel Aviv Israel

Silverstar, Ltd., Via Dei Gracchi 20, 20146 Milano Italy

Midoriya Electric Co., Ltd., 3, 2-Chome, Kyobashi Chui Tokyo, Japan

Fredin, SA, P.O. Box 53-958, Mexico 17 D.F. Mexico

C. N. Rood, n.v., P.O. Box 4542, Rijswijk (Z.H.) The Netherlands

W & K McLean Ltd., P.O. Box 3097, Auckland New Zealand

Morgenstierne & Co., P.B. 6688 Rodelokka, Oslo 5 Norway

Pakland Corporation, Central Commercial Area, Karachi 29, Pakistan

Equipamentos de Laboratoria Lda, Rue Pedro Nunes 47, Lisbon, Portugal

Telco, S.L., Gravina 27, Madrid Spain

Scandia Metric AB, S.Langgatan 22, Fack Solna 3, Stockholm, Sweden

Omni Ray AG, Dufourstrasse 56, Zurich 8008 Switzerland

Rohde and Schwarz Vertriebs - GmbH, Hohe Strasse 160-168 Koeln, West Germany

Abdul Masih E. Jwaideh, 85, Saadun St., Bagdad Iraq

SECTION 9 ADDENDA